

SAT-HD100 RM-Y808

SERVICE MANUAL

U.S. Model



SAT-HD100



RM-Y808

SPECIFICATIONS

Inputs and Outputs:

Video Out: S-Video 4-pin mini DIN (2)
Video Out: Composite Video RCA (2)
Video Out: Component Video
 Y: RCA (1)
 PB: RCA (1)
 PR: RCA (1)
Video Out: VGA D-sub 15 pin (1)
Audio Line Out: Stereo L/R RCA (2 pairs)
Satellite In: F-Connector Female (1)
VHF/UHF In: F-Connector Female (1)
VHF/UHF (DTV) In: F-Connector Female (1)
VHF/UHF (SAT) Out: F-Connector Female (1)
Digital Audio Out: Optical (1)
Telephone: RJ-11 Female, 2 wire (1)
VCR Control Out: 3.5 mm Mini Jack Sockets (1)
RF Remote In: RCA (1)
Data Port: D-sub 9 pin (1)

General:

Power Requirements: 120 V AC, 60 Hz
Power Consumption: 50 W (max.)
Operating Temperature: 5°C to 35°C (41°F to 95°F)
Operating Humidity: 25% to 80%
Dimensions: Approx. 430 x 73 x 297 mm (w/h/d)
 Approx. 17" x 3" x 11 3/4" (w/h/d)
 (including projecting parts and controls)
Mass: Approx. 3.2 kg (7.0 lbs.)

Supplied Accessories:

Remote Control (1)
Size AA Batteries (2)
AC Power Cord (1)
Audio/Video Cable (1)
S-Video Cable (1)
Telephone Line Cord (1)
Access Card (1)
Y/Pb/Pr Cable (1)
Coaxial (RF) Cable (1)
VCR Controller (1)
RF Antenna (1)

Optional Sony-Brand Digital Satellite Receiver Accessories:

Satellite Dish Antenna: SAN-18D3
 SAN-24MD1
Local TV Antenna: ANJ-AA1
Installation Kit: ANJ-DS2
Amplifier: EAC-DA1
Diplexer: EAC-DD1
Voltage Switch: EAC-DV2
RF Universal Remote Commander™
Remote Control: RM-Y802



DIGITAL SATELLITE RECEIVER
SONY®


TABLE OF CONTENTS

SECTION TITLE	PAGE
Warnings and Cautions.....	4
Safety Check-out	5
1. Disassembly	
1-1. Top Cover Removal	6
1-2. Cable Dressing & Top Cover Re-assembly	6
1-3. Front Panel Removal	7
1-4. A, G, & TU Board Removal.....	8
2. Diagrams	
2-1. Circuit Board Location	9
2-2. Printed Wiring Boards and Schematic Diagrams.....	9
2-3. Diagrams	
Block Diagram	10
A Board	13
FD Board	23
G Board	23
HA Board	23
HD Board	23
HP Board	23
TU Board	24
SC Board	25
2-4. Semiconductors	26
3. Exploded Views	
3-1. Front	27
3-2. Rear	28
3-3. SAN-18D3.....	29
3-4. SAN-24MD1.....	29
4. Electrical Parts List	30

WARNINGS AND CAUTIONS




SAFETY-RELATED COMPONENT WARNING!!

Components identified by shading and  mark on the schematic diagrams, exploded views, and in the parts list are critical for safe operation. Replace these components with sony parts whose part numbers appear as shown in this manual or in supplements published by sony. Circuit adjustments that are critical for safe operation are identified in this manual. Follow these procedures whenever critical components are replaced or improper operation is suspected.



ATTENTION AUX COMPOSANTS RELATIFS A LA SECURITE!!

Les composants identifiés par une trame et par une marque  sur les schémas de principe, les vues explosées et les listes de pièces sont d'une importance critique pour la sécurité du fonctionnement. Ne les remplacer que par des composants sony dont le numéro de pièce est indiqué dans le présent manuel ou dans des suppléments publiés par sony. Les réglages de circuit dont l'importance est critique pour la sécurité du fonctionnement sont identifiés dans le présent manuel. Suivre ces procédures lors de chaque remplacement de composants critiques, ou lorsqu'un mauvais fonctionnement suspecte.

SAFETY CHECK-OUT

After correcting the original service problem, perform the following safety checks before releasing the set to the customer:

1. Check the area of your repair for unsoldered or poorly soldered connections. Check the entire board surface for solder splashes and bridges.
2. Check the interboard wiring to ensure that no wires are "pinched" or touching high-wattage resistors.
3. Check that all control knobs, shields, covers, ground straps, and mounting hardware have been replaced. Be absolutely certain that you have replaced all the insulators.
4. Look for unauthorized replacement parts, particularly transistors, that were installed during a previous repair. Point them out to the customer and recommend their replacement.
5. Look for parts which, though functioning, show obvious signs of deterioration. Point them out to the customer and recommend their replacement.
6. Check the line cords for cracks and abrasion. Recommend the replacement of any such line cord to the customer.
7. Check the B+ and HV to see if they are specified values. Make sure your instruments are accurate; be suspicious of your HV meter if sets always have low HV.
8. Check the antenna terminals, metal trim, "metallized" knobs, screws, and all other exposed metal parts for AC leakage. Check leakage as described below.

Leakage Test

The AC leakage from any exposed metal part to earth ground and from all exposed metal parts to any exposed metal part having a return to chassis, must not exceed 0.5 mA (500 microamperes). Leakage current can be measured by any one of three methods.

1. A commercial leakage tester, such as the Simpson 229 or RCA WT-540A. Follow the manufacturers' instructions to use these instructions.
2. A battery-operated AC milliammeter. The Data Precision 245 digital multimeter is suitable for this job.
3. Measuring the voltage drop across a resistor by means of a VOM or battery-operated AC voltmeter. The "limit" indication is 0.75 V, so analog meters must have an accurate low voltage scale. The Simpson's 250 and Sanwa SH-63TRD are examples of passive VOMs that are suitable. Nearly all battery-operated digital multimeters that have a 2 VAC range are suitable (see Figure A).

How to Find a Good Earth Ground

A cold-water pipe is a guaranteed earth ground; the cover-plate retaining screw on most AC outlet boxes is also at earth ground. If the retaining screw is to be used as your earth ground, verify that it is at ground by measuring the resistance between it and a cold-water pipe with an ohmmeter. The reading should be zero ohms.

If a cold-water pipe is not accessible, connect a 60- to 100-watt trouble- light (not a neon lamp) between the hot side of the receptacle and the retaining screw. Try both slots, if necessary, to locate the hot side on the line; the lamp should light at normal brilliance if the screw is at ground potential (see Figure B).

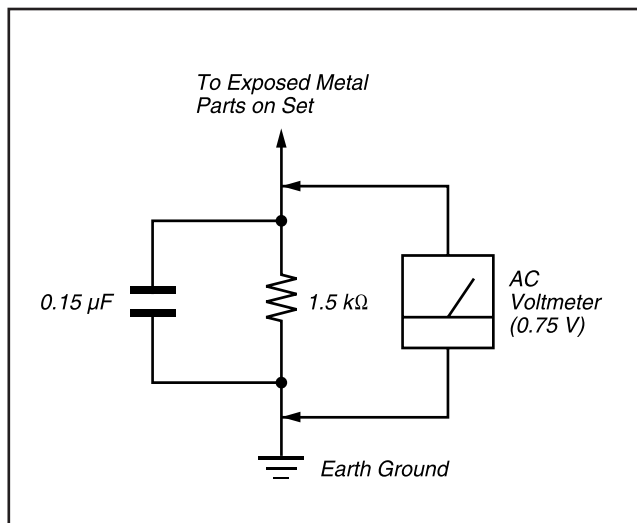


Figure A. Using an AC voltmeter to check AC leakage.


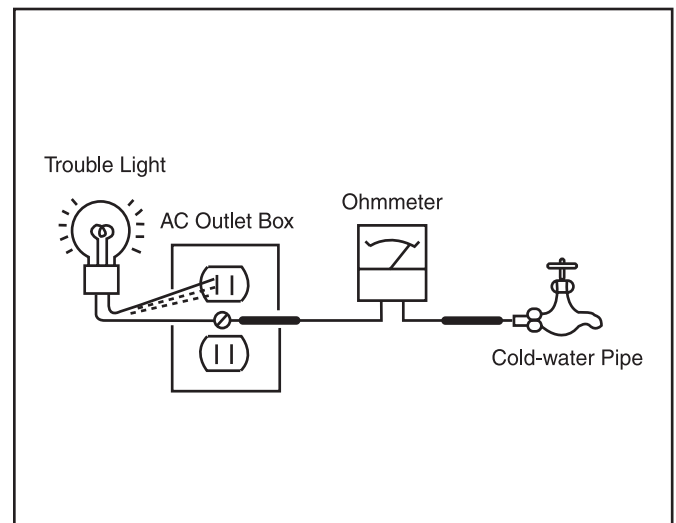


Figure B. Checking for earth ground.

SECTION 1: DISASSEMBLY


1-1. TOP COVER REMOVAL

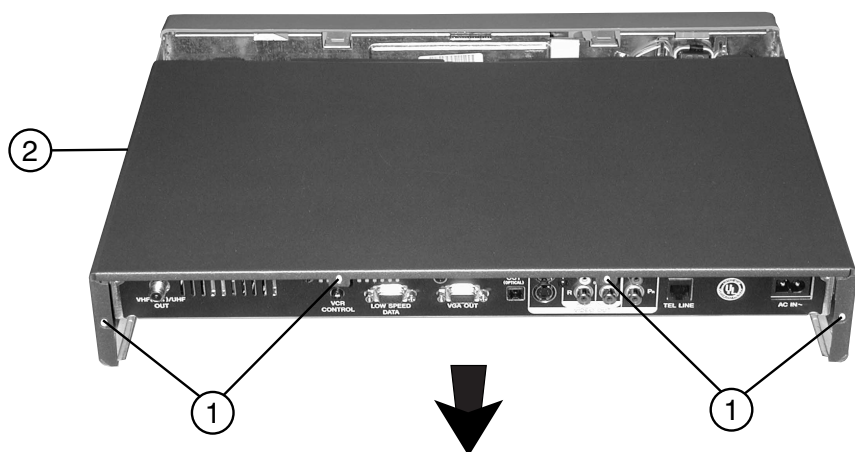


- ① Remove 4 screws (+ BVTP 3 x 8) from rear of cover.
- ② Gently pull cover towards back of unit to release and remove.

1-2. CABLE DRESSING & TOP COVER RE-ASSEMBLY


- ① When reattaching the top cover, be sure not to break or damage the grounding tape connection shown.
- ② When replacing the top cover, be sure that the FD board assembly is properly seated in its connector.
- ③ Insert the cables as shown into the cable tie prior to reattaching the top cover.
- ④ When replacing the top cover, be sure that the cable connector shown is not pinched.
- ⑤ Route the excess wire connected to the RF Block around the pins as shown to avoid pinching or slicing the wires when the cover is replaced. Excess wire is secured with copper tape.
- ⑥ Route the grounding wire between the posts as shown to avoid pinching or slicing.
- ⑦ Insert the cables as shown into the cable tie prior to reattaching the top cover.
- ⑧ Route the two wire assemblies around each other to eliminate excess slack as shown.

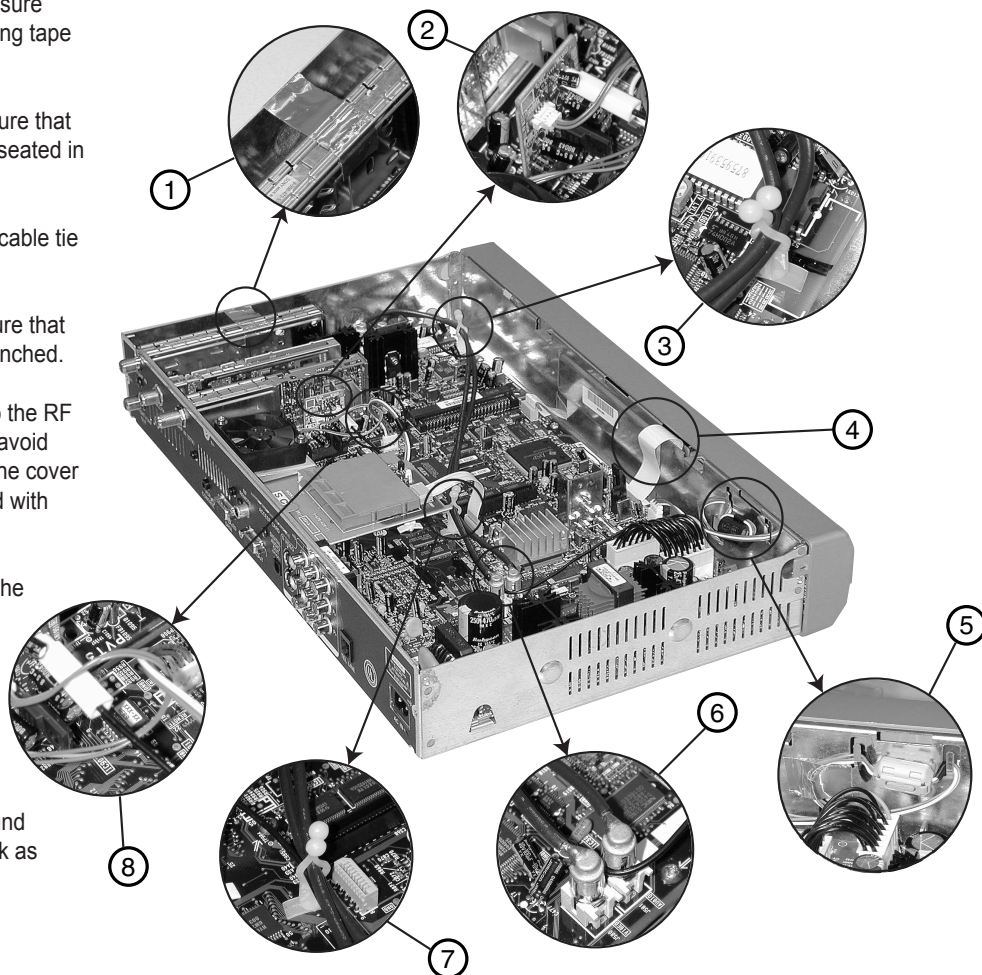


1-3. FRONT PANEL REMOVAL

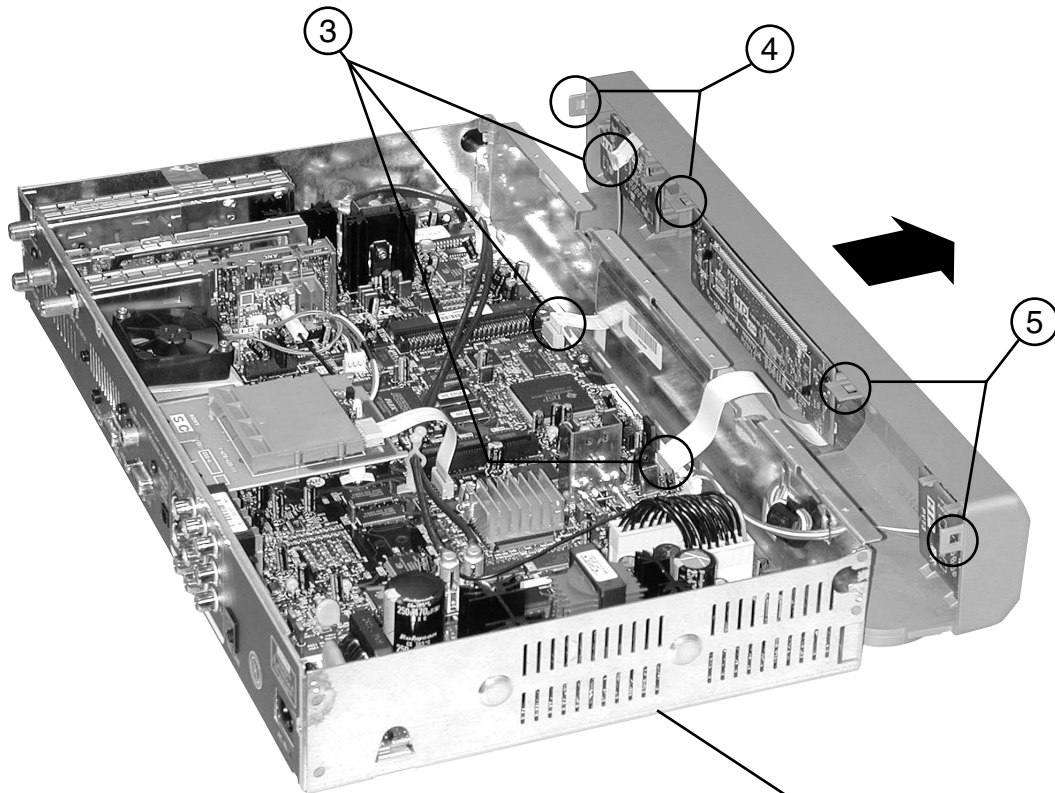

- ① Remove 2 screws (+BVTP 3 x 8 Type 2 IT-3) mounting the front panel to the bottom of the chassis.
- ② Gently pry the tabs from the bottom of the unit to release.
- ③ Remove the ribbon cables from the A Board.
- ④ From the left of the unit, gently pry the tabs from the side and top to release them.
- ⑤ From the right of the unit, gently pry the tabs from the side and top to release them. Gently pull the front panel forward to remove.

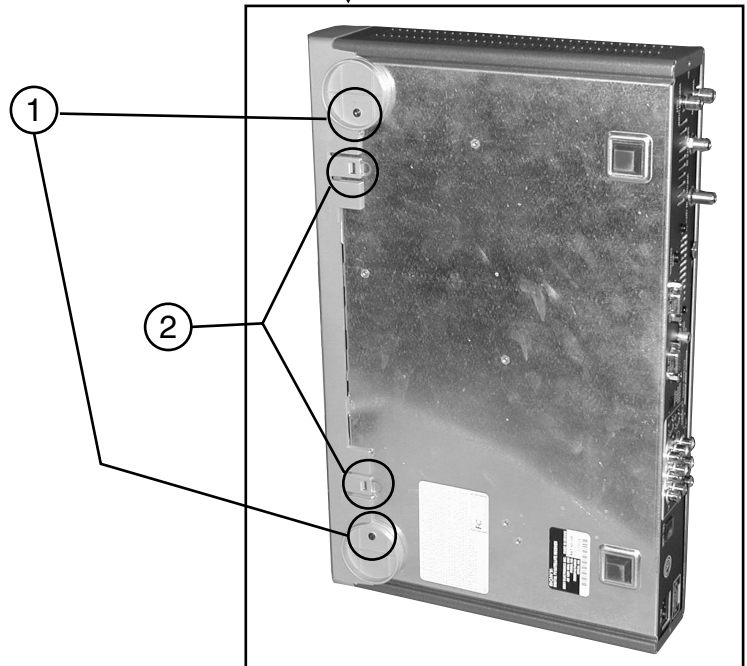

1-4. A, G & TU BOARD REMOVAL

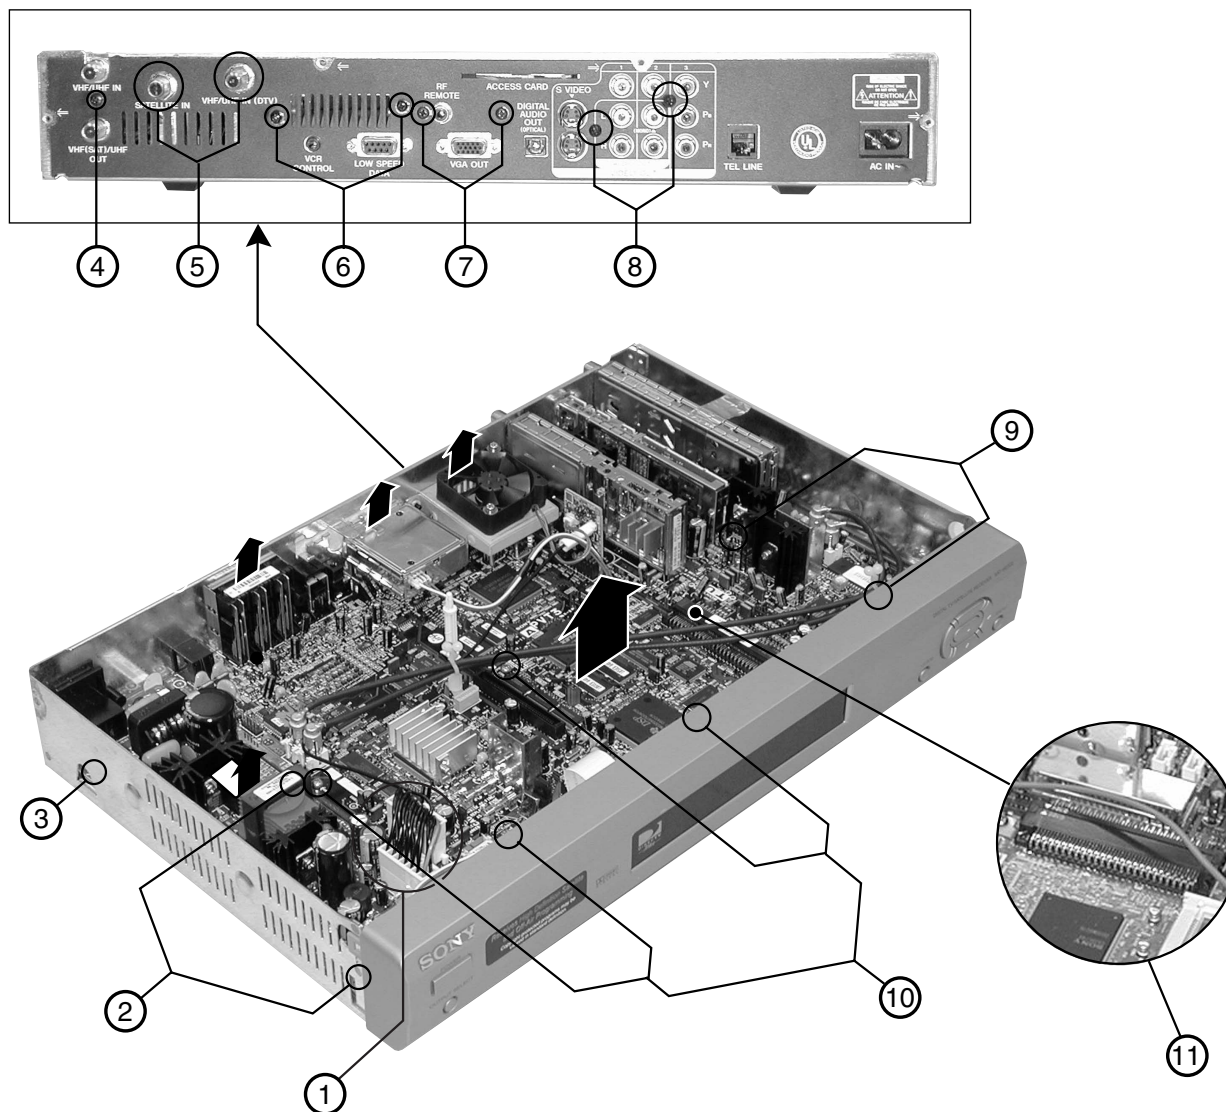


Note:

For board removal or replacement, detach all attached cables, and leave them attached to an existing board.










- ① Detach the connector between the A and G Boards.
- ② Remove (2) screws (+BVTT 3 x 12) from G Board.
- ③ Remove (1) screw (+BVTP 3 x 8) from G Board. Gently lift the board forward and up to remove.
- ④ Remove (1) screw (M3 x 6) from the back panel holding in the tuning unit.
- ⑤ Remove (2) hex nuts from the cable jacks.
- ⑥ Remove (2) screws (+BVTP 3 x 8) from the back of the unit, mounting the fan assembly. Lift the assembly up and out to remove.
- ⑦ Remove (2) screws (M3 x 6) from the back of the unit, mounting the RF Remote Assembly. Lift the assembly up and out to remove.
- ⑧ Remove (2) screws (+BVTP 3 x 8) from the back of the unit at the RCA jacks.
- ⑨ Remove (2) screws (+BVTT 3 x 12) mounting the TU Board to chassis.
- ⑩ Remove (4) screws (+BVTT 3 x 12) mounting A Board to Chassis. Gently lift the A and TU Boards simultaneously forward and up to remove. Support the weight of both boards at the connector.
- ⑪ Once removed from the chassis, disconnect the connector shown to separate the A and TU Boards.

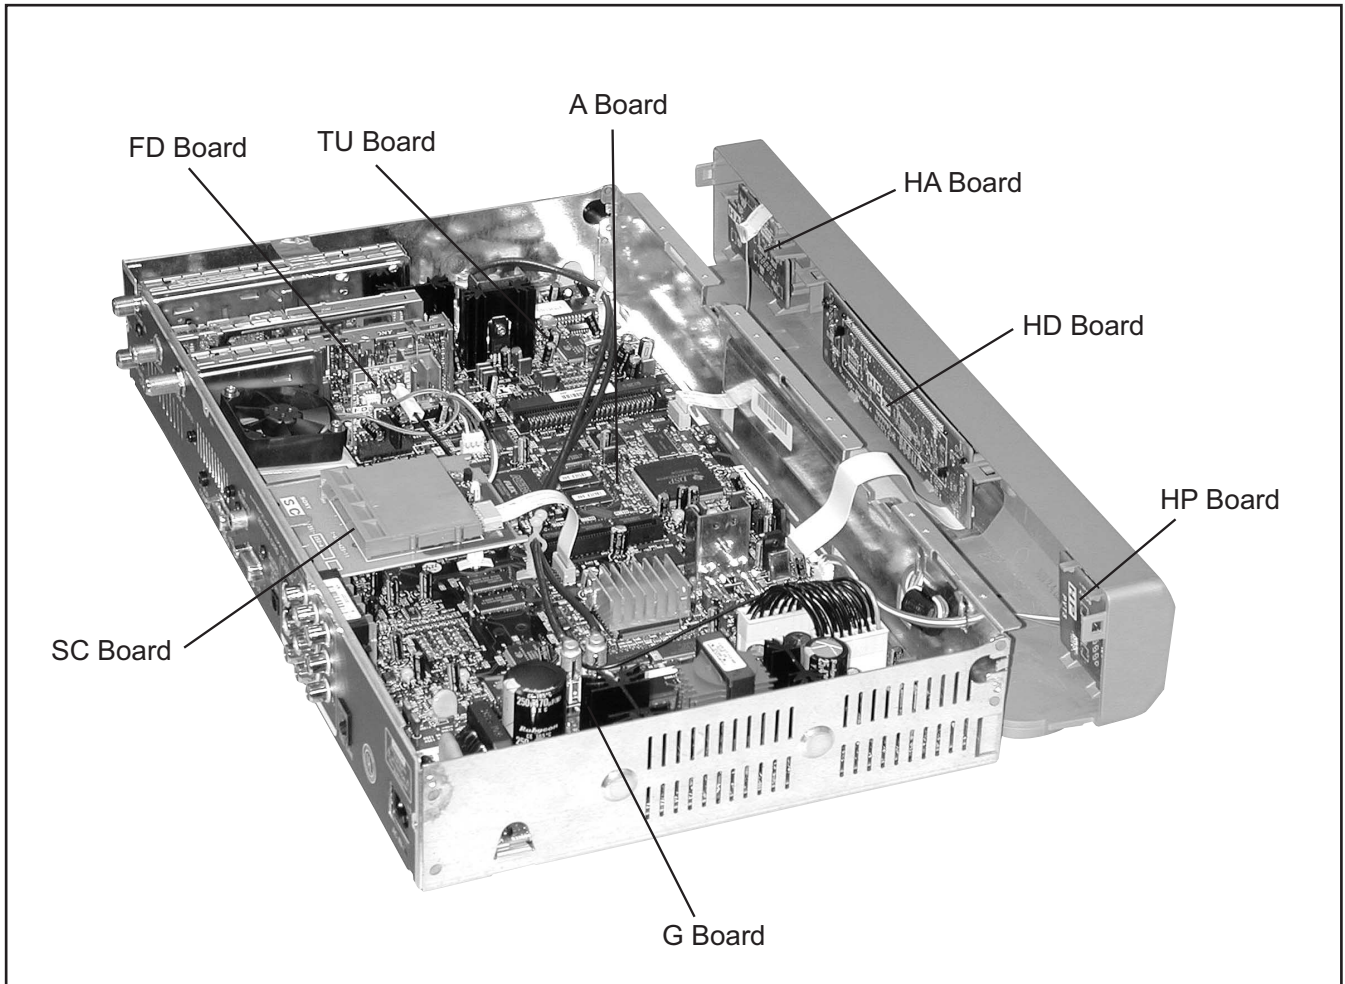SECTION 2: DIAGRAMS


2-1. CIRCUIT BOARDS LOCATION




2-2. PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS INFORMATION



- All capacitors are in μF unless otherwise noted.
pF: mmF 50 WV or less are not indicated except for electrolytic and tantalums.
- All electrolytics are 50V unless otherwise specified.
- Indication of resistance, which does not have one for rating electrical power, is as follows:
Pitch: 5mm
Rating electrical power 1/4W (CHIP: 1/10W)
- All resistors are in ohms.
KW = 1000W MW = 1000KW
-  : nonflammable resistor
-  : fusible resistor
-  : internal component
-  : panel designation and adjustment for repair
-  : earth-ground
-  : earth-chassis
- All variable and adjustable resistors have characteristic curve B, unless otherwise noted.
- All voltages are in Volts
- Readings are taken with a 10M ohm digital multimeter.
- Readings are taken with a color-bar signal input.
- Voltage variations may be noted due to normal production tolerance.
- * : cannot be measured
-  : B + Line
-  : B - Line
-  : Signal path

2-3. DIAGRAMS BLOCK DIAGRAM (1 OF 3)

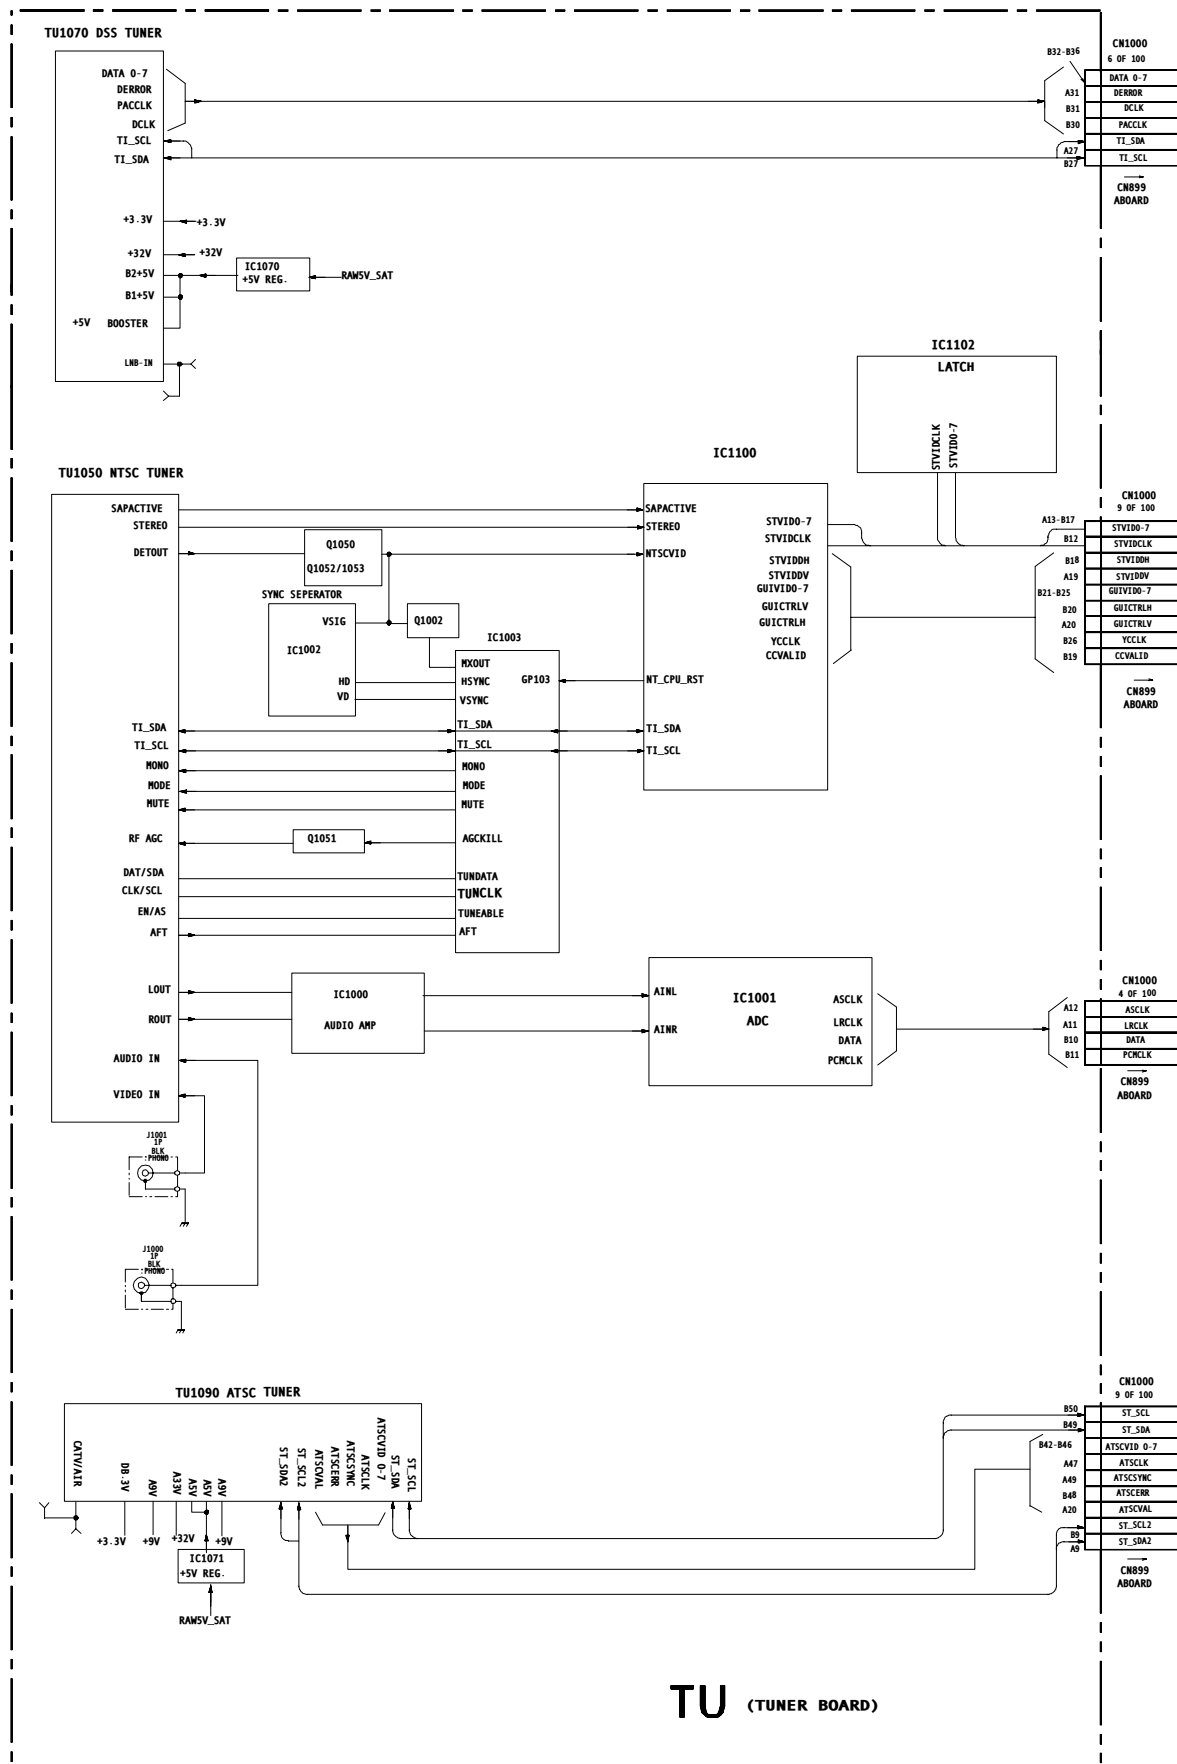


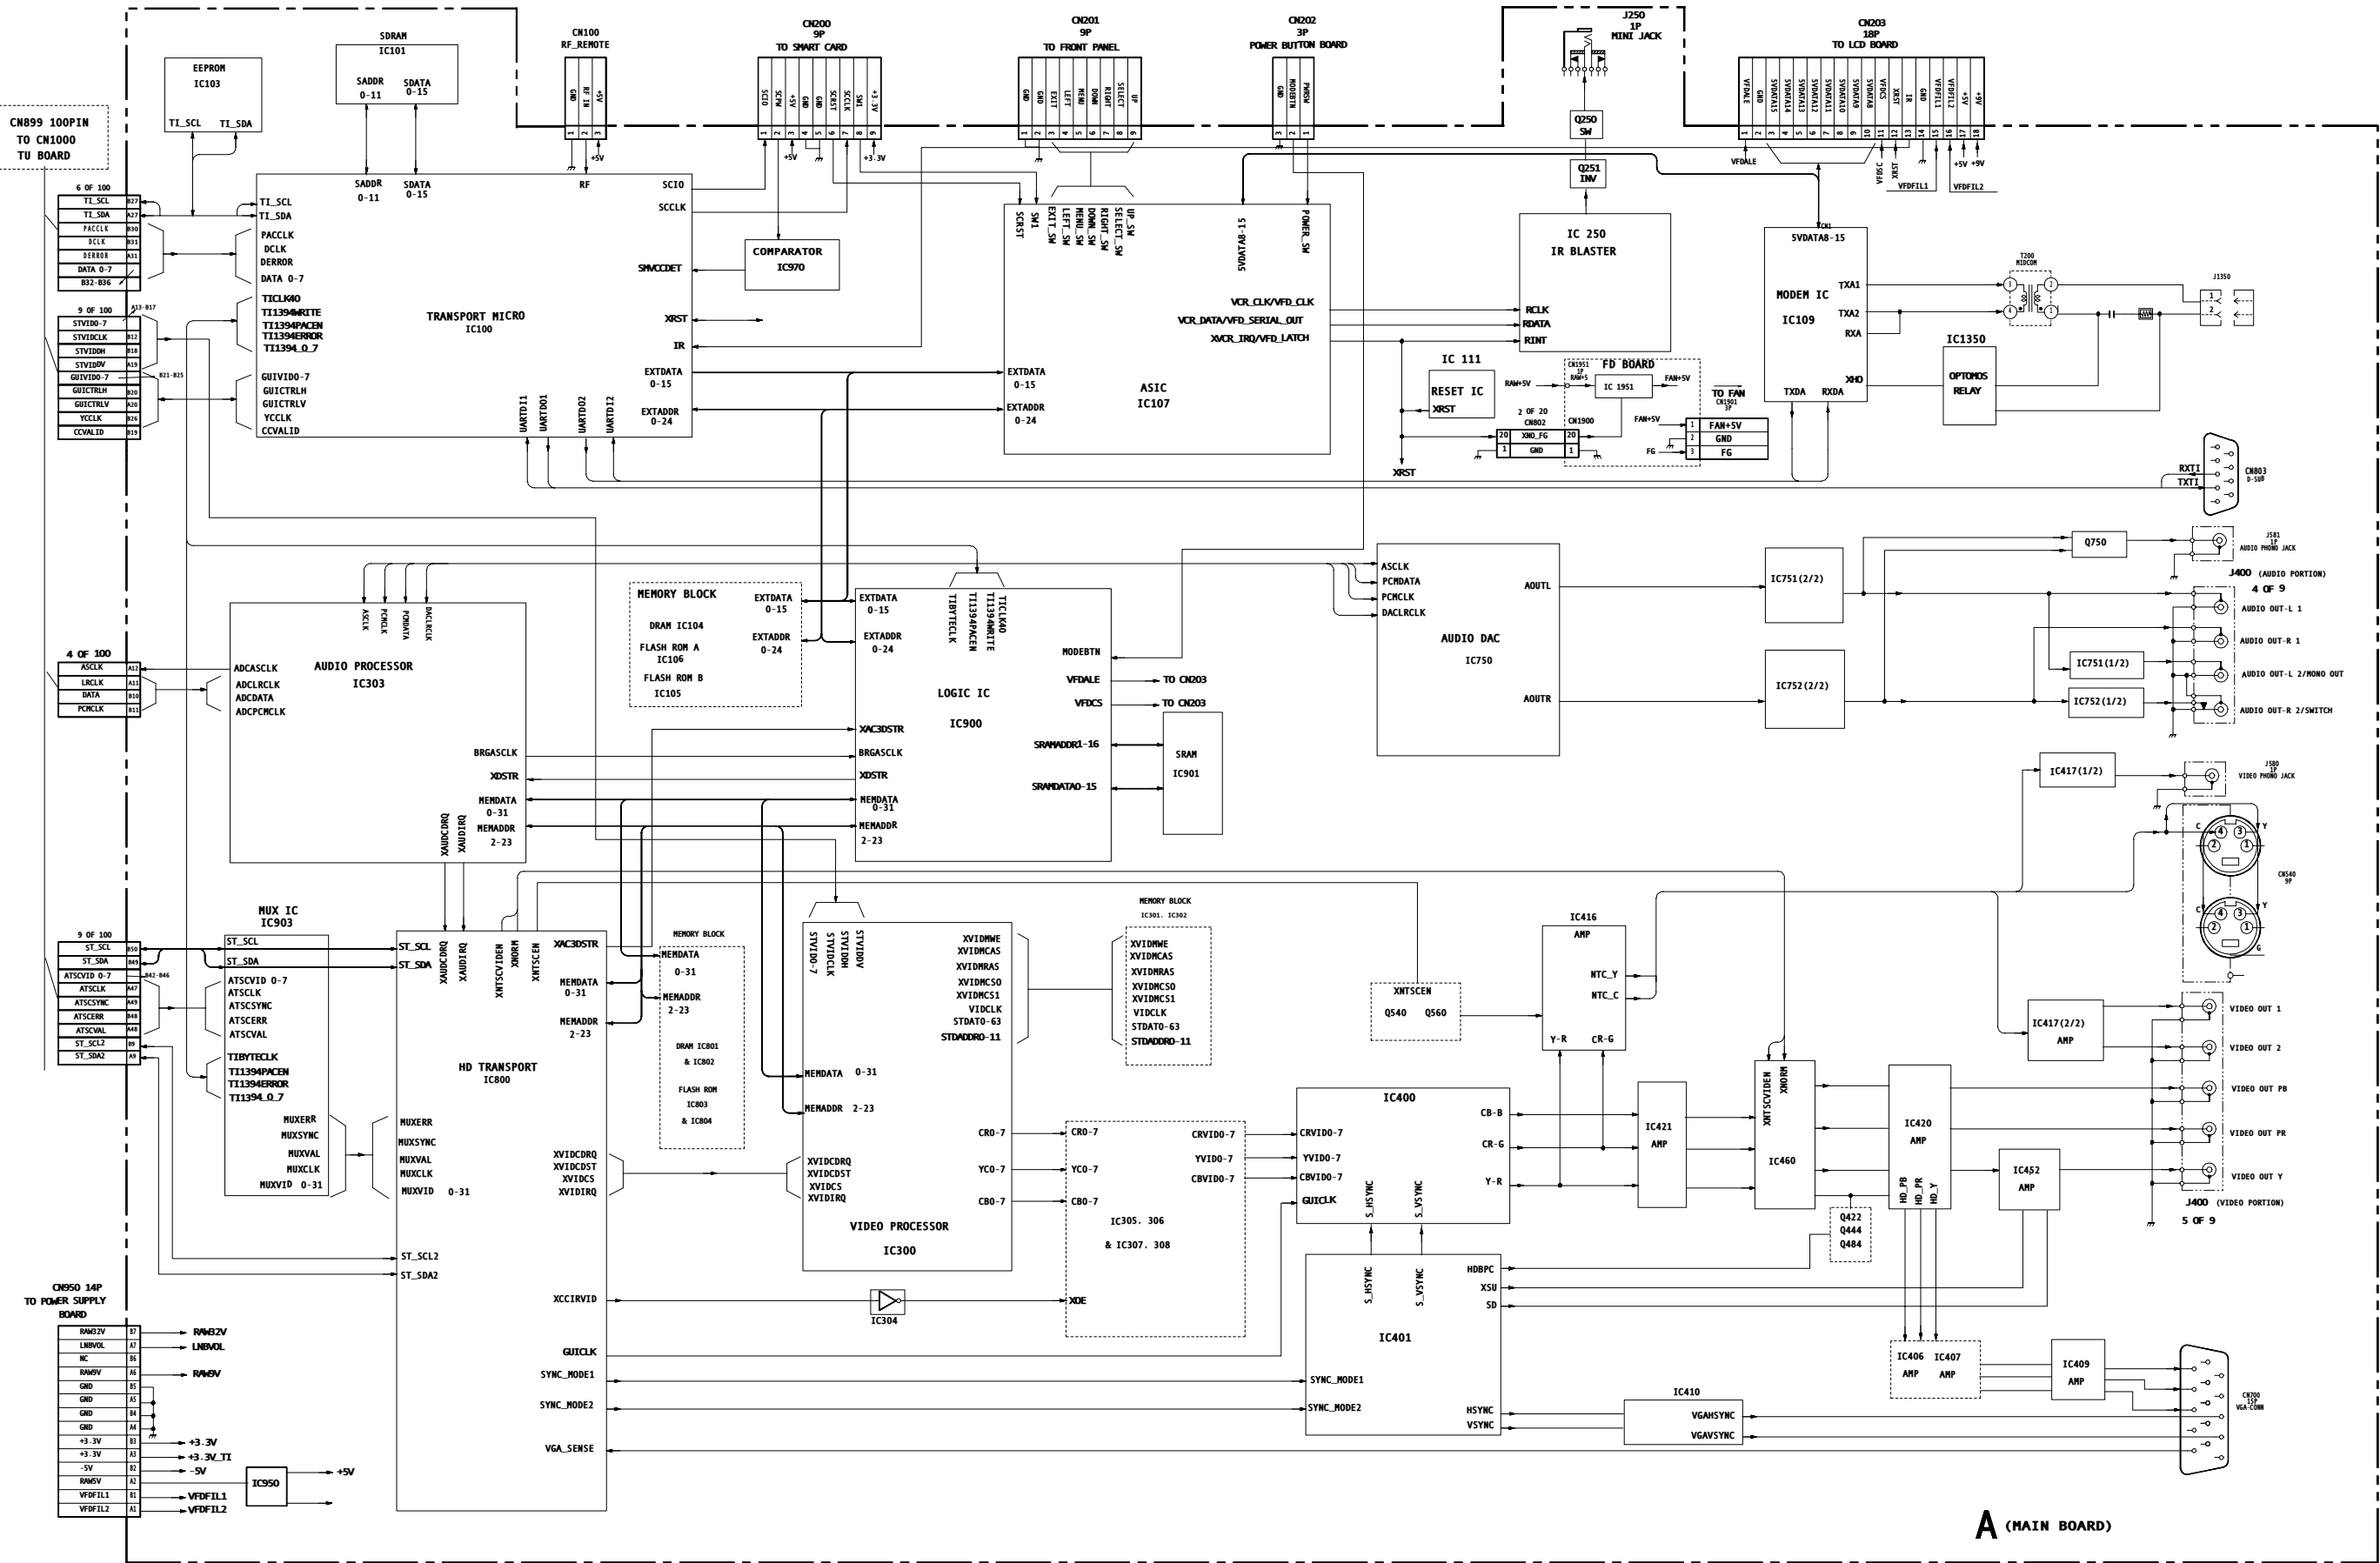

BLOCK DIAGRAM (3 OF 3)

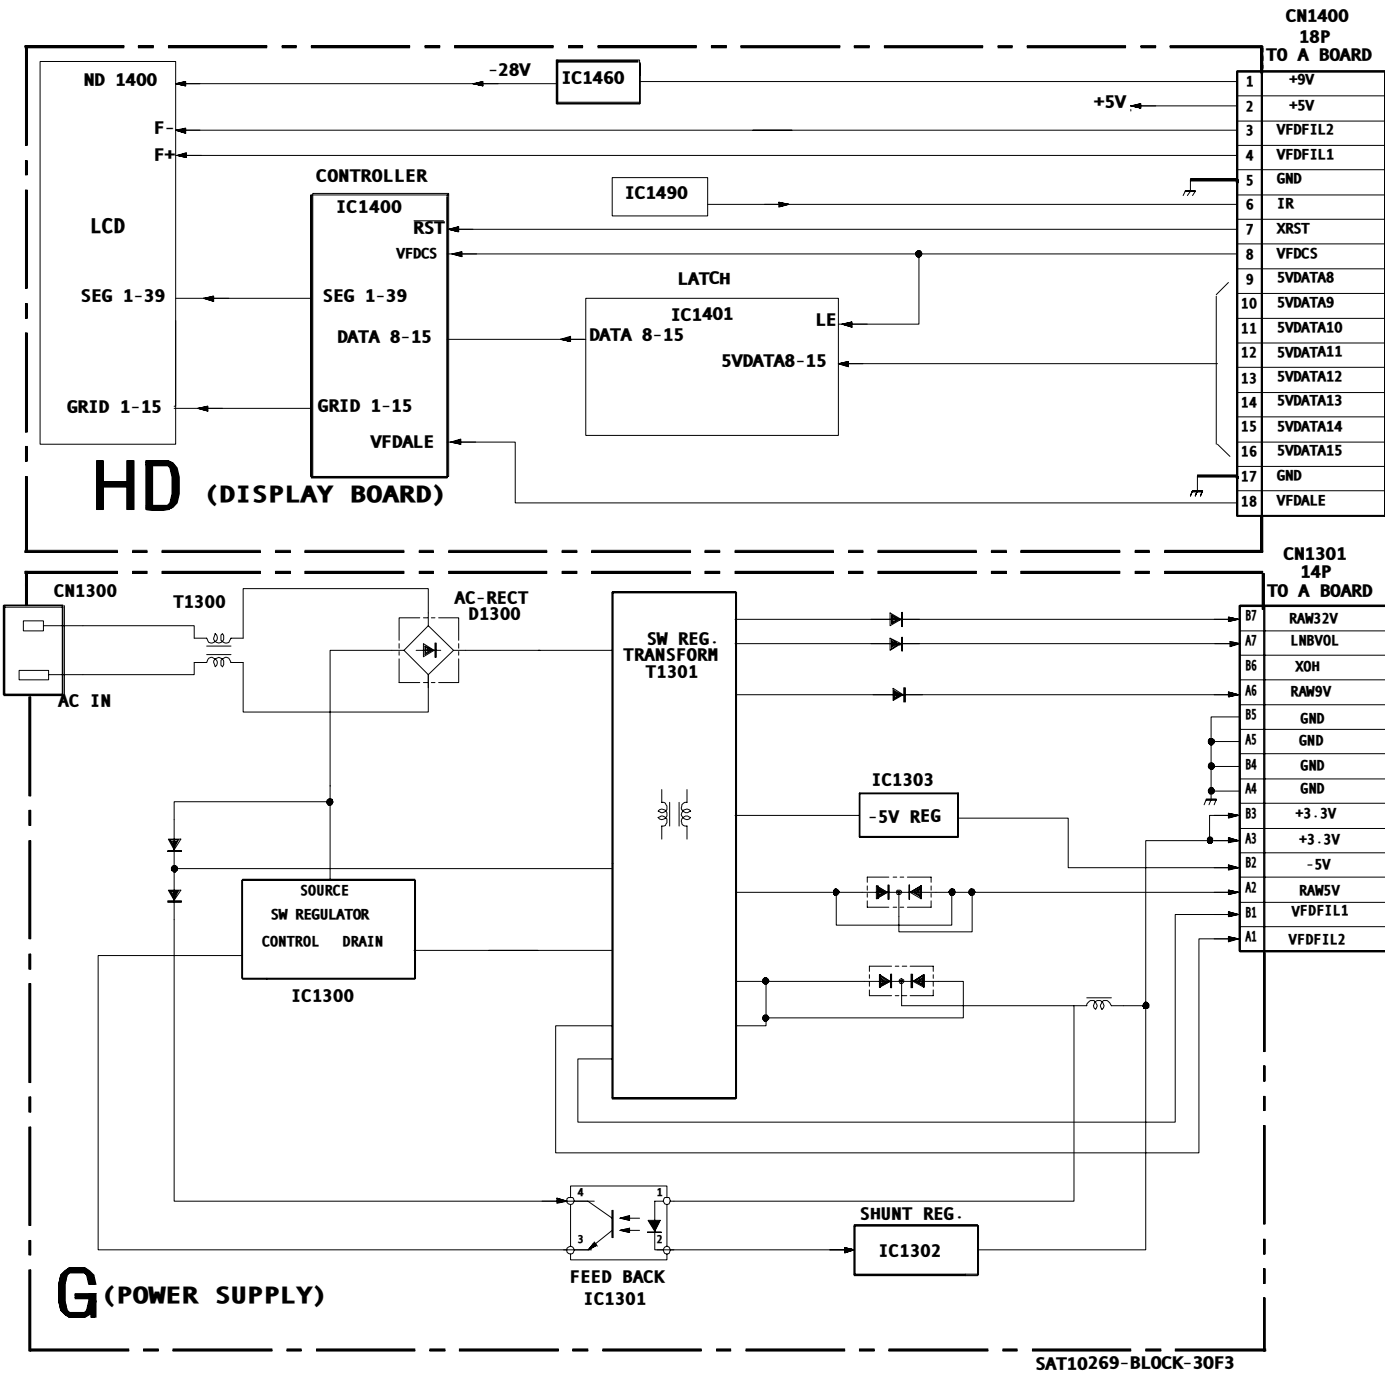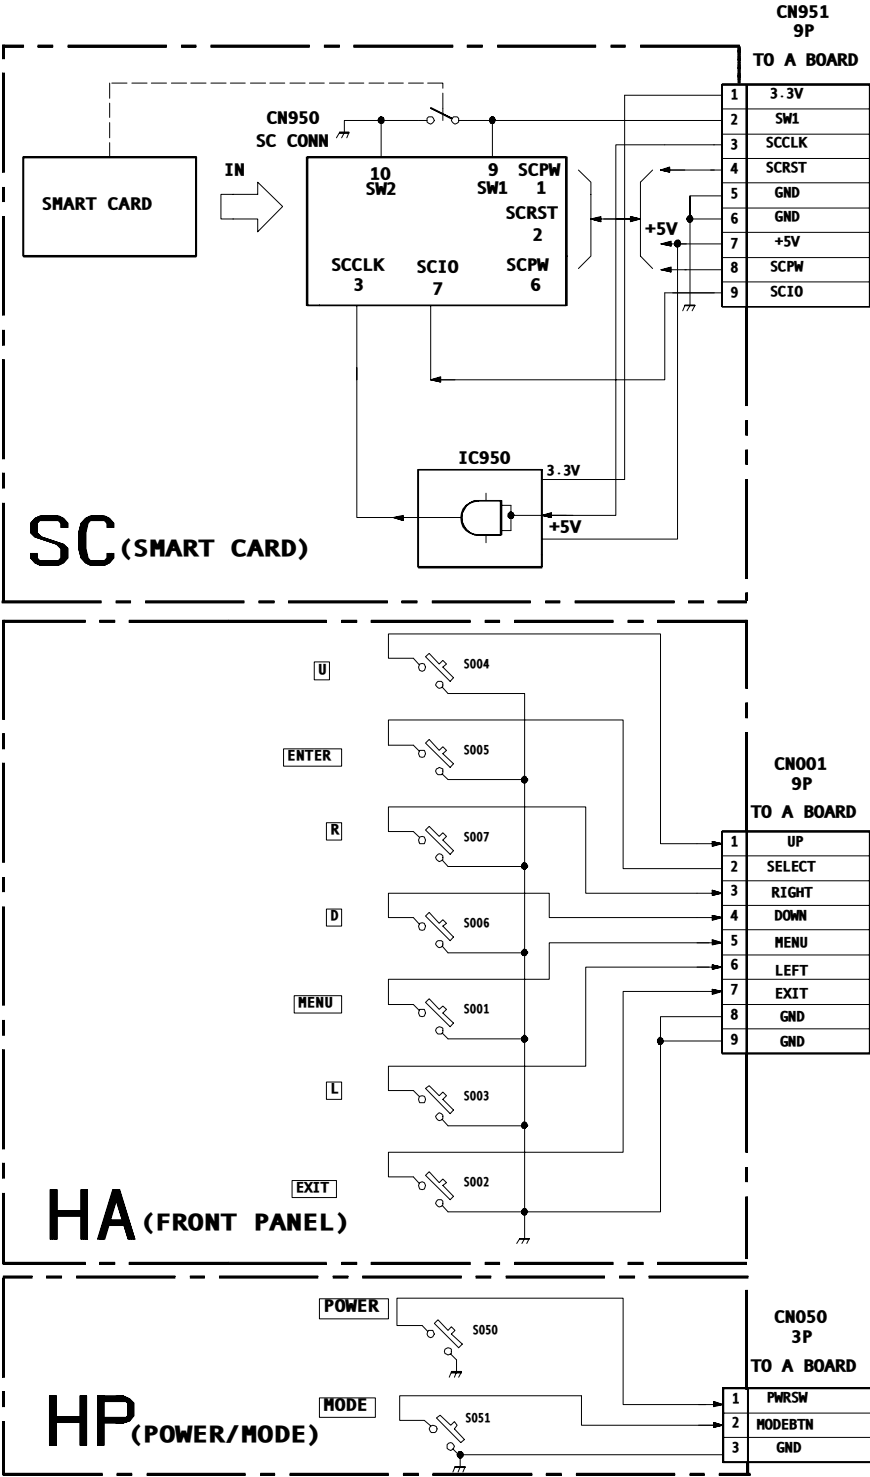


SAT10269-BLOCK-30F3

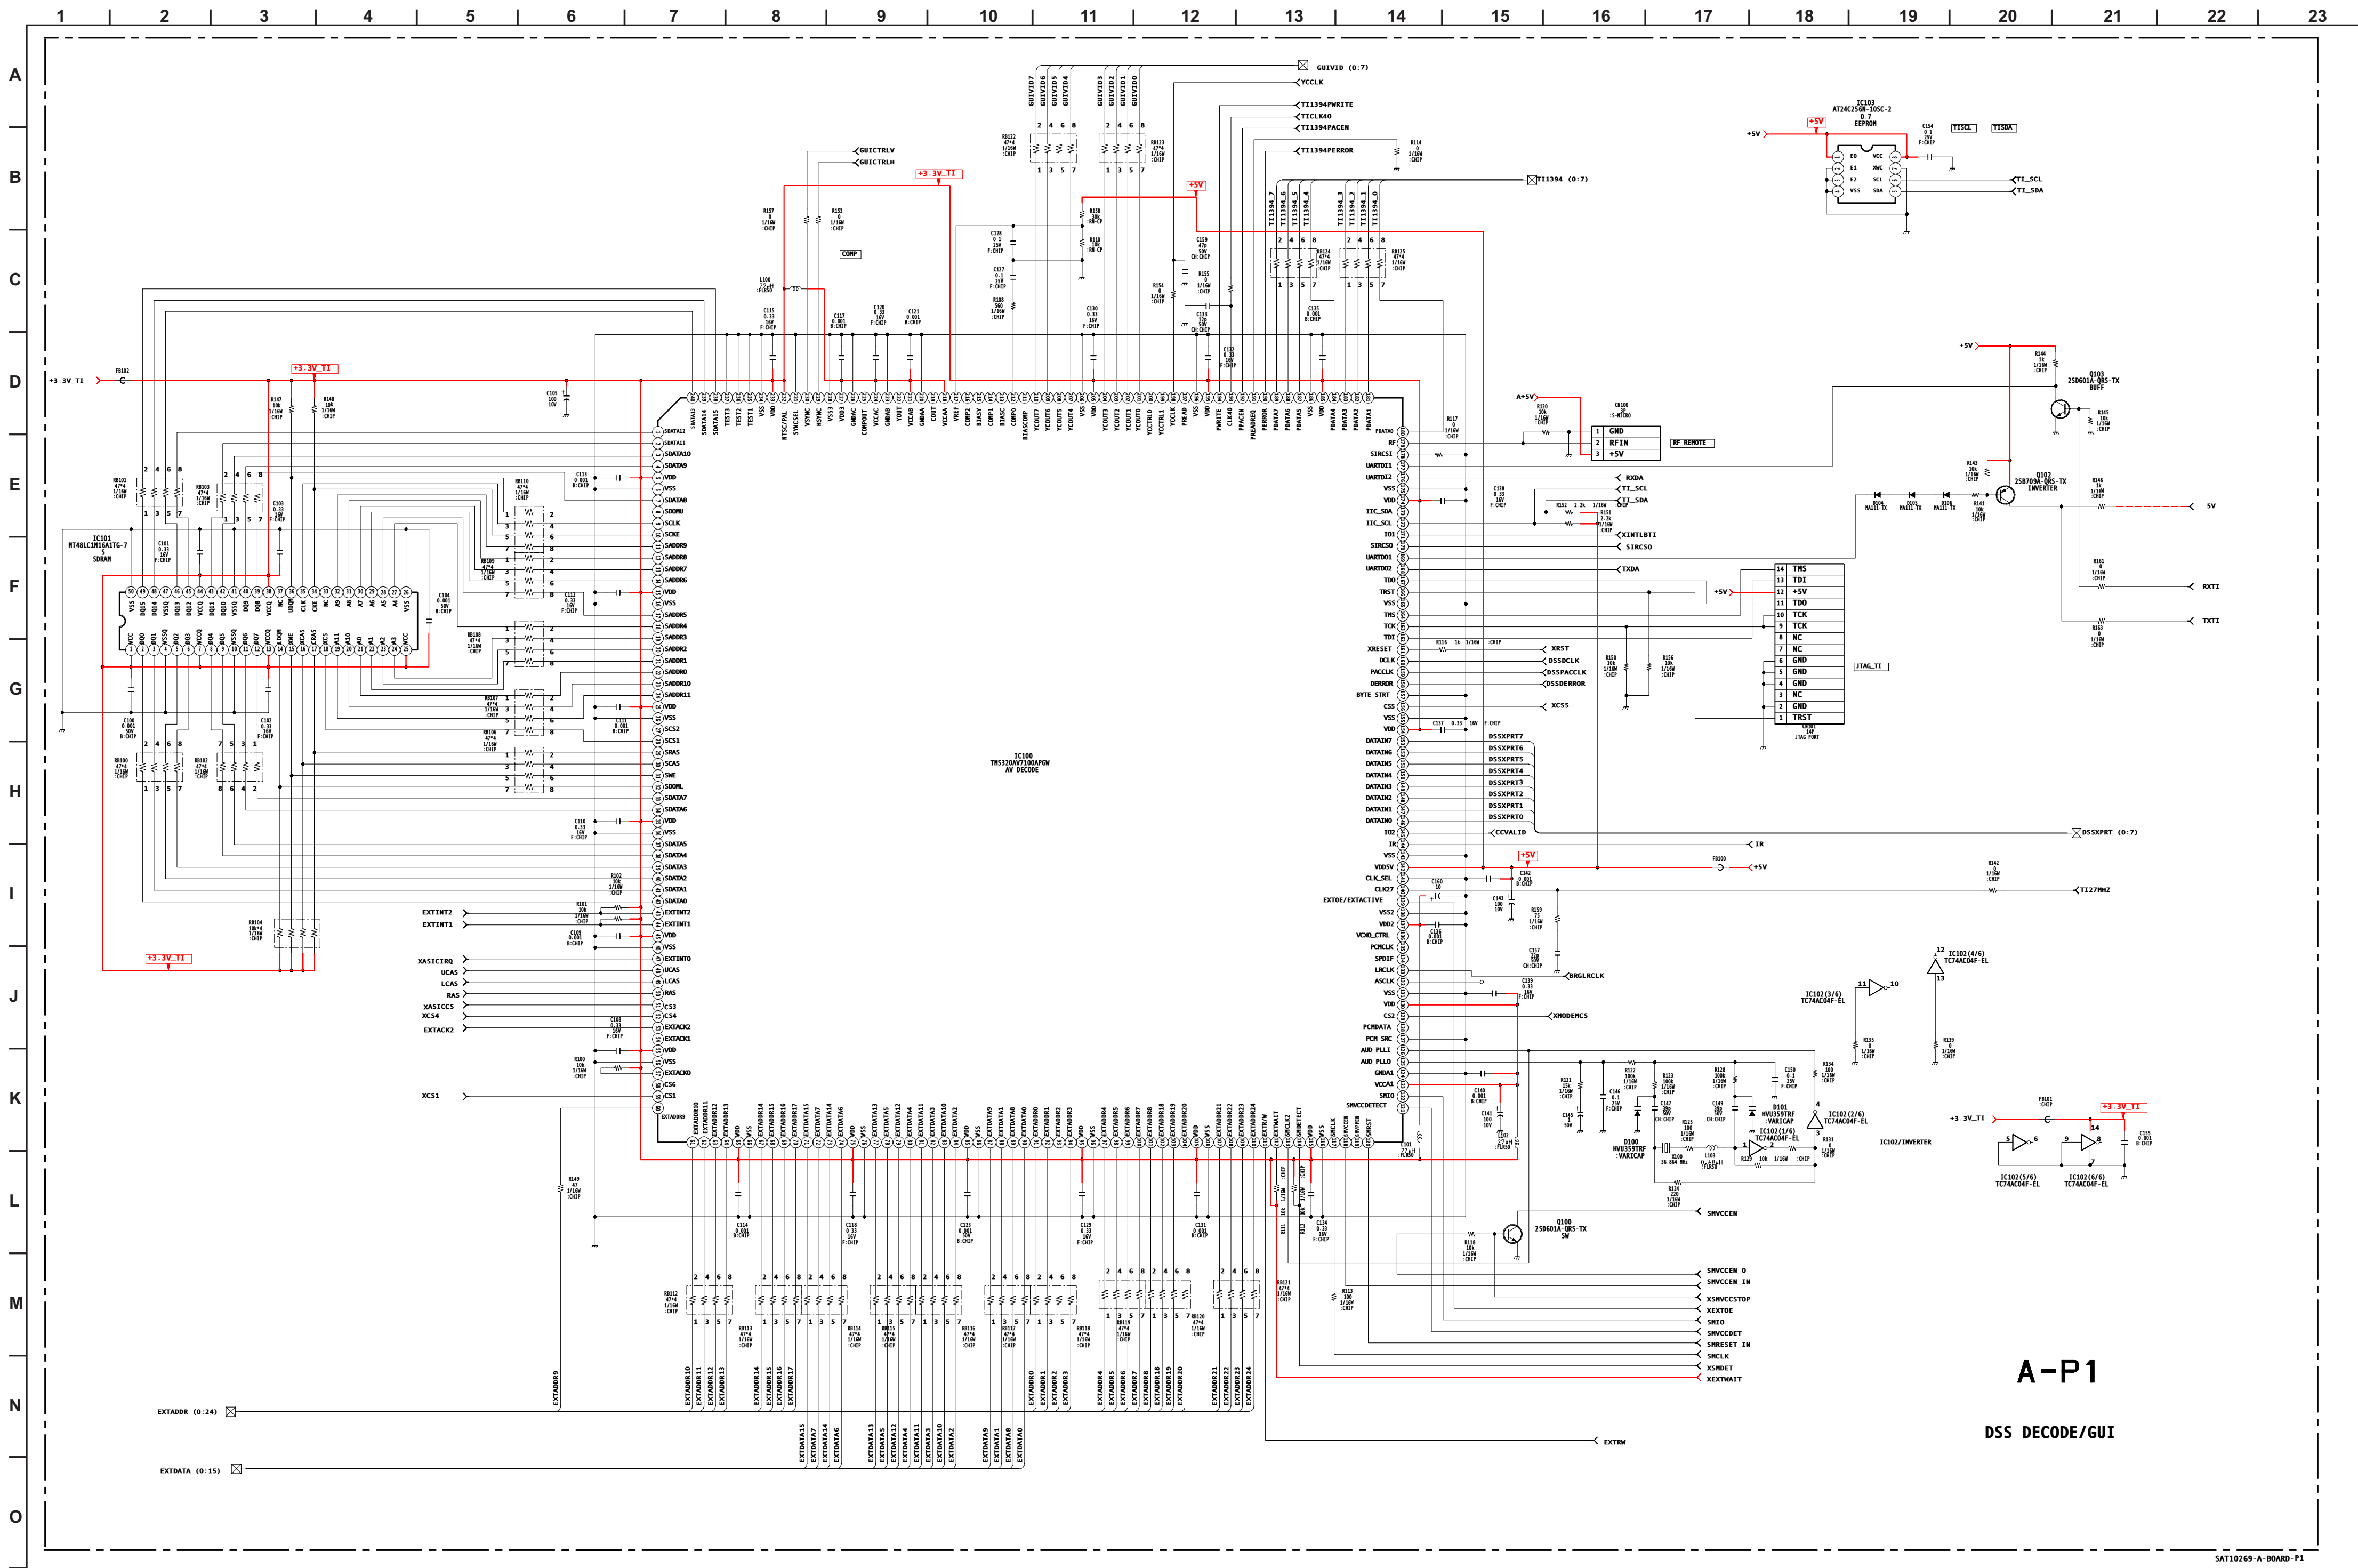


A-P1


DSS DECODE/GUI

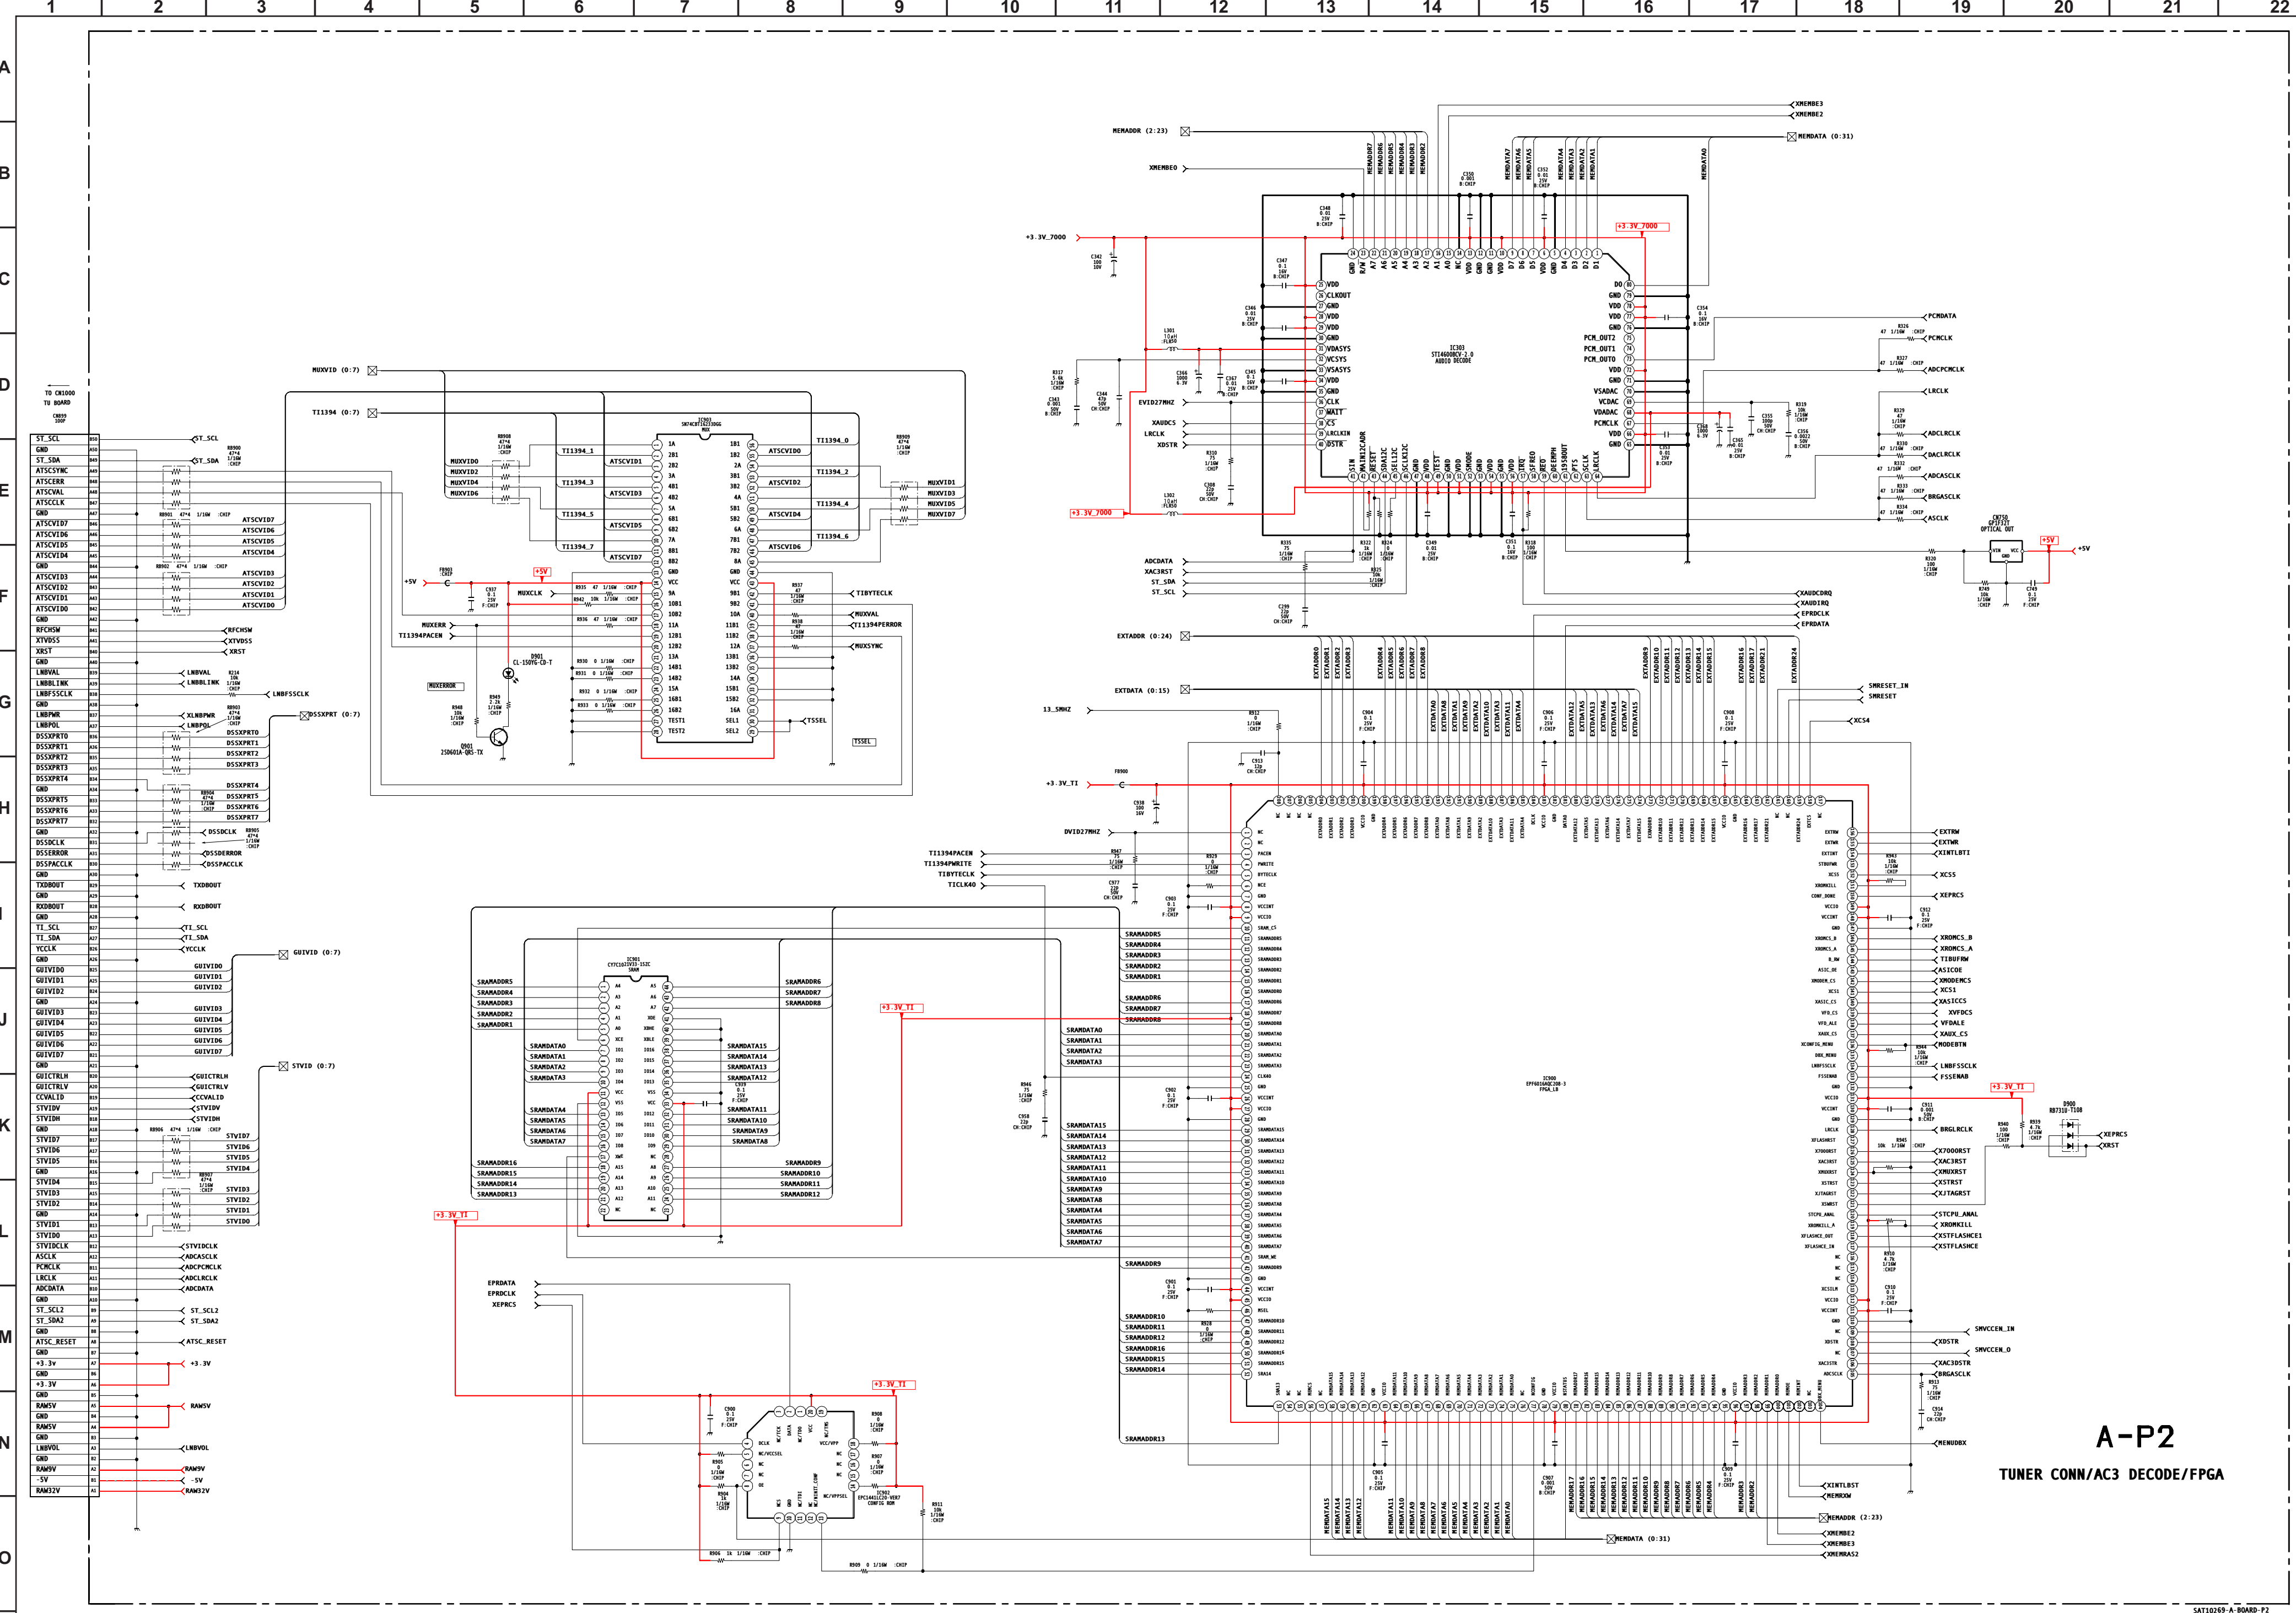

A-P2
TUNER CONN/AC3 DECODE/FPGA

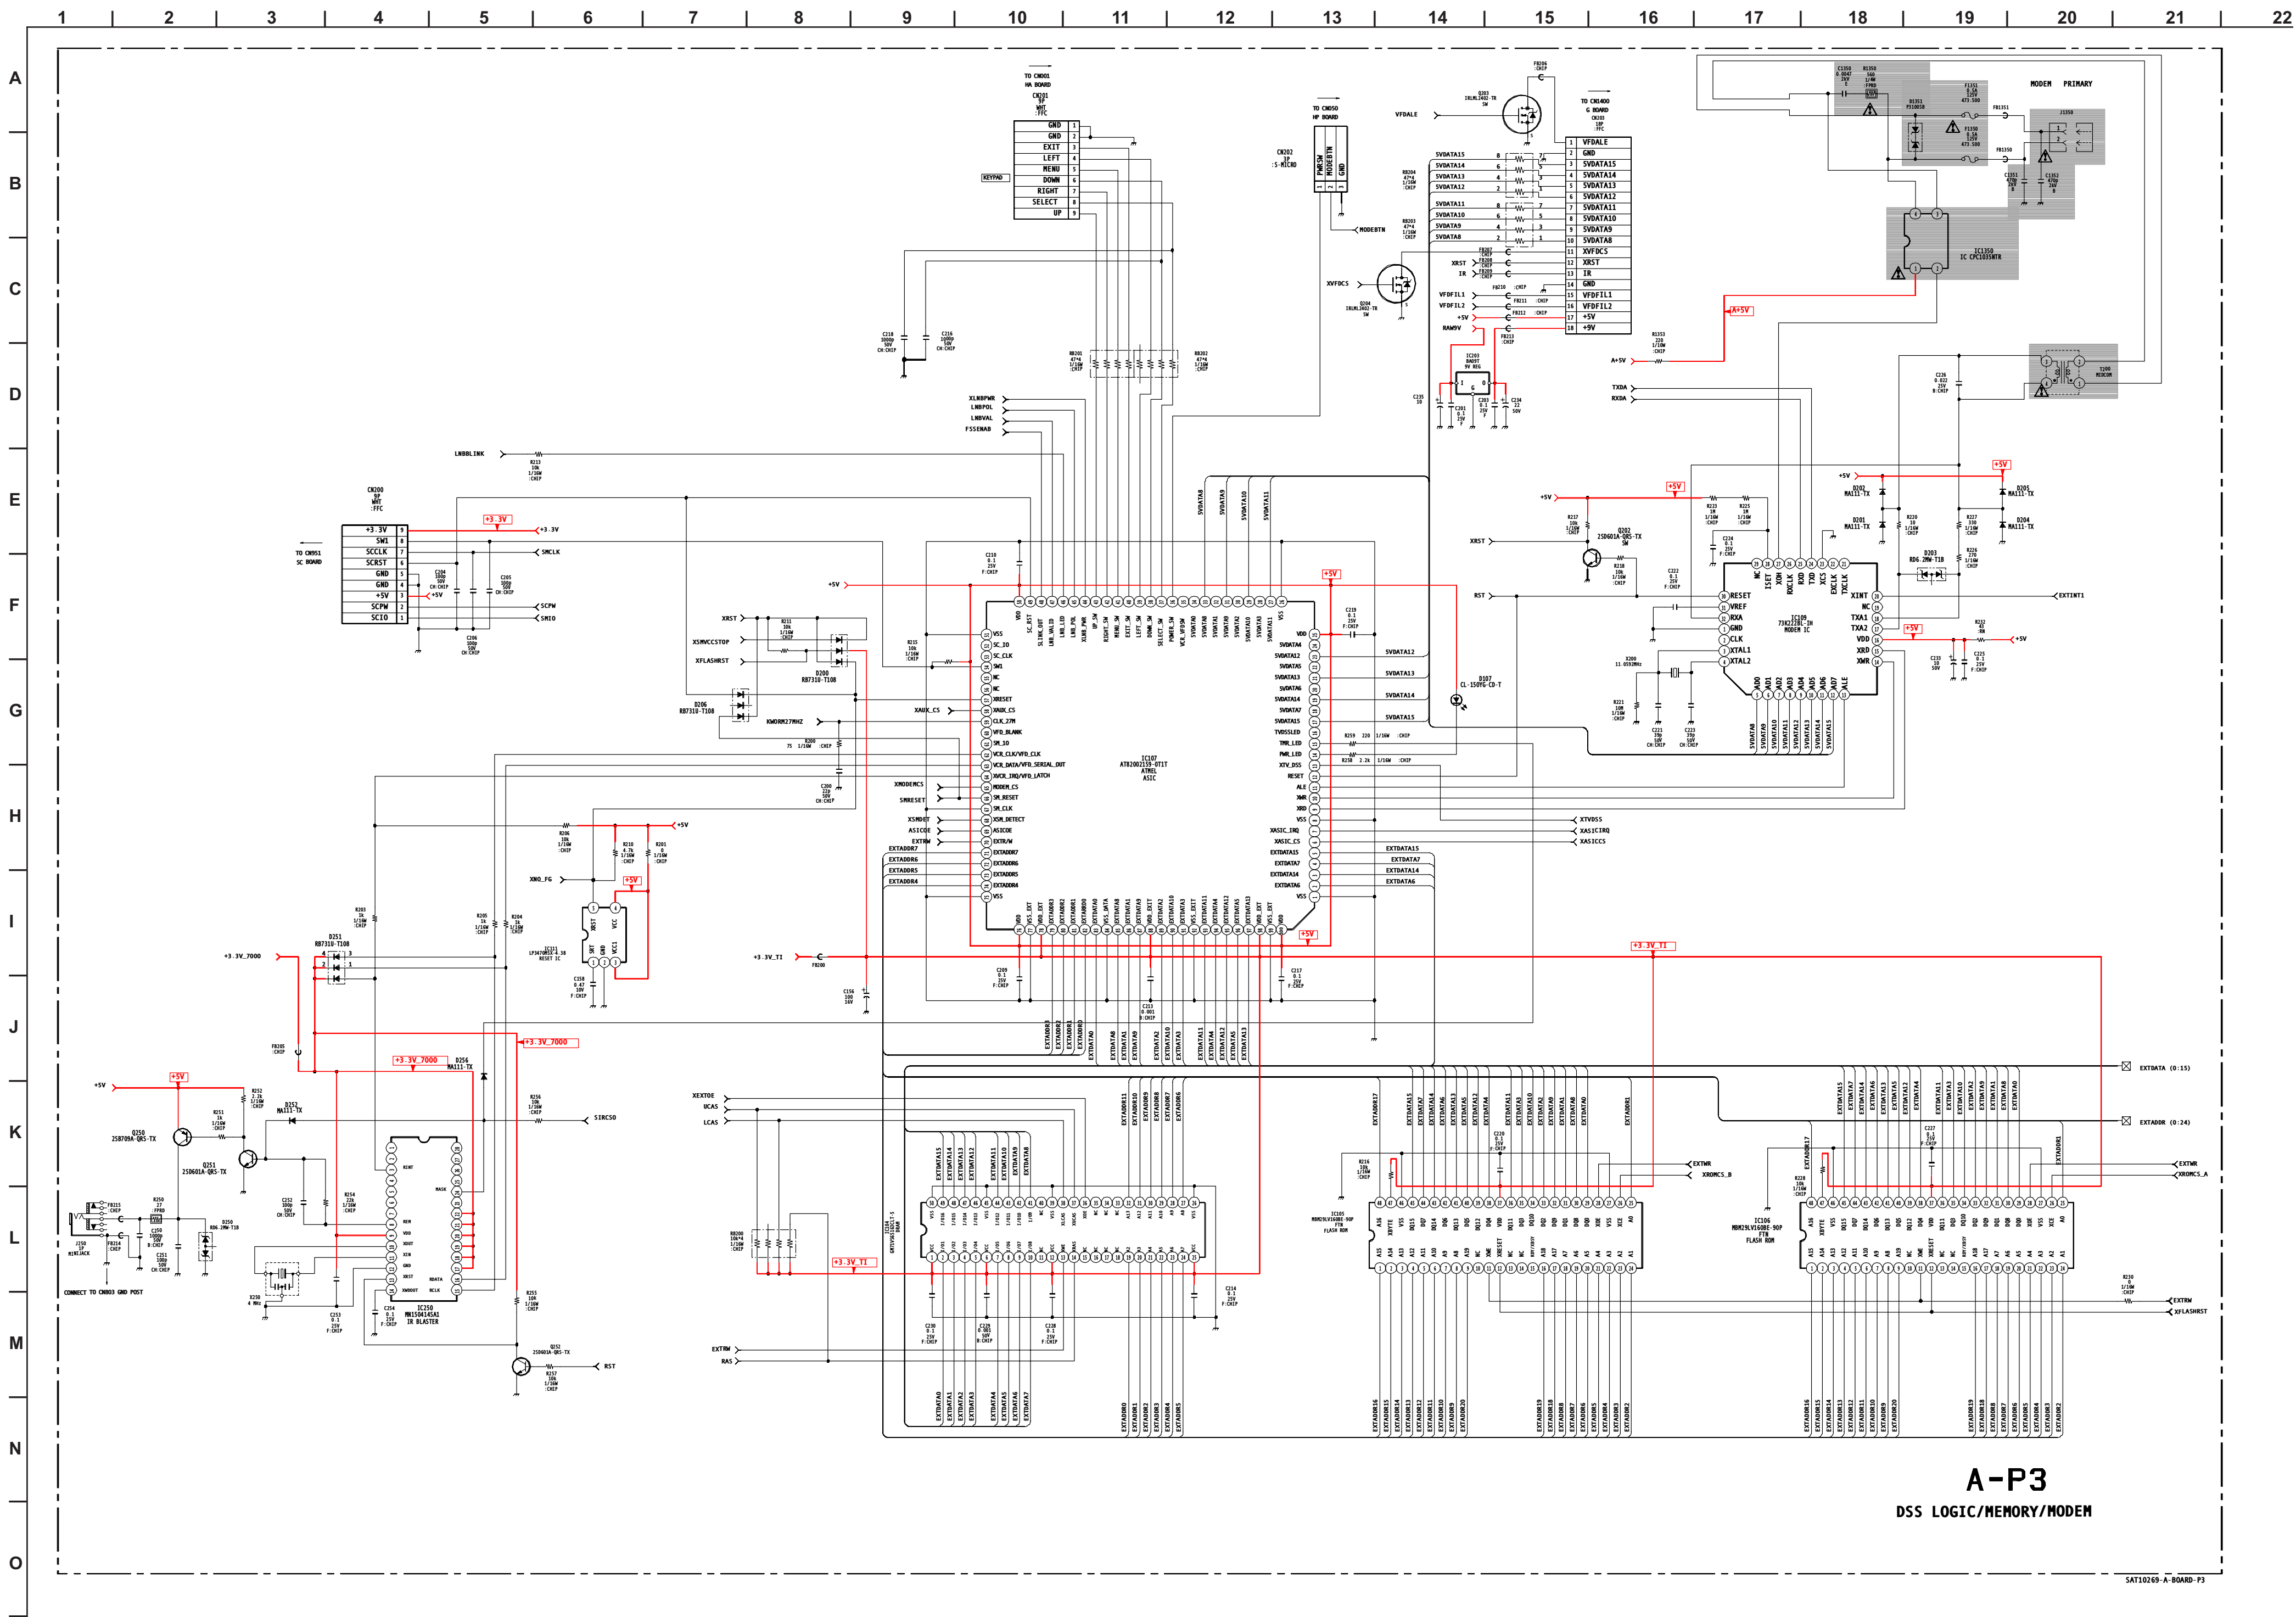
A-P3
DSS LOGIC/MEMORY/MODEM

SAT10269-A-BOARD-P3

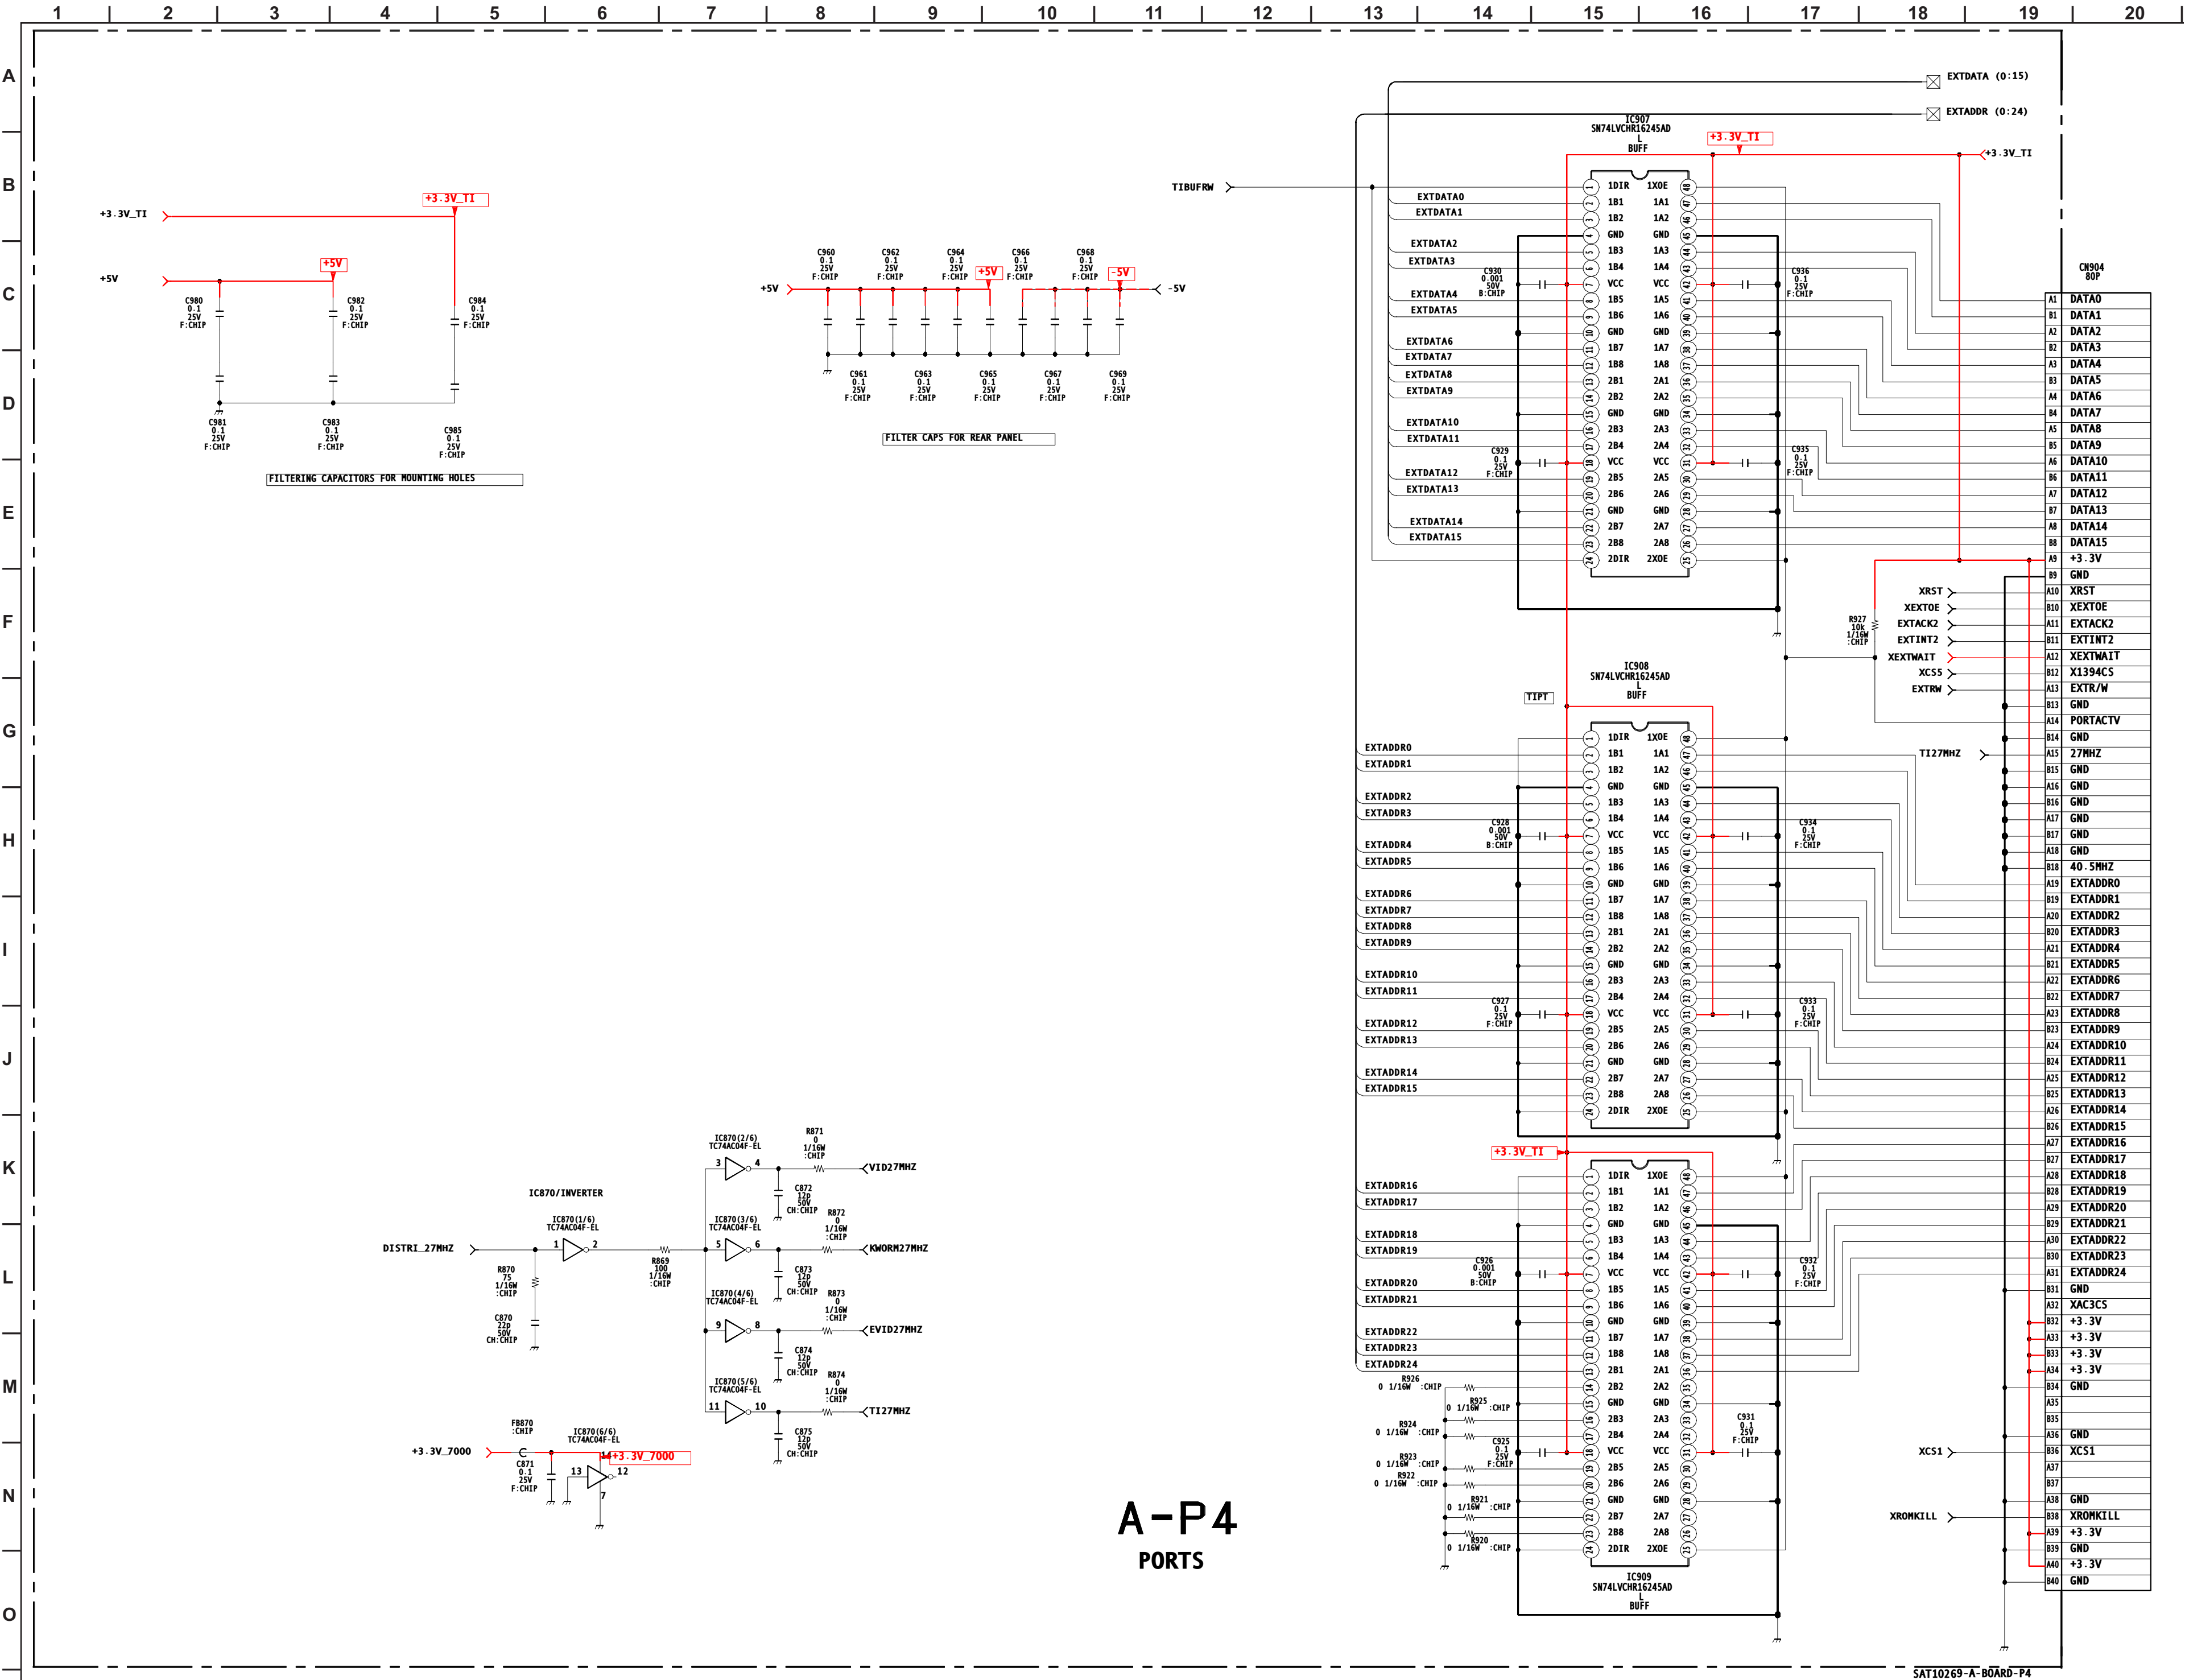










A

[MAIN BOARD]

COMPONENT SIDE

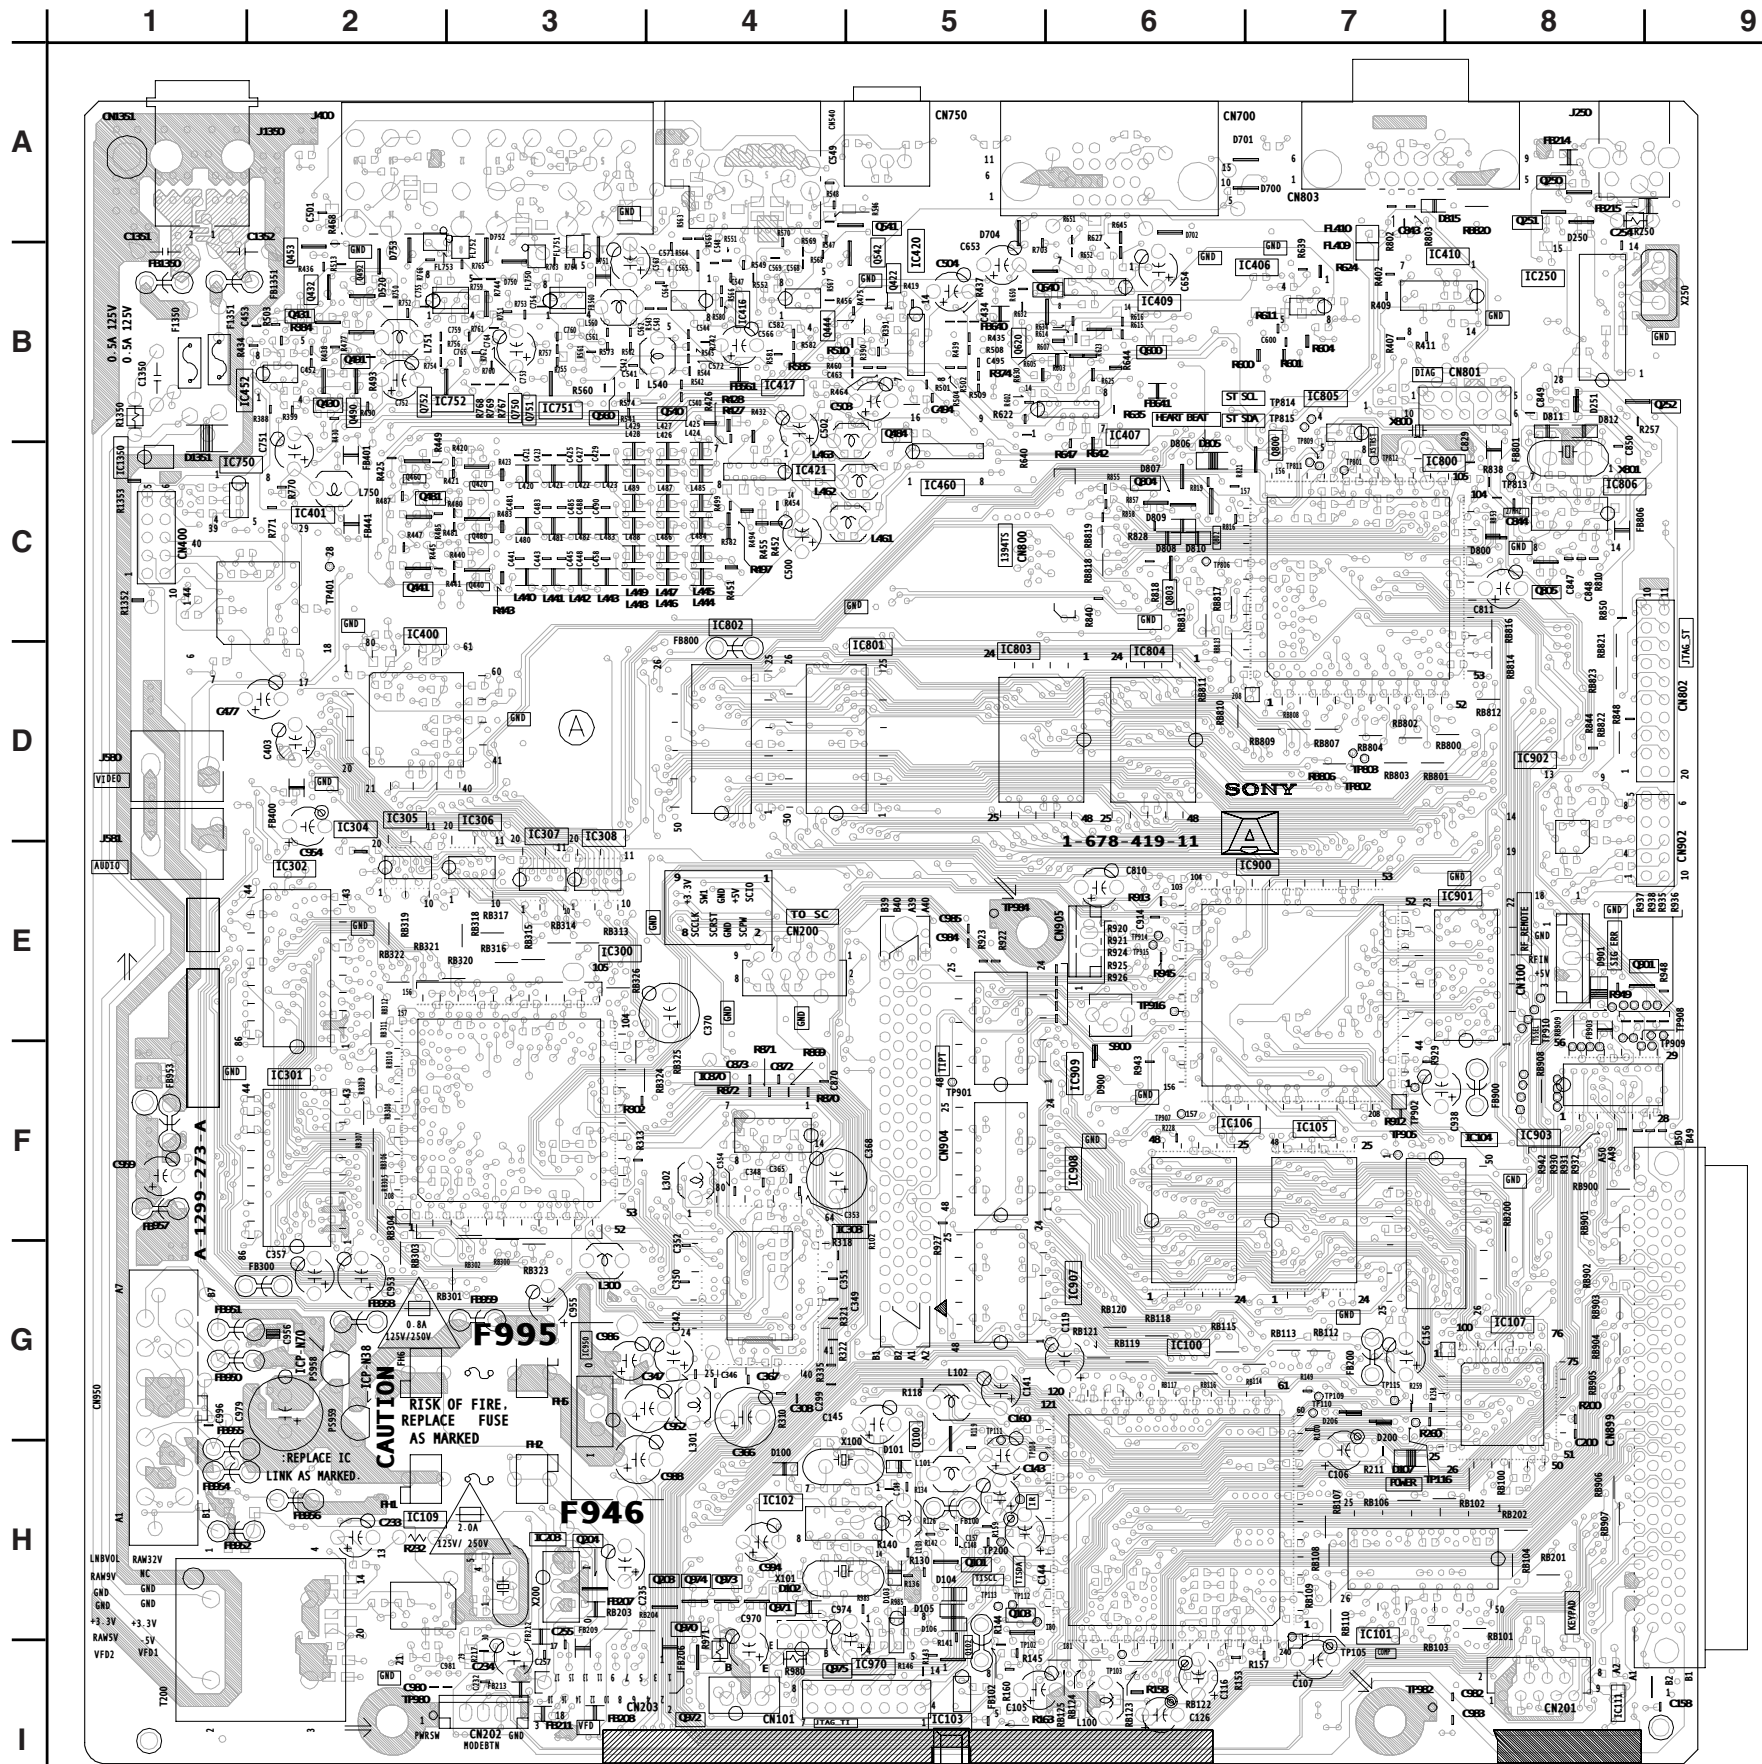


A BOARD LOCATOR LIST (COMPONENT SIDE)


IC		IC460	C-5	Q431	B-2
IC100	G-6	IC750	C-1	Q432	B-2
IC101	H-7	IC751	B-3	Q440	C-3
IC102	H-4	IC752	B-3	Q441	C-3
IC103	I-5	IC800	C-7	Q444	B-4
IC104	F-8	IC801	D-5	Q453	B-2
IC105	F-7	IC802	D-4	Q460	C-2
IC106	F-7	IC803	D-6	Q480	C-3
IC107	G-8	IC804	D-6	Q481	C-2
IC109	H-2	IC806	C-8	Q484	C-5
IC111	I-9	IC870	F-4	Q490	B-2
IC203	H-3	IC900	E-7	Q491	B-2
IC250	B-8	IC901	E-8	Q492	B-2
IC300	E-3	IC902	D-8	Q540	B-4
IC301	F-2	IC903	F-8	Q541	A-5
IC302	E-2	IC907	G-6	Q542	B-5
IC303	G-5	IC908	F-6	Q560	B-3
IC304	D-2	IC909	F-6	Q600	B-6
IC305	D-2	IC950	G-3	Q620	B-5
IC306	D-3	IC1350	C-1	Q640	B-6
IC307	D-3	TRANSISTOR	Q750	B-3	
IC308	D-3	Q100	H-5	Q802	C-6
IC400	D-2	Q102	I-5	Q803	C-6
IC401	C-2	Q103	H-5	Q804	C-6
IC406	B-7	Q202	--	Q805	C-8
IC407	C-6	Q203	H-4	Q901	E-9
IC409	B-6	Q204	H-3	Q970	H-4
IC410	B-8	Q250	A-8	Q971	H-4
IC416	B-4	Q251	A-8	Q972	I-4
IC417	B-4	Q252	B-9	Q973	H-4
IC420	B-5	Q420	C-3	Q974	H-4
IC421	C-4	Q422	B-5	Q975	I-5
IC452	B-2	Q430	B-2		

	1	2	3	4	5	6	7	8	
--	---	---	---	---	---	---	---	---	--


TRANSISTOR	
Q202	1-7

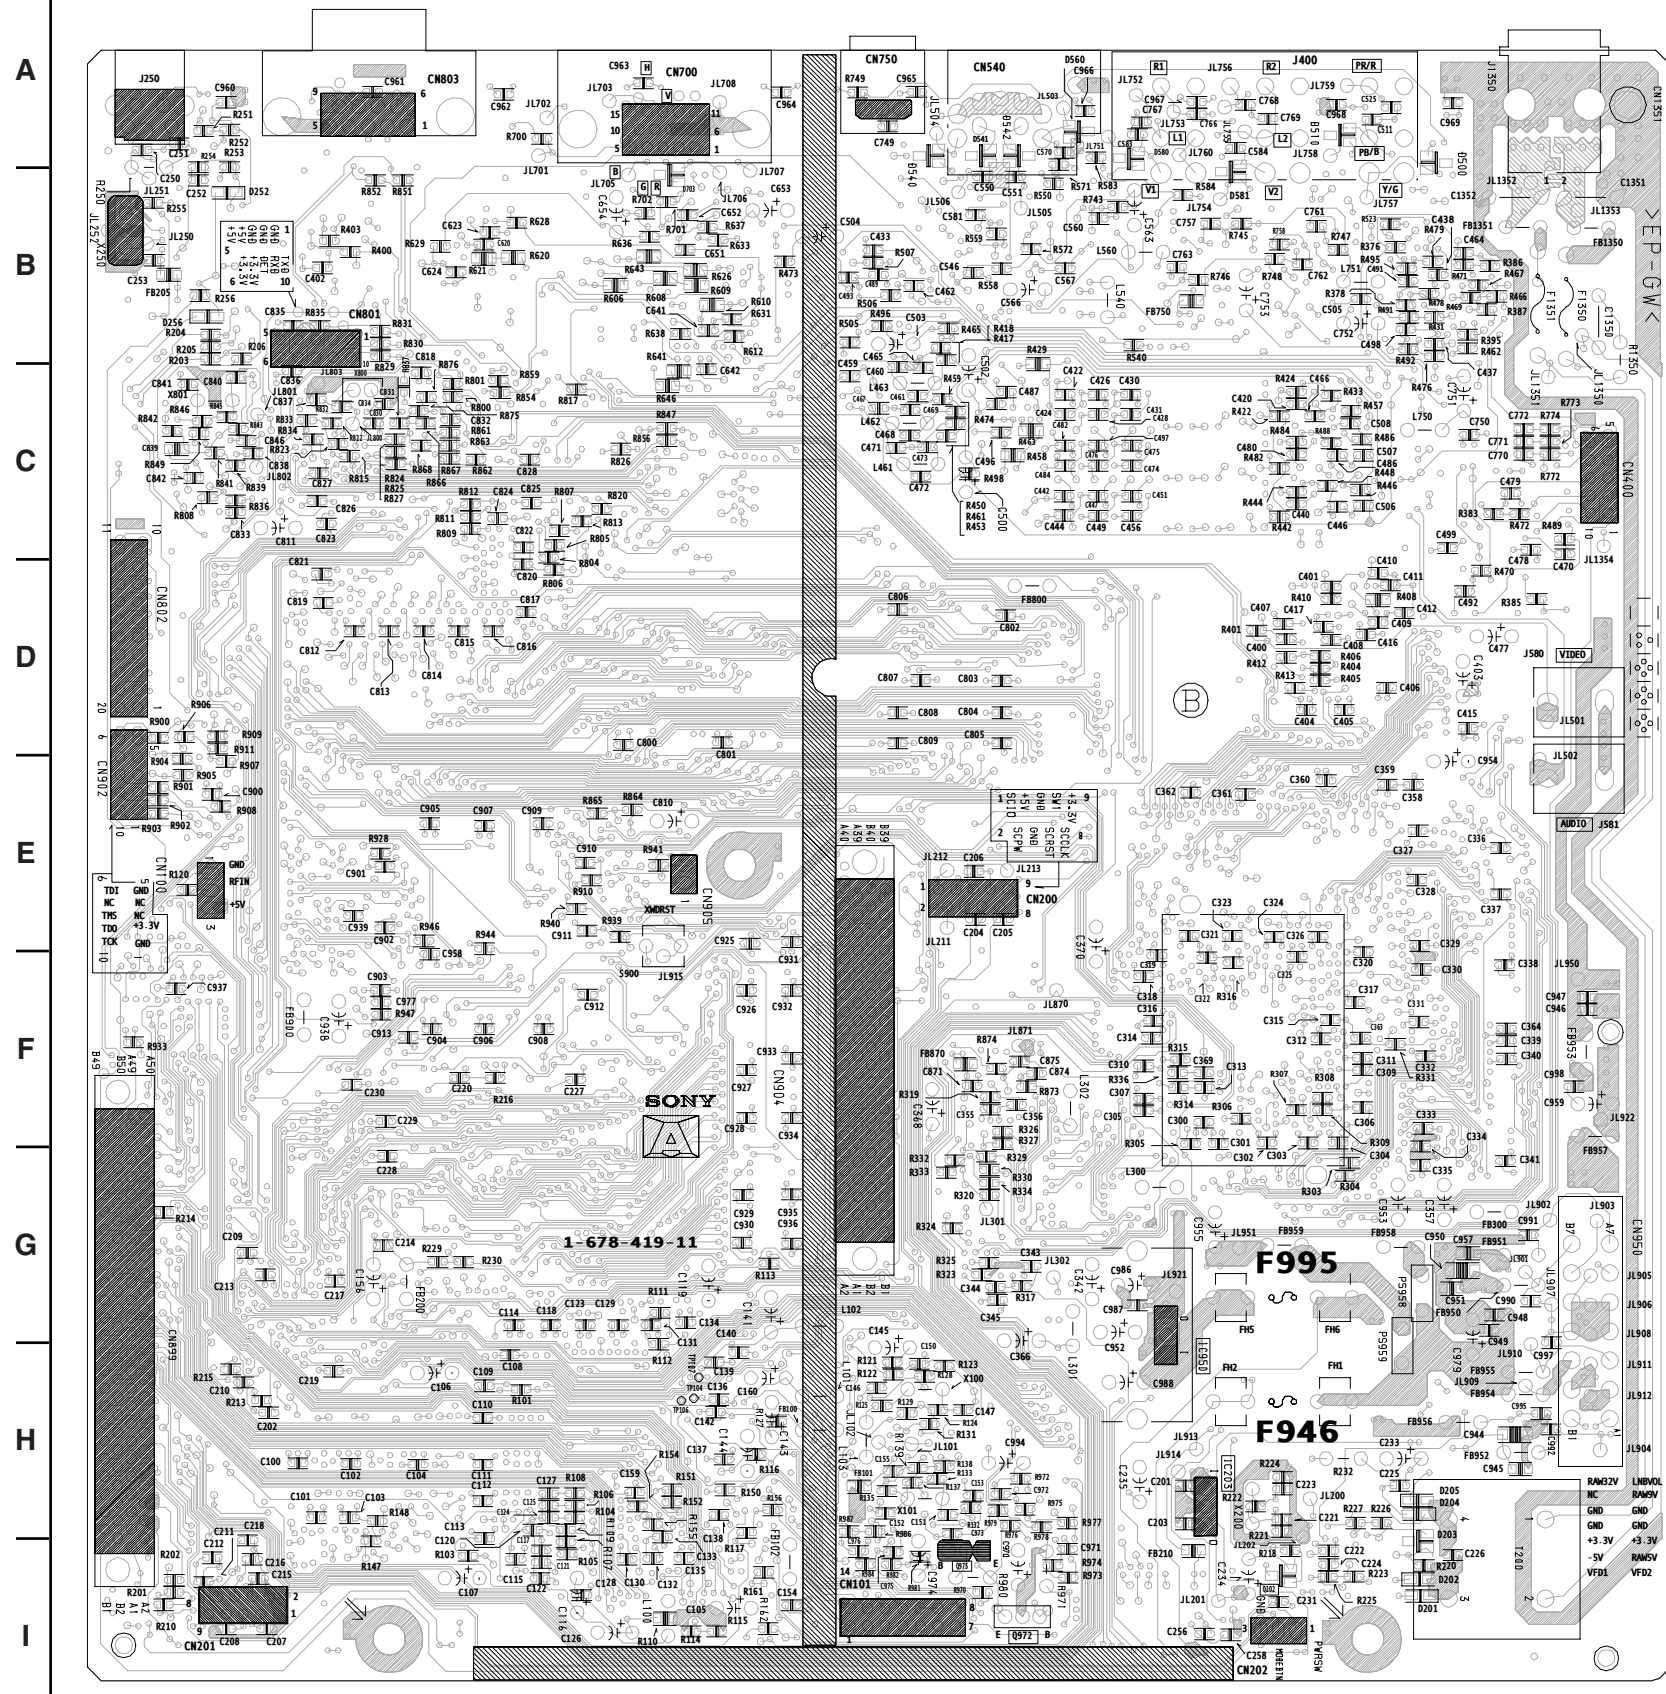


FD BOARD SCHEMATIC DIAGRAM

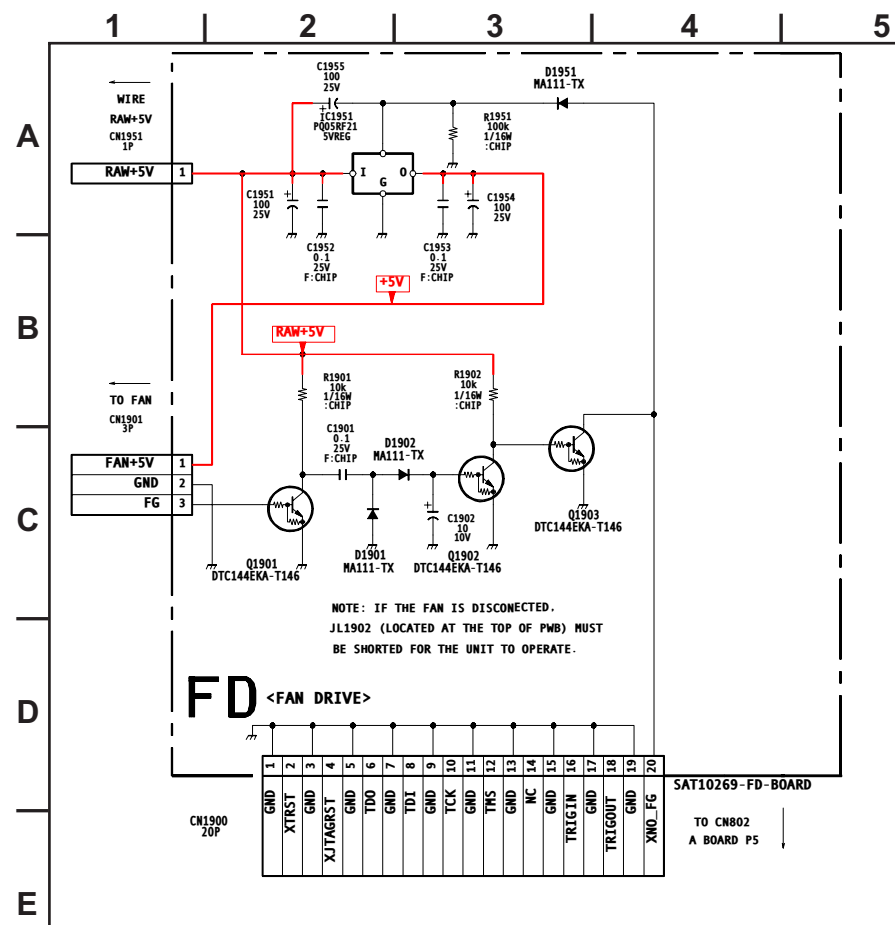


HA [FRONT PANEL]

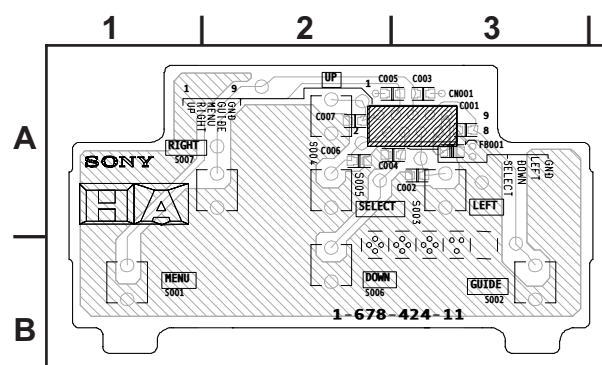


FD [FAN DRIVER]

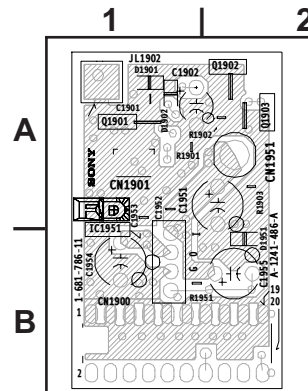


HA BOARD SCHEMATIC DIAGRAM

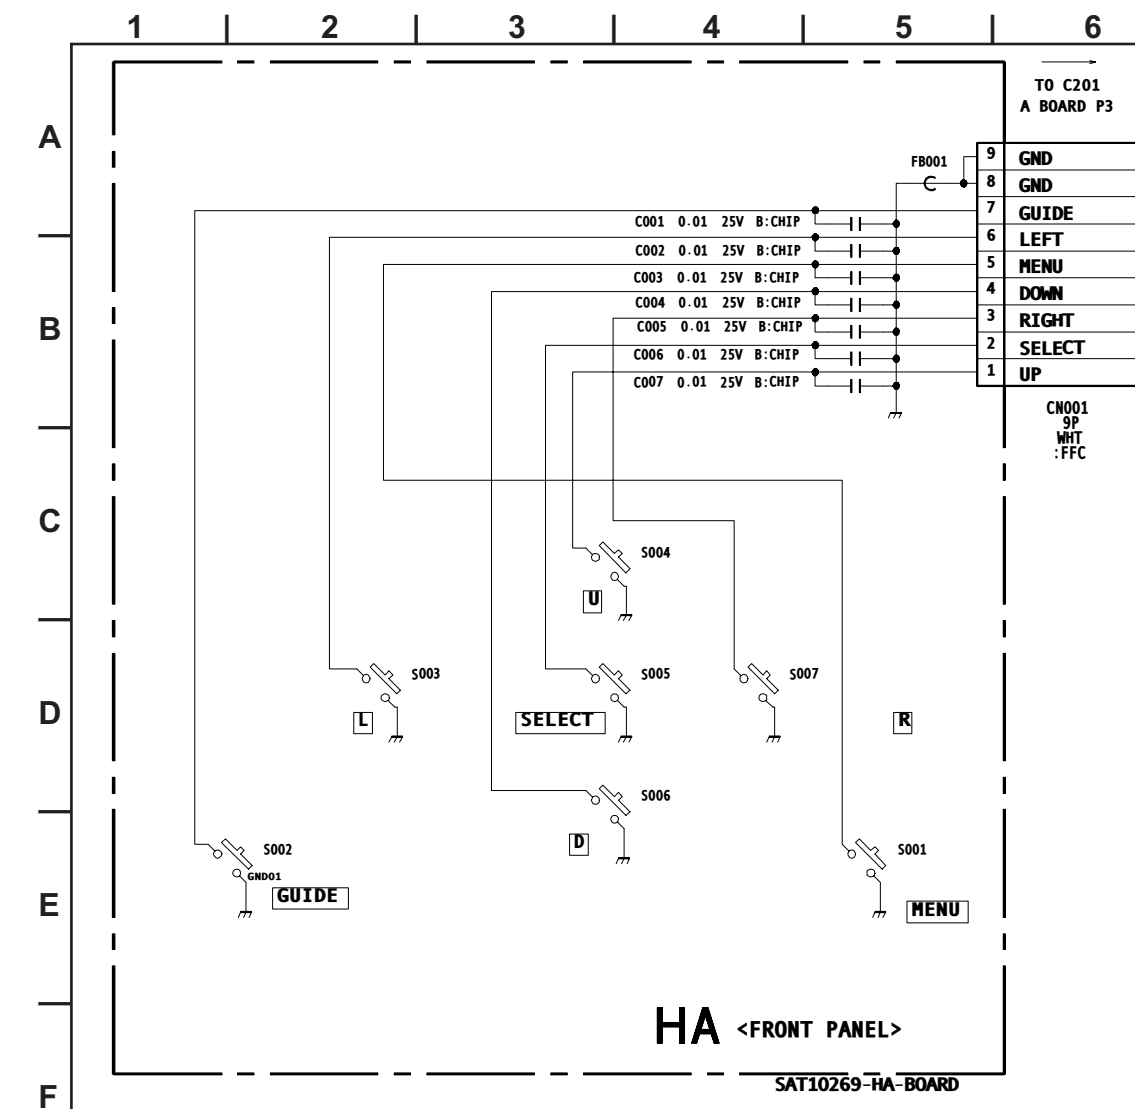


HD BOARD SCHEMATIC DIAGRAM

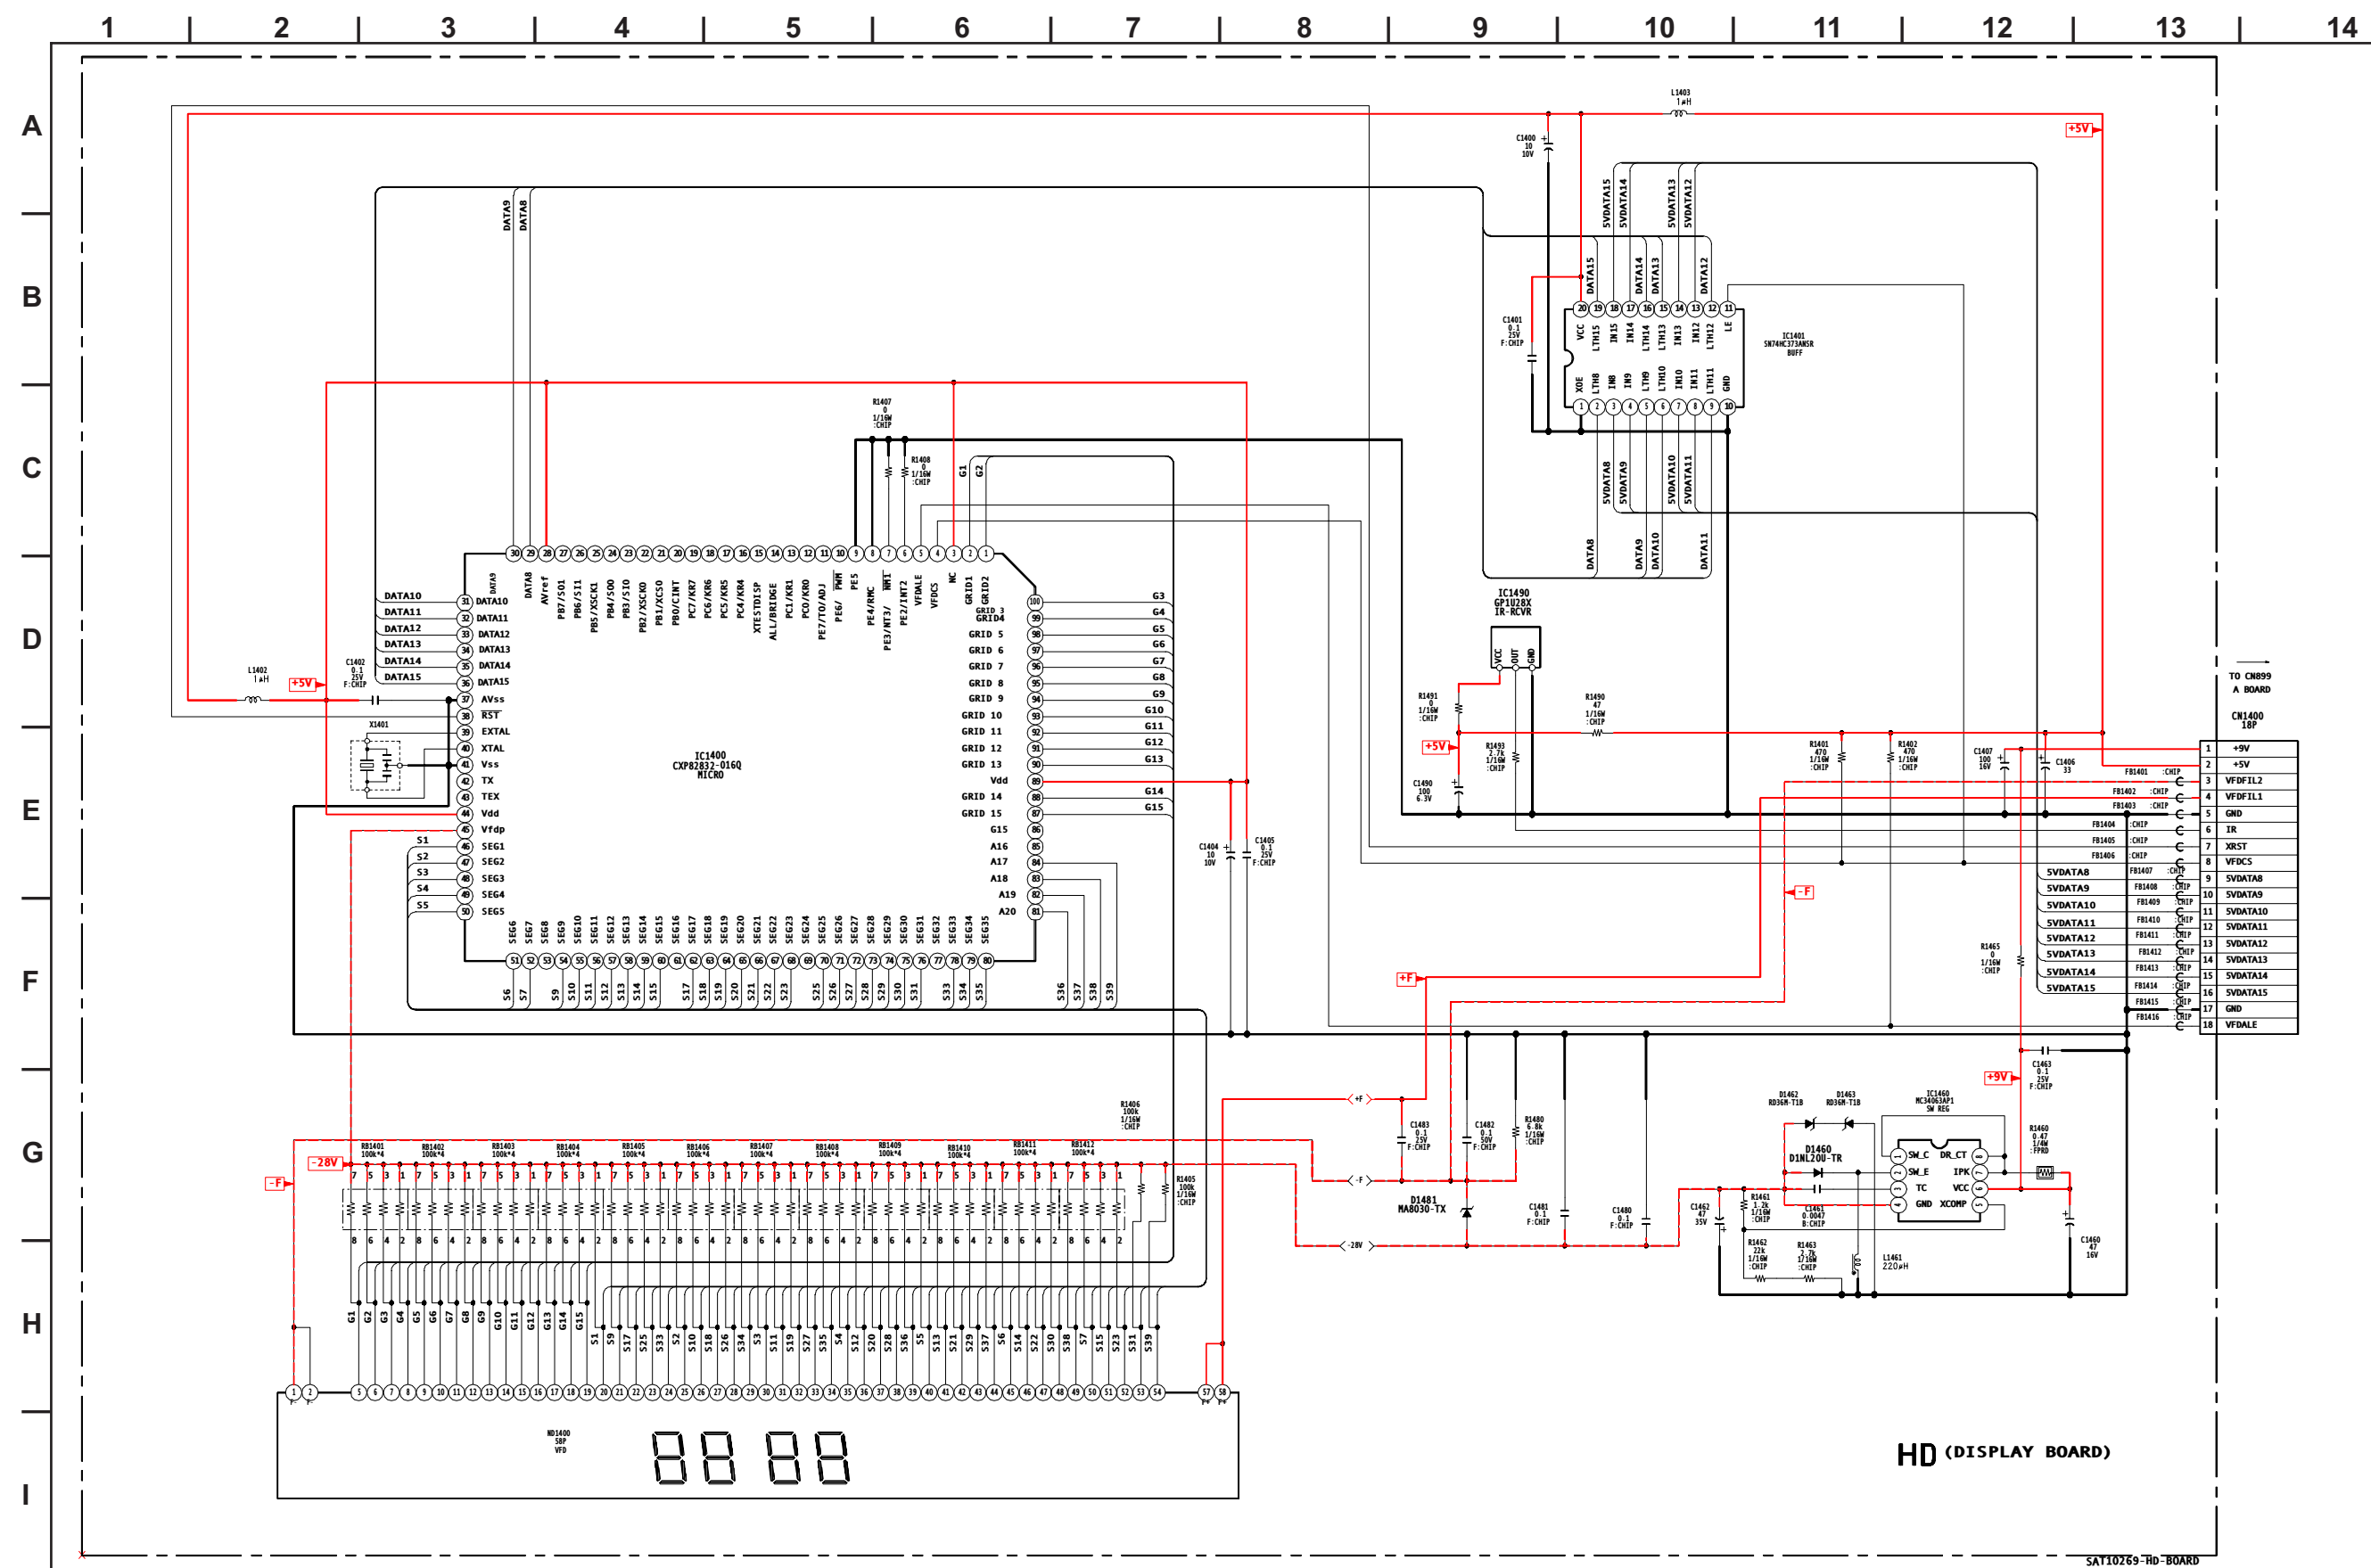

G BOARD SCHEMATIC DIAGRAM

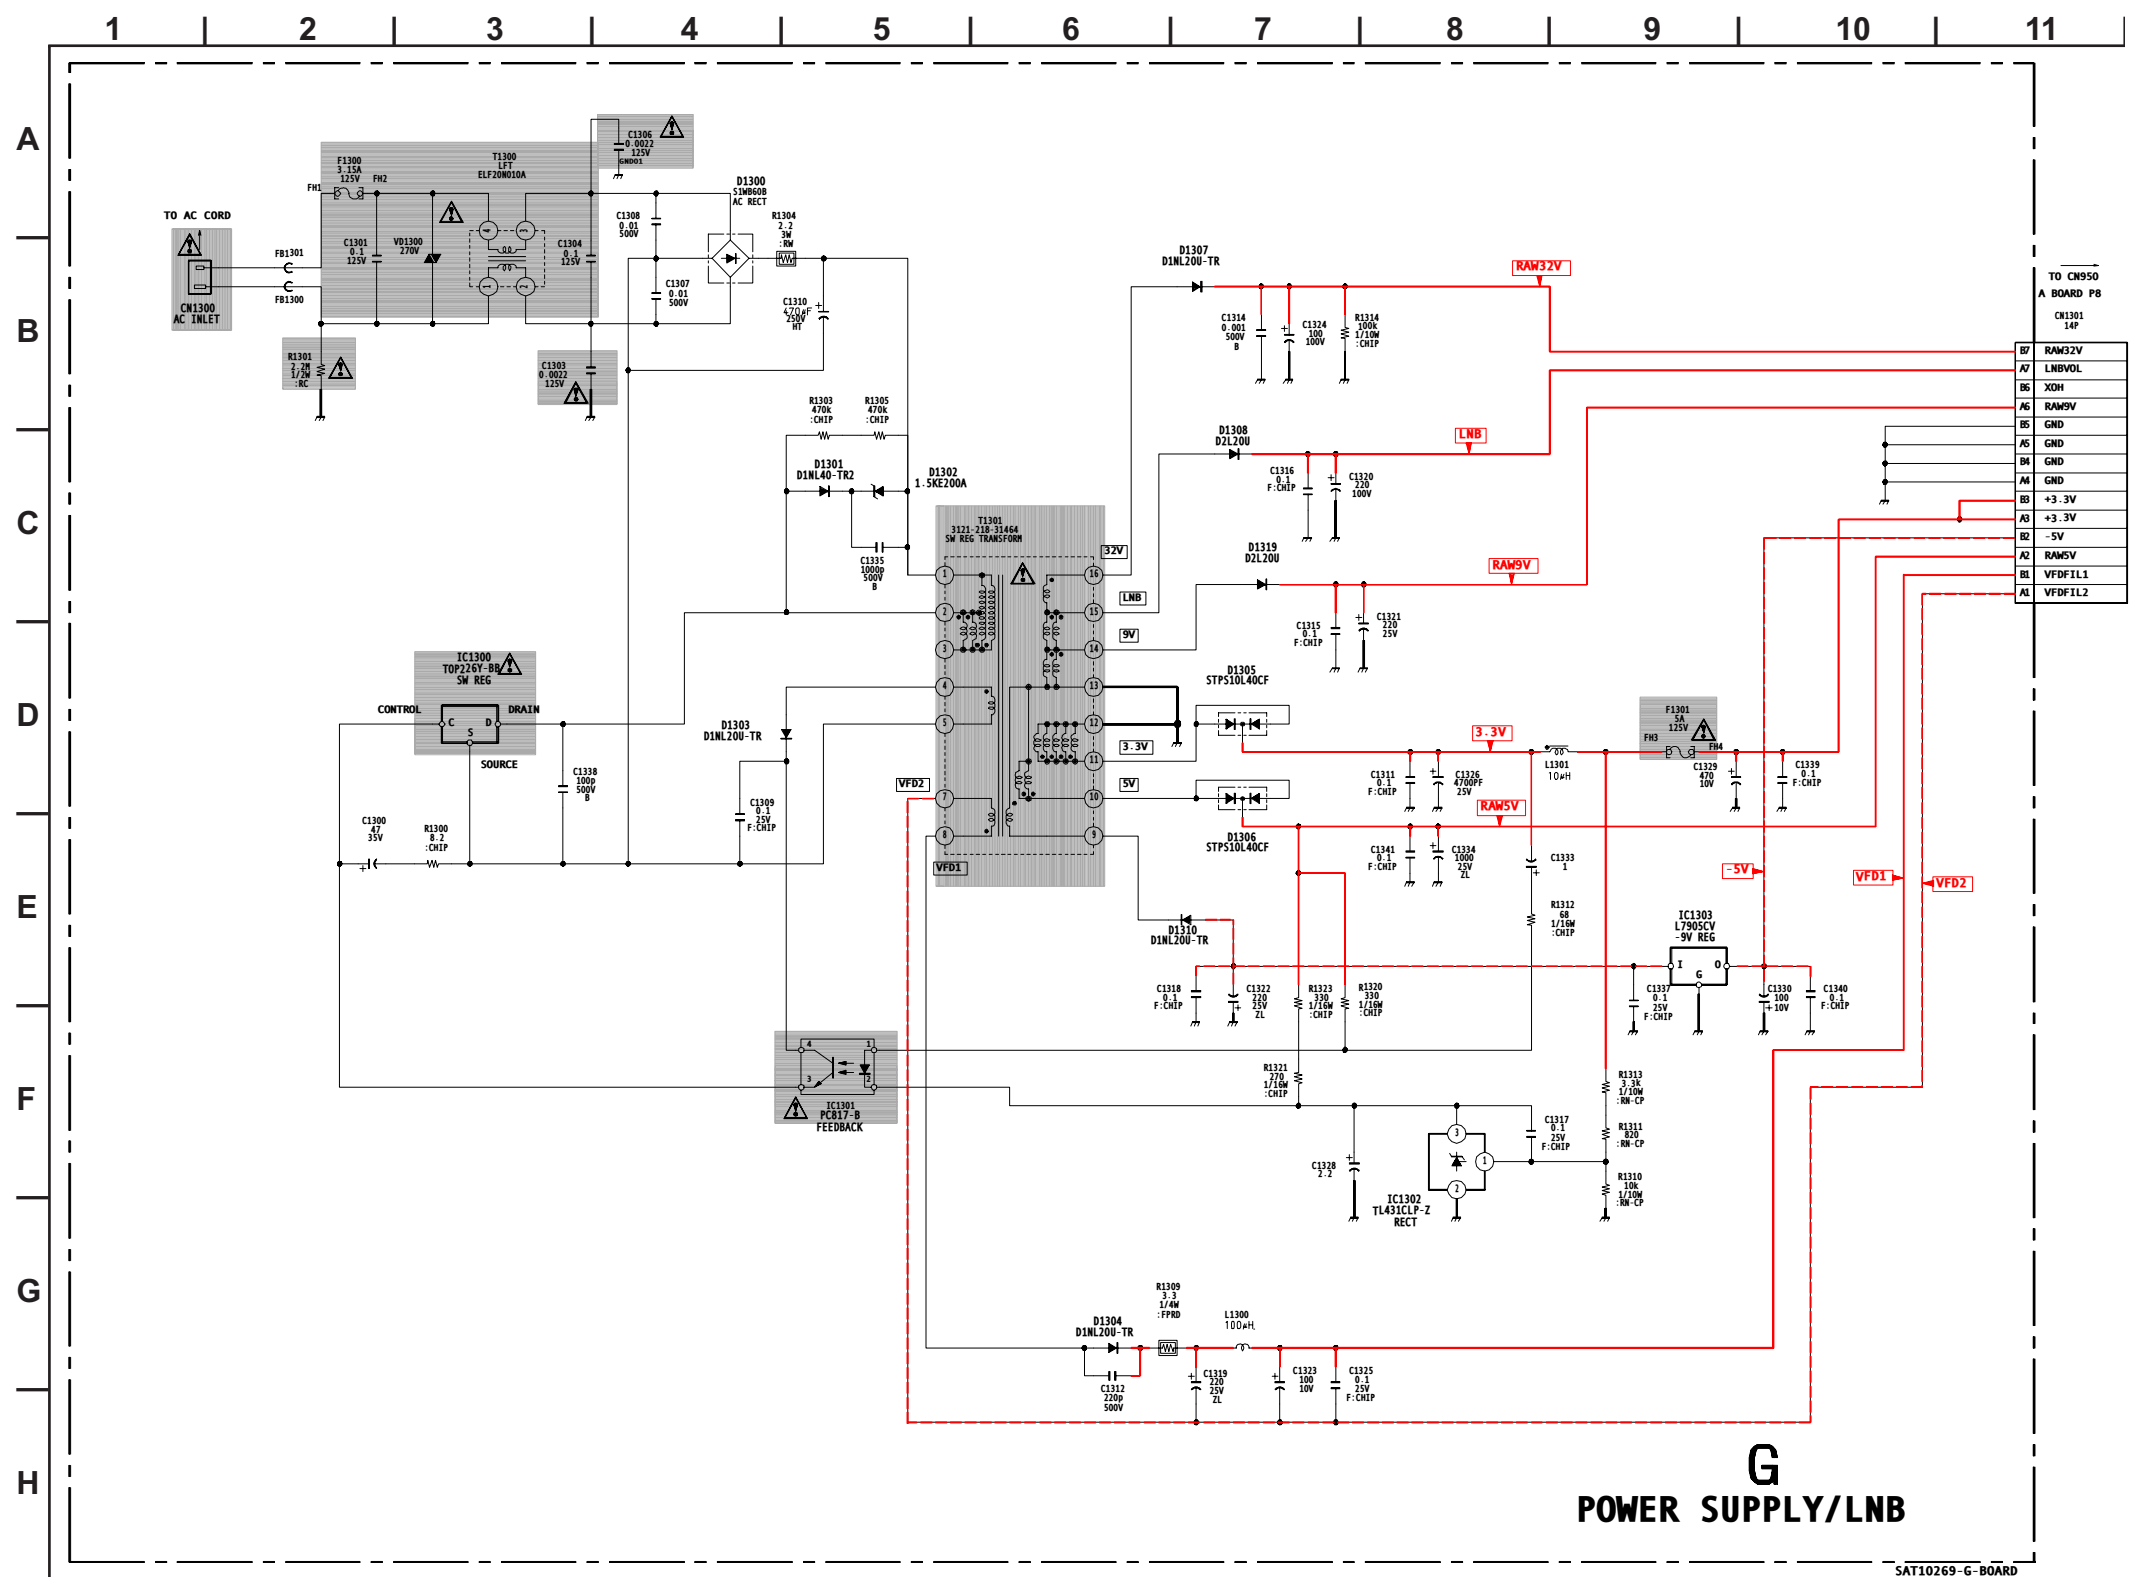


G [POWER SUPPLY/LNR]

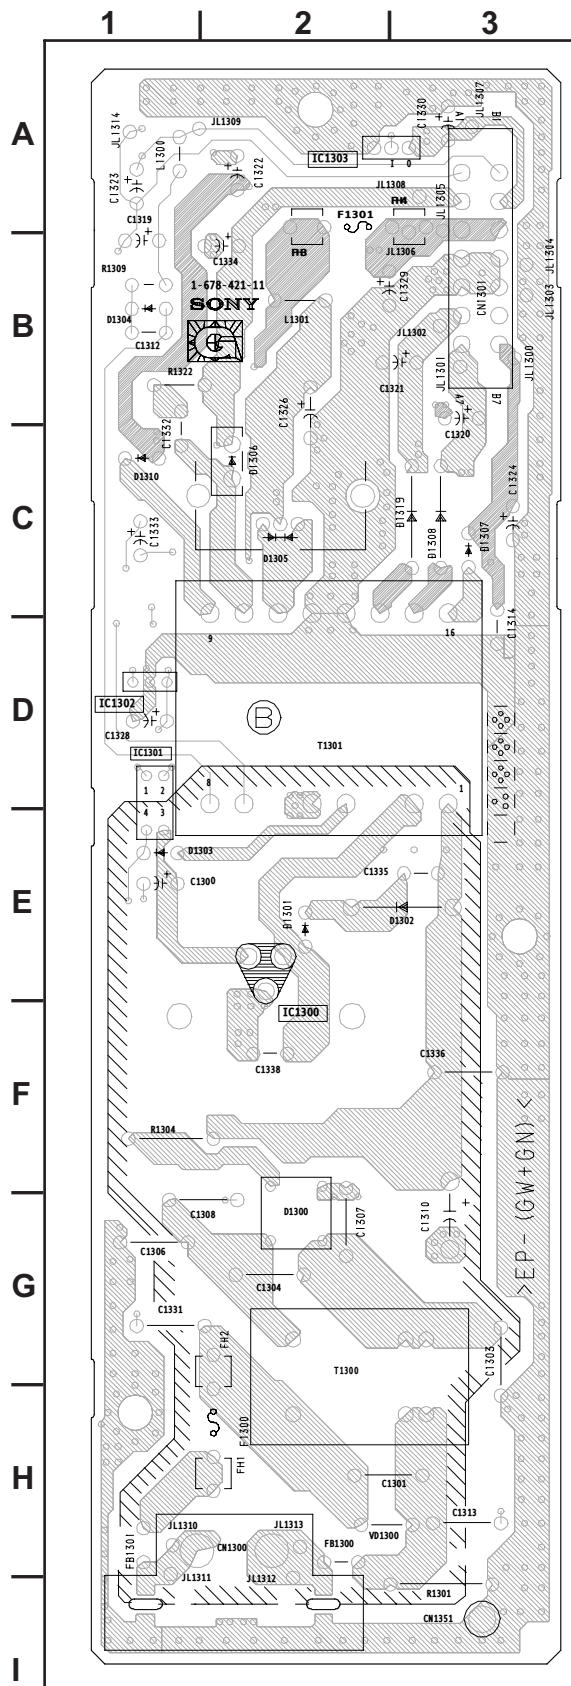


G BOARD LOCATOR LIST

IC	
IC1300	F-2
IC1301	D-1
IC1302	D-1
IC1303	A-2


HD [DISPLAY BOARD]

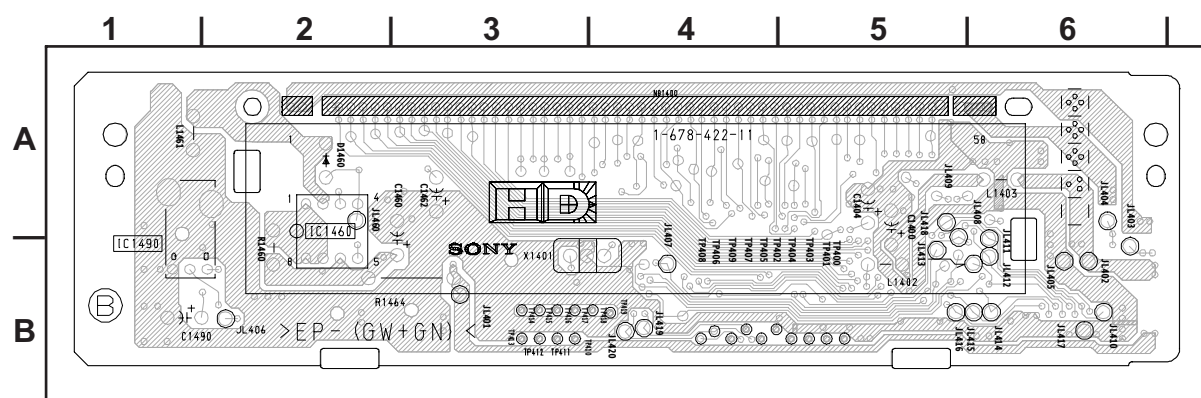


HP [POWER/MODE]

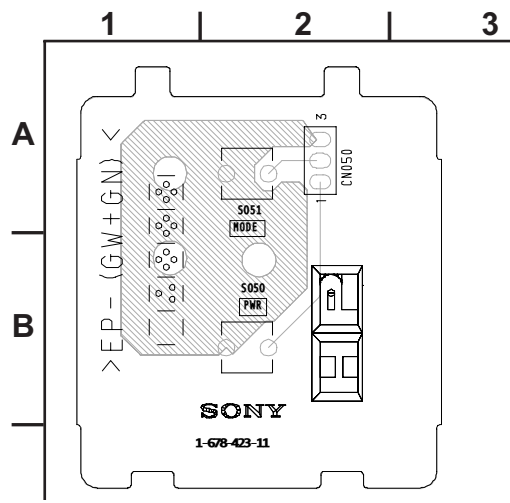

HP BOARD SCHEMATIC DIAGRAM

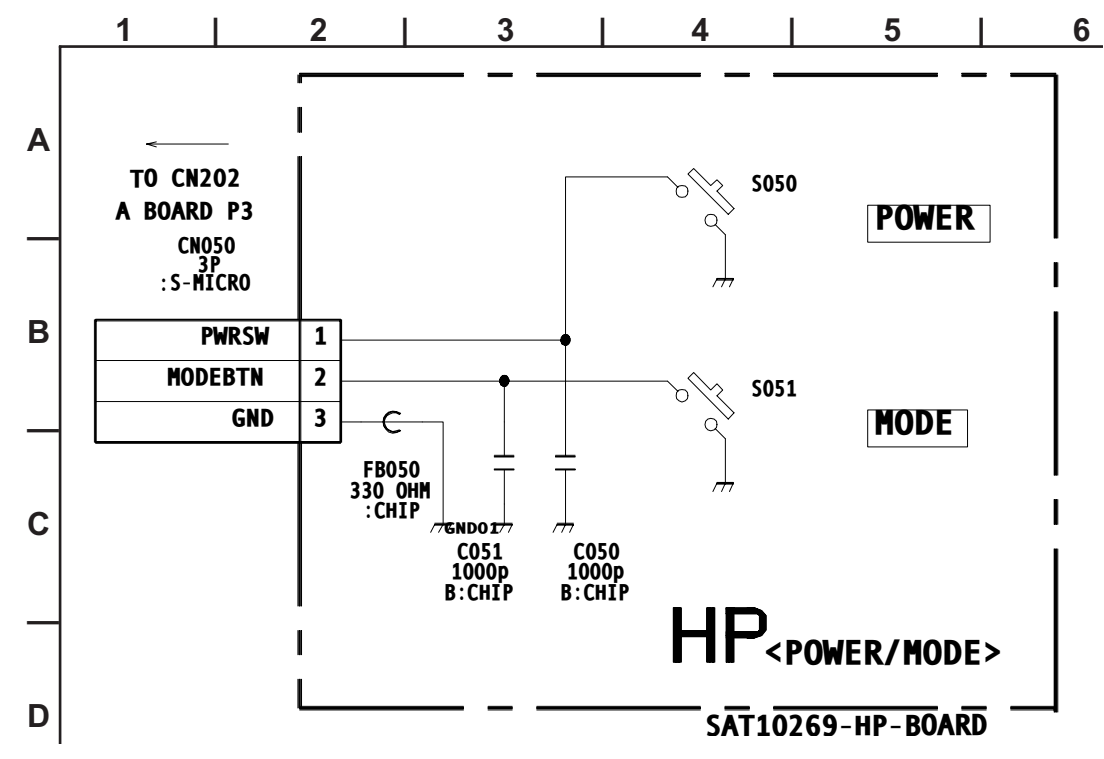


TU BOARD SCHEMATIC DIAGRAM

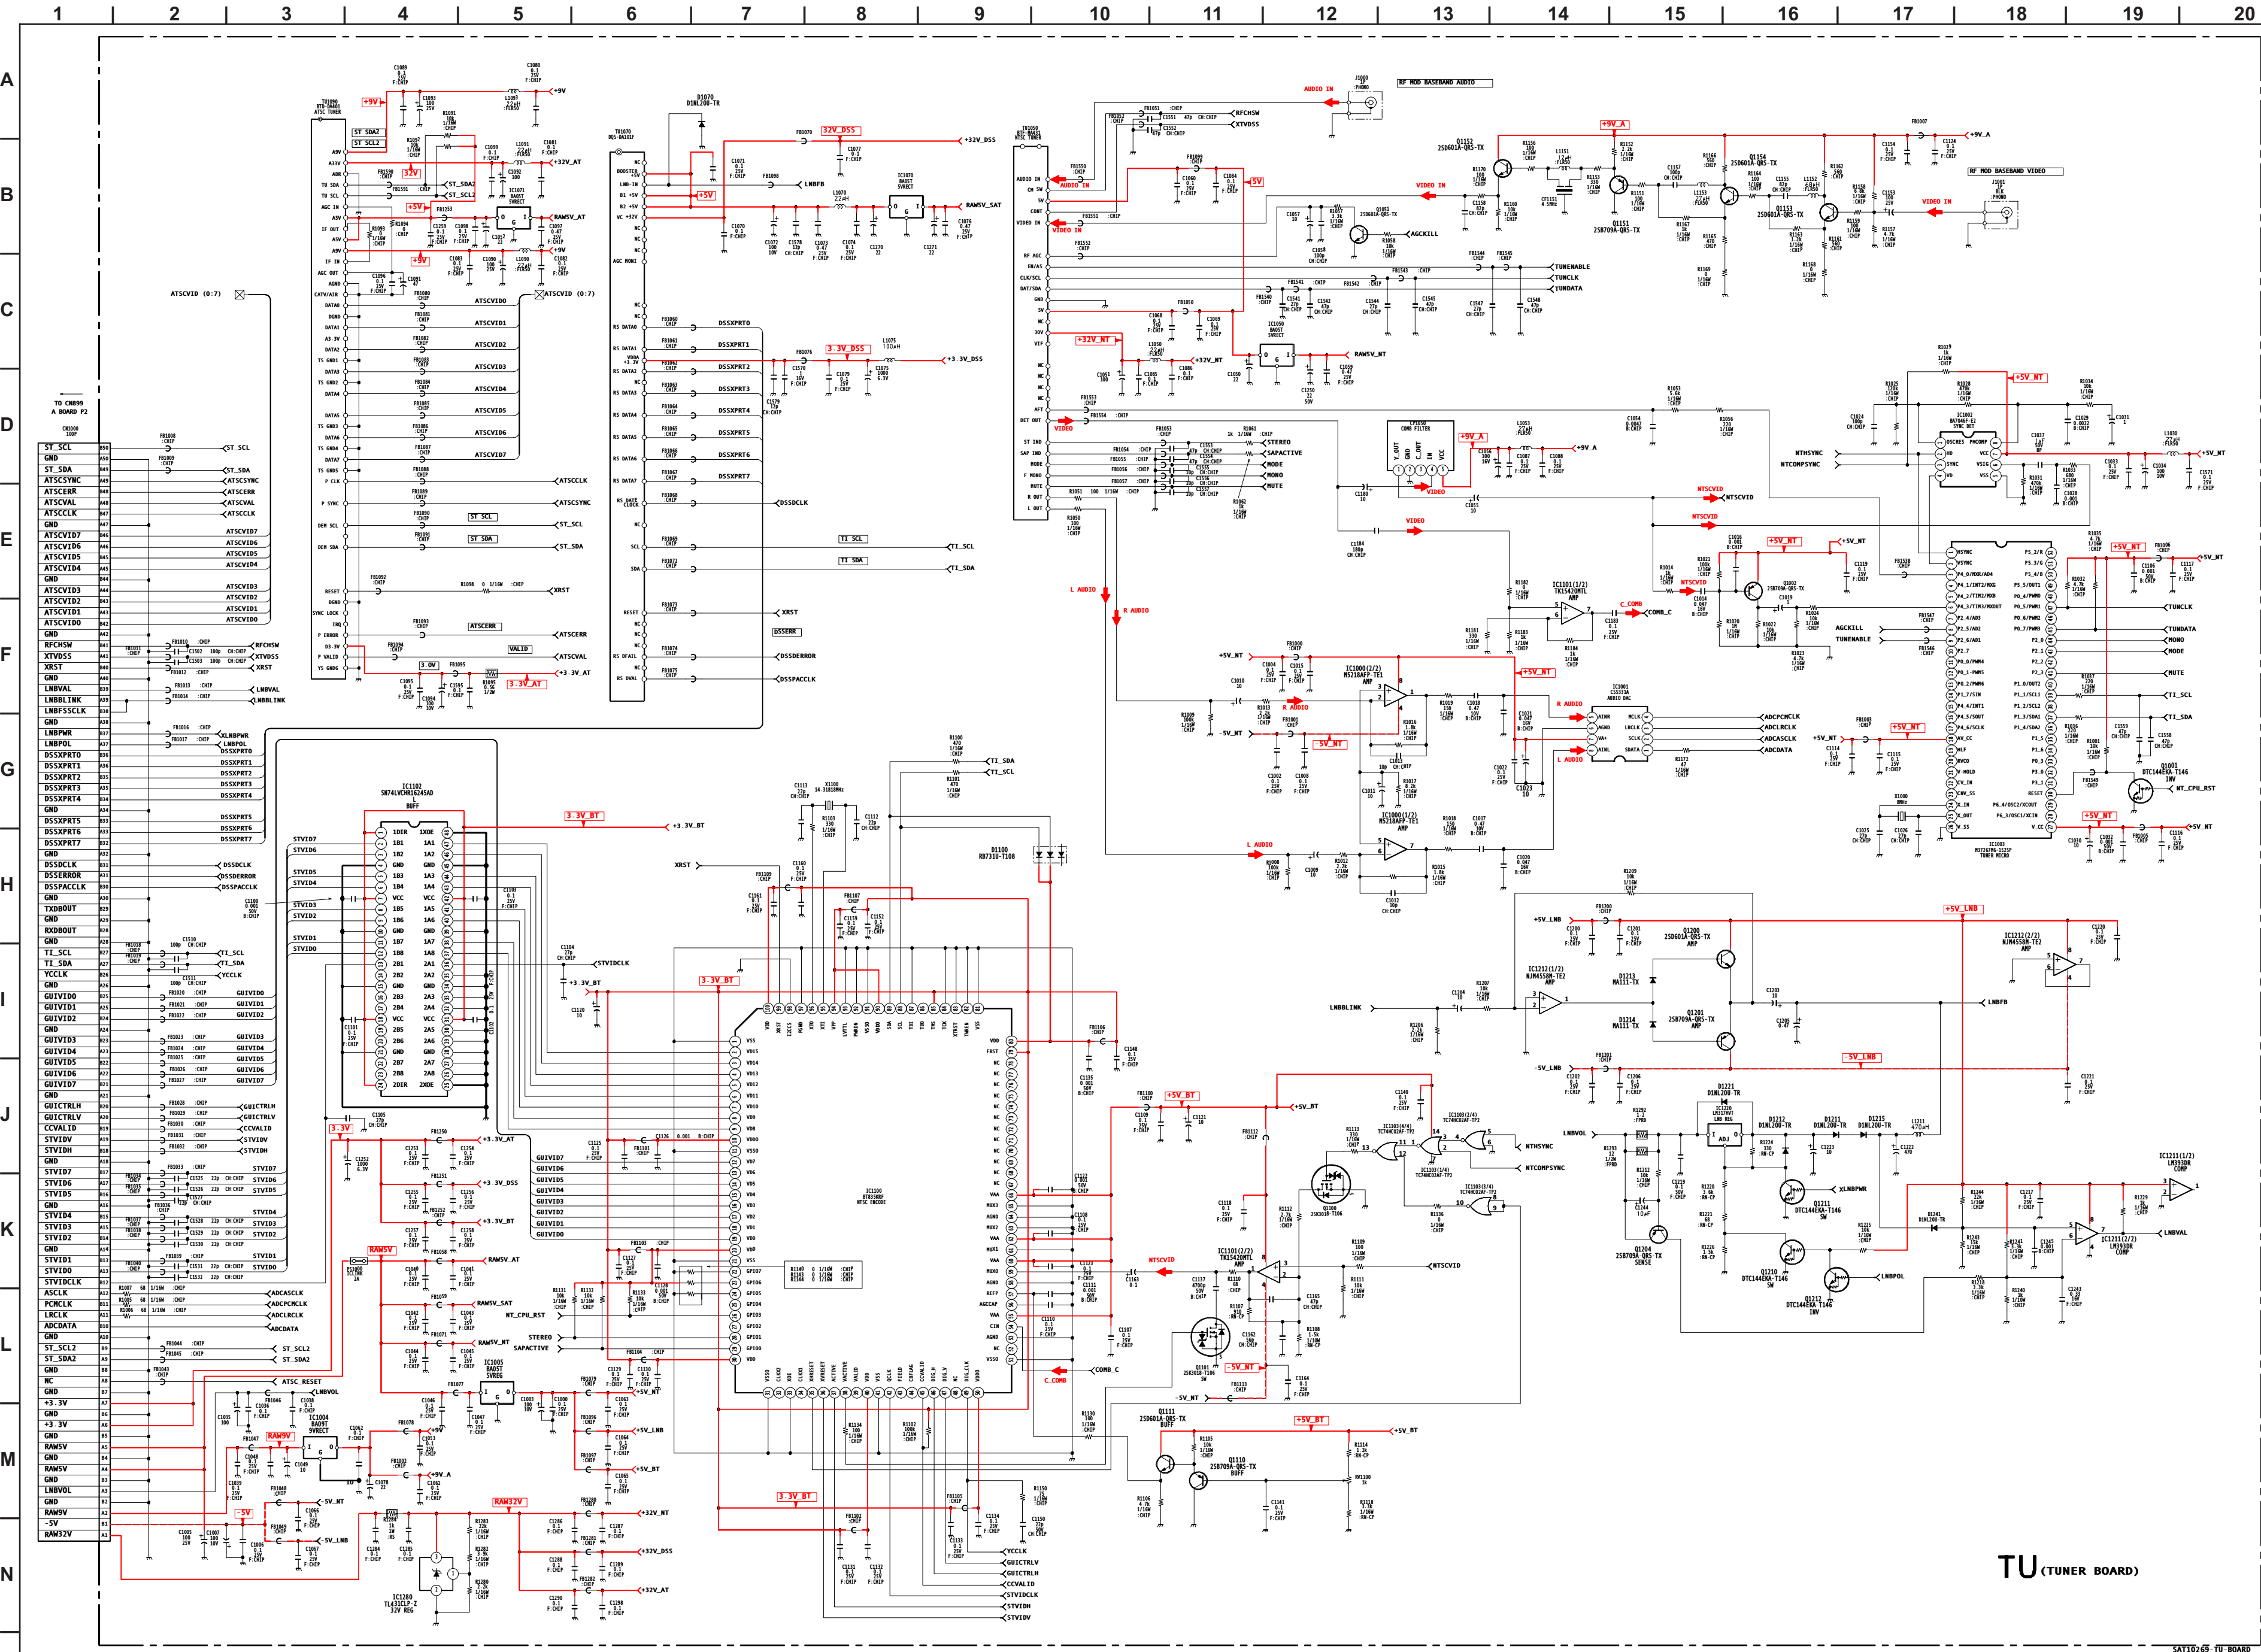

TU
[TUNER BOARD]


COMPONENT SIDE

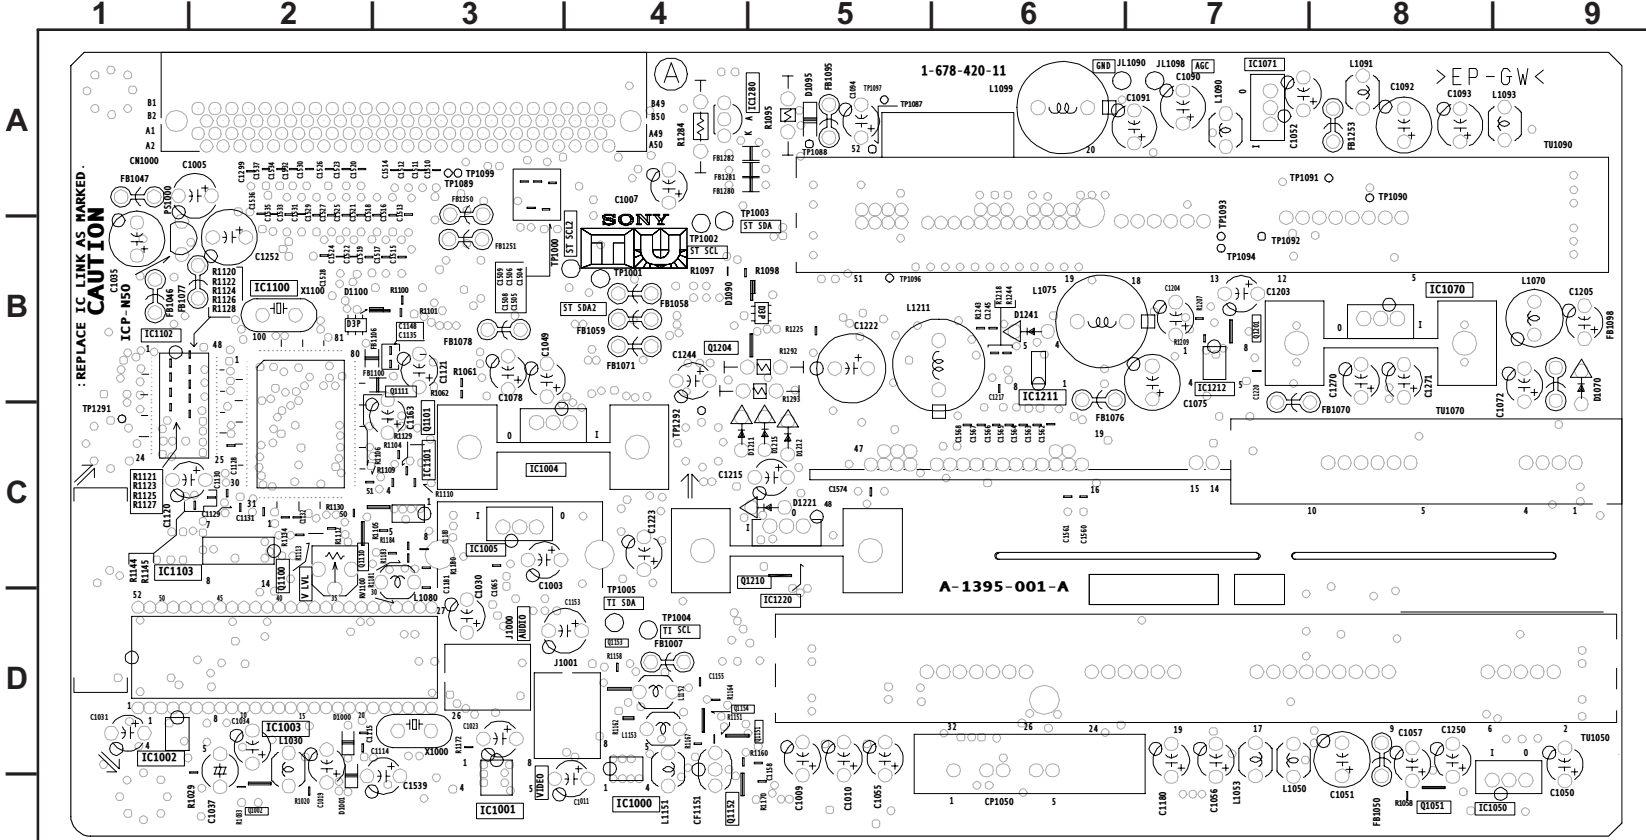

TU BOARD LOCATOR LIST (COMPONENT SIDE)


IC	IC1070	B-8	TRANSISTOR	Q1151	D-5
IC1000	E-4	IC1071	A-7	IC1220	D-5
IC1001	E-3	IC1100	B-2	IC1280	A-4
IC1002	D-1	IC1101	C-3	Q1002	E-2
IC1003	D-2	IC1102	B-1	Q1100	C-2
IC1004	C-3	IC1103	C-2	Q1101	C-3
IC1005	C-3	IC1211	B-6	Q1110	C-2
IC1050	E-8	IC1212	B-7	Q1111	B-3

CONDUCTOR SIDE

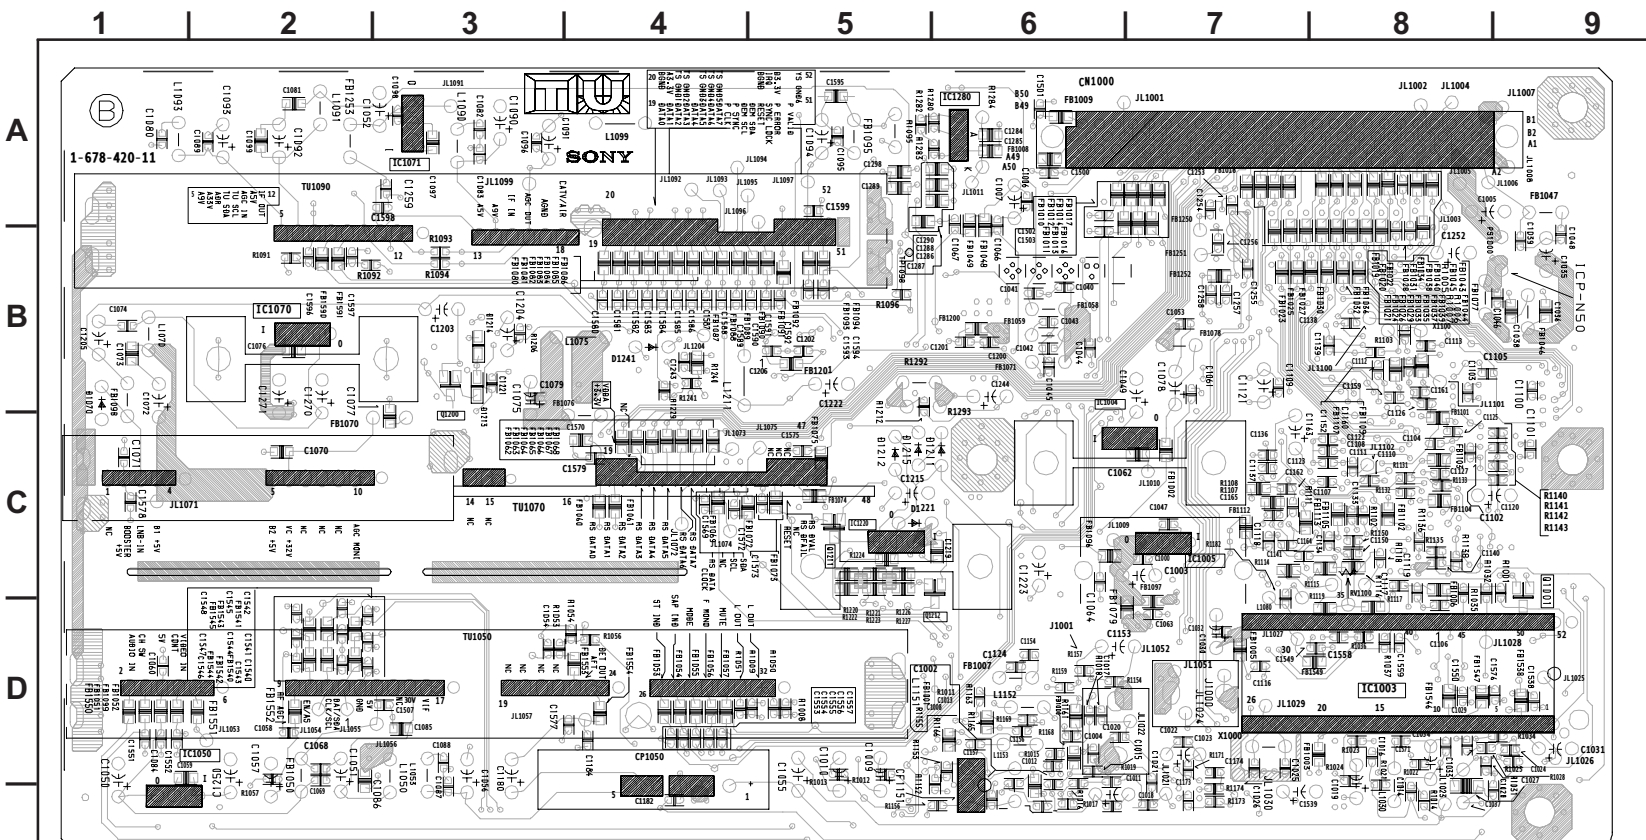


TU BOARD LOCATOR LIST (CONDUCTOR SIDE)

TRANSISTOR	Q1200	B-3
Q1001	C-9	Q1211
Q1051	D-2	Q1212

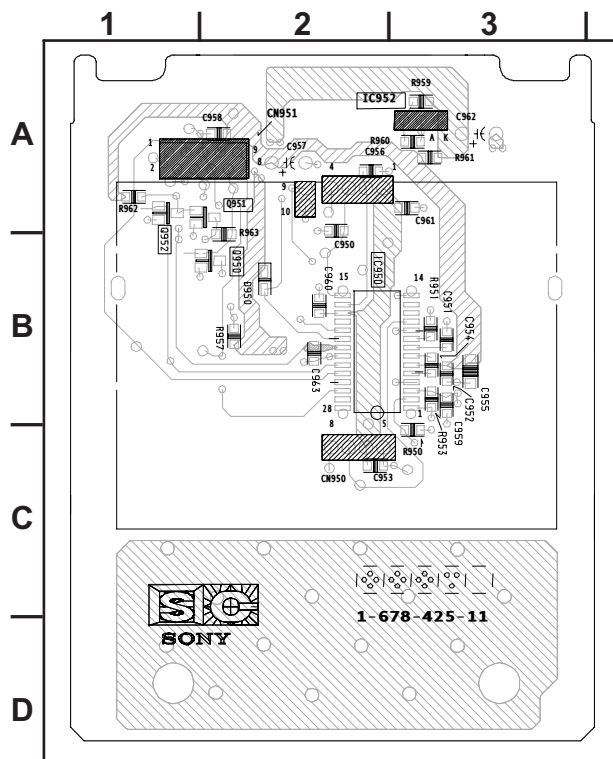


2-4. SEMICONDUCTORS


MN4SV17165BT-12

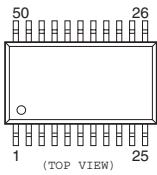


MC34063ABN




DAN202K




2SD774-34




SLR-325MCT31
SLR-325DCA47
SLR-325VRT31




TA7805S

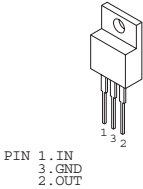


2SA1162-G0
2SD601A-Q
DTC144EK-T164




S2LA20F




MN150414SA1

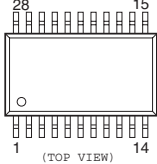


2SD2394-EF




UDZ-TE-17-6.8B




NJM78M05FA

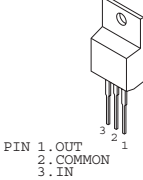

AT24C64N-10SC
BA10393F-E1
MC14577CF




PST575DMT-T1

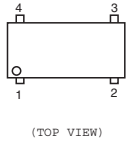


TL431CLP-Z




HVU359TRF
MA111




D5SC4M




MC7905CT
TOP224Y-B

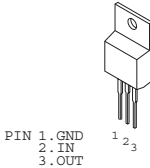


NJM2129M-TE2
SN74HCU04ANS-E20
TC74AC04F-EL

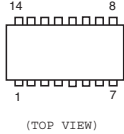

S1WB60B



RD6.2MW-T1B





DTA114WSA-TP



SECTION 3: EXPLODED VIEWS


Components not identified by a part number or description are not stocked because they are seldom required for routine service. The component parts of an assembly are indicated by the reference numbers in the far right column of the parts list and within the dotted lines of the diagram. * Items marked with an asterisk are not stocked since they are seldom required for routine service. Expect some delay when ordering these components.

NOTE: The components identified by shading and  mark are critical for safety. Replace only with part number specified.

NOTE: Les composants identifiés par un trame et une marque  sont critiques pour la securite. Ne les remplacer que par une piece portant le numero specifie.

3-1. FRONT

- 7-685-646-79 SCREW +BVTP 3 X 8
- 7-685-874-09 SCREW +BVTT 3 X 12

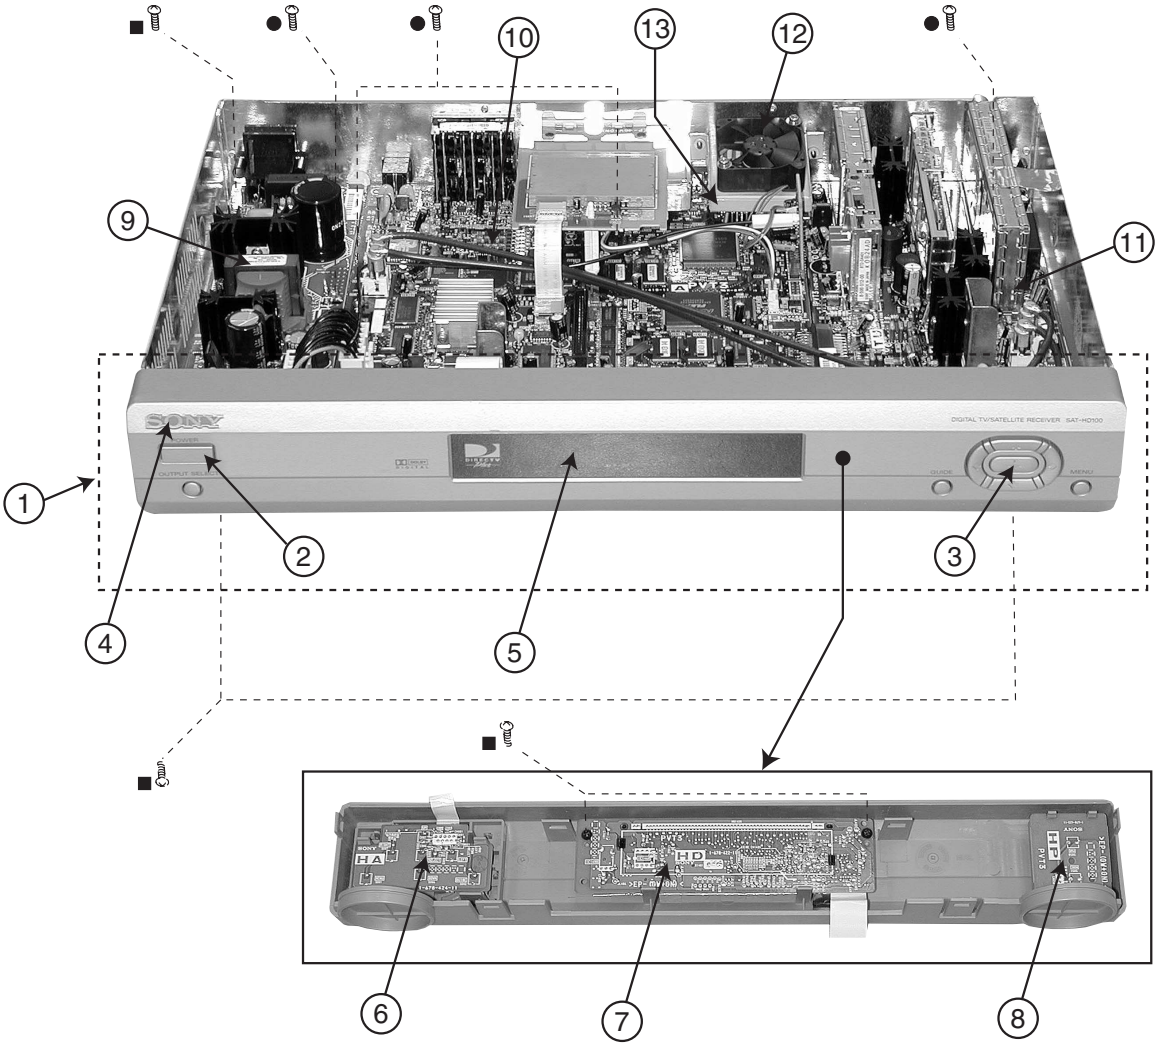


REF.NO.	PART NO.	DESCRIPTION	[Assembly Includes]	REF.NO.	PART NO.	DESCRIPTION
* 1	X-4037-969-1	PANEL ASSY, FRONT	2-3	* 8	A-1372-842-A	HP BOARD, MOUNTED
2	4-073-162-01	BUTTON, POWER		* 9	A-1316-523-A	G BOARD, COMPLETE
3	4-063-709-01	BUTTON, MULTI		* 10	A-1299-273-A	A BOARD, COMPLETE
4	4-942-568-61	EMBLEM (NO.5), SONY		* 11	A-1395-001-A	TU BOARD, COMPLETE
5	4-073-163-02	PANEL, INDICATOR		12	1-763-644-11	FAN, DC
* 6	A-1372-840-A	HA BOARD, MOUNTED		13	X-4038-994-1	PLENUM ASSY, FAN
* 7	A-1375-206-A	HD BOARD, COMPLETE				

NOTE: The components identified by shading and  mark are critical for safety. Replace only with part number specified.


NOTE: Les composants identifiés par un trame et une marque  sont critiques pour la securite. Ne les remplacer que par une piece portant le numero specifie.


3-2. REAR

- 7-685-646-79
- SCREW +BVTP 3 X 8

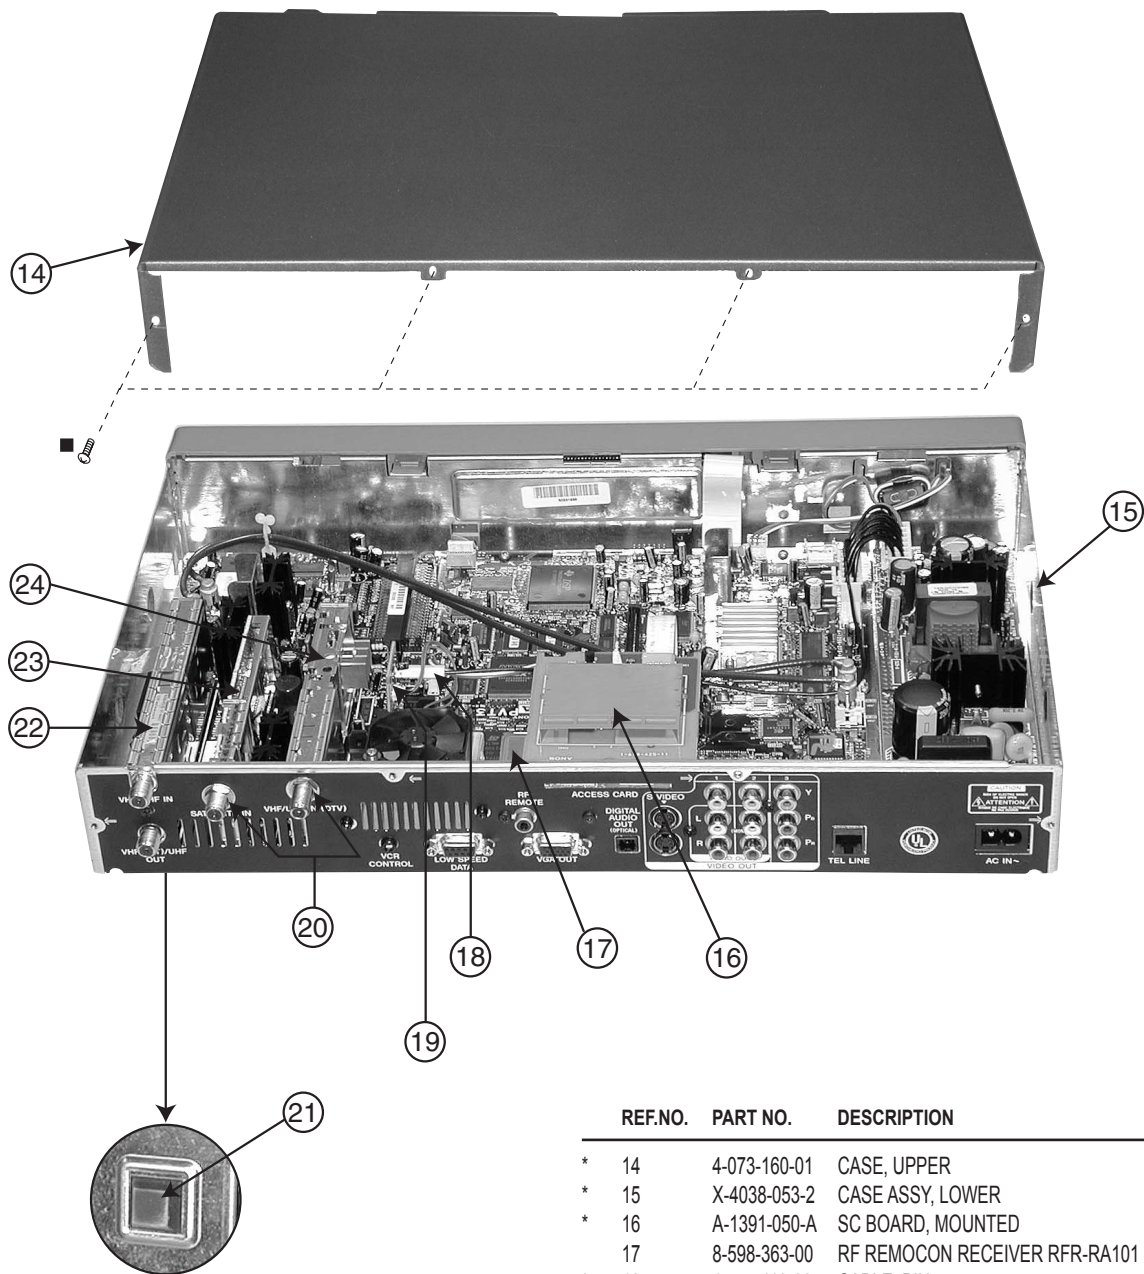

REF.NO.	PART NO.	DESCRIPTION
* 14	4-073-160-01	CASE, UPPER
* 15	X-4038-053-2	CASE ASSY, LOWER
* 16	A-1391-050-A	SC BOARD, MOUNTED
17	8-598-363-00	RF REMOCON RECEIVER RFR-RA101
* 18	1-555-110-00	CABLE, PIN
* 19	A-1241-486-A	FD BOARD, MOUNTED
20	3-682-691-00	NUT, WASHER HEXAGON
* 21	4-064-828-01	FOOT
22	8-598-473-50	TUNNER, FSS BTF-MA431
23	8-598-524-10	MODULE, INTERFACE DQS-DA101F
24	8-598-512-00	TUNER UNIT, DIGITAL BTD-DA401

NOTE: The components identified by shading and  mark are critical for safety. Replace only with part number specified.



NOTE: Les composants identifiés par un trame et une marque  sont critiques pour la securite. Ne les remplacer que par une piece portant le numero specifie.

3-3. SAN-18D3

REF. NO.	PART NO.	DESCRIPTION	[Assembly Includes]
* 1	X-4035-040-2	ARM ASSY, LNB11-13	2-3
2	8-598-326-02	CONVERTER, BS SAC-DA201	
* 3	4-061-590-01	ARM, LNB SUPPORT	
4	X-4035-039-2	REFLECTOR MOUNT ASSY	5-9
5	4-061-583-01	REFLECTOR	
* 6	4-061-576-11	MODEL NUMBER LABEL	
7	4-061-584-01	MOUNTING BASE REFLECTOR	
8	4-061-581-01	BOLT, 1/4- 20 UNC x 1/2 FORMING	
9	4-061-587-01	BOLT, 1/4-20 UNC X 7/8	
10	X-4035-030-1	MOUNT ASSY, UNIVERSAL	11-13
11	4-061-591-01	BOLT, 1/4-20 UNC x 1/2	
* 12	4-061-588-01	UNIVERSAL MOUNT MAST	
* 13	4-061-589-01	UNIVERSAL MOUNT FOOT	

PACKAGING / ACCESSORY ITEMS NOT SHOWN:

4-049-203-01	WATERPROOF COVER
4-049-478-01	CLIP (2)
1-251-841-11	SIGNAL SEEKER
3-867-456-21	INSTRUCTION MANUAL
4-061-577-11	CARTON

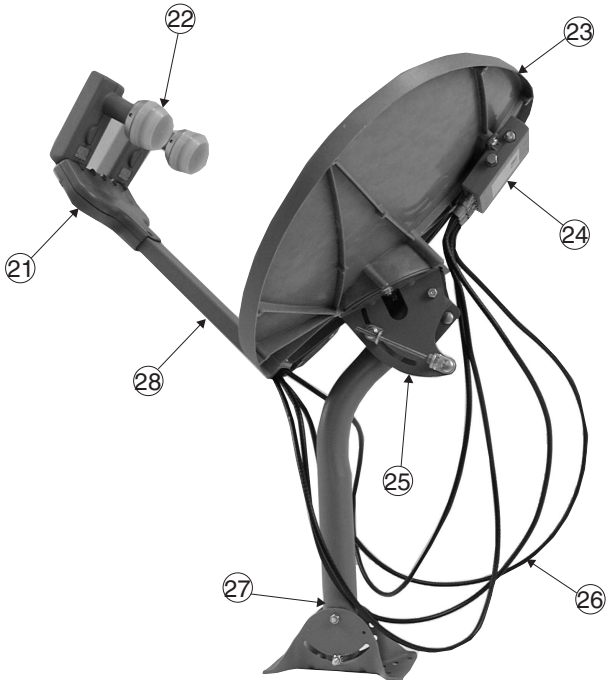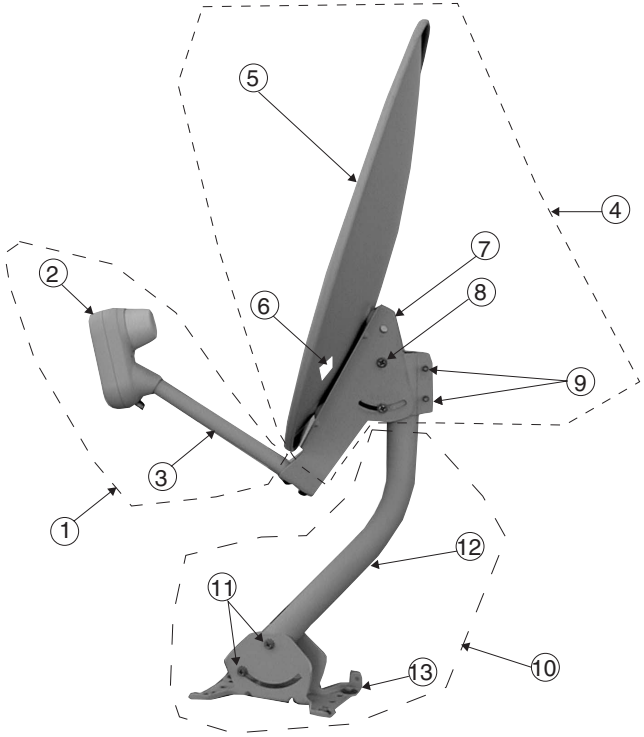

3-4. SAN-24MD1

REF. NO.	PART NO.	DESCRIPTION
* 21	9-885-008-31	LNB HOUSING
* 22	9-885-008-26	LNB DUAL OUTPUT (2)
23	9-885-008-21	REFLECTOR
24	9-885-008-27	OUTDOOR MULTI-SWITCH 4X4
* 25	9-885-008-23	TILT AZ-EI ASSEMBLY
26	9-885-008-28	CABLE SET
27	9-885-008-24	UNIVERSAL MOUNT ASSY
* 28	9-885-008-25	LNB SUPPORT ARM


ACCESSORY ITEMS NOT SHOWN:

* 9-885-008-29	HARDWARE BAG
9-885-008-30	HARDWARE BAG FINE TUNE ADJ.

SECTION 4: ELECTRICAL PARTS LIST

A**RESISTORS**


- All resistors are in ohms
- F : nonflammable
- All variable and adjustable resistors have characteristic curve B, unless otherwise noted.


The components in this manual identified by the following symbol:  indicate parts that have been carefully factory-selected to satisfy regulations regarding X-ray radiation for each set.

Should replacement be required for one of these components, replace only with the value originally used.

When ordering parts by reference number, please include the board name.

* Items marked with an asterisk are not stocked since they are seldom required for routine service. Expect some delay when ordering these components.

NOTE: The components identified by shading and  mark are critical for safety. Replace only with part number specified.

NOTE: Les composants identifiés par un trame et une marque  sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

REF.NO.	PART NO.	DESCRIPTION	VALUES			REF.NO.	PART NO.	DESCRIPTION	VALUES			
<div>A</div>	* A-1299-273-A A BOARD, COMPLETE											
	3-741-396-01	INSULATOR				C138	1-165-112-11	CERAMIC CHIP	0.33μF	16V		
	4-382-854-01	SCREW (M3X8), P, SW (+)				C139	1-165-112-11	CERAMIC CHIP	0.33μF	16V		
	CAPACITOR					C140	1-162-964-11	CERAMIC CHIP	0.001μF	10%	50V	
	C100	1-162-964-11	CERAMIC CHIP	0.001μF	10%	50V	C141	1-104-665-11	ELECT	100μF	20%	10V
	C101	1-165-112-11	CERAMIC CHIP	0.33μF	16V		C142	1-162-964-11	CERAMIC CHIP	0.001μF	10%	50V
	C102	1-165-112-11	CERAMIC CHIP	0.33μF	16V		C143	1-104-665-11	ELECT	100μF	20%	10V
	C103	1-165-112-11	CERAMIC CHIP	0.33μF	16V		C145	1-126-960-11	ELECT	1μF	20%	50V
	C104	1-162-964-11	CERAMIC CHIP	0.001μF	10%	50V	C146	1-164-156-11	CERAMIC CHIP	0.1μF		25V
	C105	1-104-665-11	ELECT	100μF	20%	10V	C147	1-162-922-11	CERAMIC CHIP	39pF	5%	50V
C108	1-165-112-11	CERAMIC CHIP	0.33μF	16V		C149	1-162-922-11	CERAMIC CHIP	39pF	5%	50V	
C109	1-162-964-11	CERAMIC CHIP	0.001μF	10%	50V	C150	1-164-156-11	CERAMIC CHIP	0.1μF		25V	
C110	1-165-112-11	CERAMIC CHIP	0.33μF	16V		C154	1-164-156-11	CERAMIC CHIP	0.1μF		25V	
C111	1-162-964-11	CERAMIC CHIP	0.001μF	10%	50V	C155	1-162-964-11	CERAMIC CHIP	0.001μF	10%	50V	
C112	1-165-112-11	CERAMIC CHIP	0.33μF	16V		C156	1-126-933-11	ELECT	100μF	20%	16V	
C113	1-162-964-11	CERAMIC CHIP	0.001μF	10%	50V	C157	1-162-919-11	CERAMIC CHIP	22pF	5%	50V	
C114	1-162-964-11	CERAMIC CHIP	0.001μF	10%	50V	C158	1-113-619-11	CERAMIC CHIP	0.47μF	10V		
C115	1-165-112-11	CERAMIC CHIP	0.33μF	16V		C159	1-162-923-11	CERAMIC CHIP	47pF	5%	50V	
C117	1-162-964-11	CERAMIC CHIP	0.001μF	10%	50V	C160	1-126-964-11	ELECT	10μF	20%	50V	
C118	1-165-112-11	CERAMIC CHIP	0.33μF	16V		C200	1-162-919-11	CERAMIC CHIP	22pF	5%	50V	
C120	1-165-112-11	CERAMIC CHIP	0.33μF	16V		C201	1-164-156-11	CERAMIC CHIP	0.1μF		25V	
C121	1-162-964-11	CERAMIC CHIP	0.001μF	10%	50V	C203	1-164-156-11	CERAMIC CHIP	0.1μF		25V	
C123	1-162-964-11	CERAMIC CHIP	0.001μF	10%	50V	C204	1-162-927-11	CERAMIC CHIP	100pF	5%	50V	
C127	1-164-156-11	CERAMIC CHIP	0.1μF		25V	C205	1-162-927-11	CERAMIC CHIP	100pF	5%	50V	
C128	1-164-156-11	CERAMIC CHIP	0.1μF		25V	C206	1-162-927-11	CERAMIC CHIP	100pF	5%	50V	
C129	1-165-112-11	CERAMIC CHIP	0.33μF	16V		C209	1-164-156-11	CERAMIC CHIP	0.1μF		25V	
C130	1-165-112-11	CERAMIC CHIP	0.33μF	16V		C210	1-164-156-11	CERAMIC CHIP	0.1μF		25V	
C131	1-162-964-11	CERAMIC CHIP	0.001μF	10%	50V	C213	1-162-964-11	CERAMIC CHIP	0.001μF	10%	50V	
C132	1-165-112-11	CERAMIC CHIP	0.33μF	16V		C214	1-164-156-11	CERAMIC CHIP	0.1μF		25V	
C133	1-162-916-11	CERAMIC CHIP	12pF	5%	50V	C216	1-162-964-11	CERAMIC CHIP	0.001μF	10%	50V	
C134	1-165-112-11	CERAMIC CHIP	0.33μF	16V		C217	1-164-156-11	CERAMIC CHIP	0.1μF		25V	
C135	1-162-964-11	CERAMIC CHIP	0.001μF	10%	50V	C218	1-162-964-11	CERAMIC CHIP	0.001μF	10%	50V	
C136	1-162-964-11	CERAMIC CHIP	0.001μF	10%	50V	C219	1-164-156-11	CERAMIC CHIP	0.1μF		25V	
C137	1-165-112-11	CERAMIC CHIP	0.33μF	16V		C220	1-164-156-11	CERAMIC CHIP	0.1μF		25V	
						C221	1-162-922-11	CERAMIC CHIP	39pF	5%	50V	
						C222	1-164-156-11	CERAMIC CHIP	0.1μF		25V	
						C223	1-162-922-11	CERAMIC CHIP	39pF	5%	50V	
						C224	1-164-156-11	CERAMIC CHIP	0.1μF		25V	
						C225	1-164-156-11	CERAMIC CHIP	0.1μF		25V	

A

REF.NO.	PART NO.	DESCRIPTION	VALUES			REF.NO.	PART NO.	DESCRIPTION	VALUES		
C226	1-164-227-11	CERAMIC CHIP	0.022μF	10%	25V	C333	1-162-964-11	CERAMIC CHIP	0.001μF	10%	50V
C227	1-164-156-11	CERAMIC CHIP	0.1μF		25V	C334	1-164-156-11	CERAMIC CHIP	0.1μF		25V
C228	1-164-156-11	CERAMIC CHIP	0.1μF		25V	C335	1-162-964-11	CERAMIC CHIP	0.001μF	10%	50V
C229	1-162-964-11	CERAMIC CHIP	0.001μF	10%	50V	C336	1-164-156-11	CERAMIC CHIP	0.1μF		25V
C230	1-164-156-11	CERAMIC CHIP	0.1μF		25V	C337	1-164-156-11	CERAMIC CHIP	0.1μF		25V
C233	1-126-964-11	ELECT	10μF	20%	50V	C338	1-164-156-11	CERAMIC CHIP	0.1μF		25V
C234	1-126-965-11	ELECT	22μF	20%	50V	C339	1-164-156-11	CERAMIC CHIP	0.1μF		25V
C235	1-126-964-11	ELECT	10μF	20%	50V	C340	1-164-156-11	CERAMIC CHIP	0.1μF		25V
C250	1-162-964-11	CERAMIC CHIP	0.001μF	10%	50V	C341	1-164-156-11	CERAMIC CHIP	0.1μF		25V
C251	1-162-927-11	CERAMIC CHIP	100pF	5%	50V	C342	1-104-665-11	ELECT	100μF	20%	10V
C252	1-162-927-11	CERAMIC CHIP	100pF	5%	50V	C343	1-162-964-11	CERAMIC CHIP	0.001μF	10%	50V
C253	1-164-156-11	CERAMIC CHIP	0.1μF		25V	C344	1-162-923-11	CERAMIC CHIP	47pF	5%	50V
C254	1-164-156-11	CERAMIC CHIP	0.1μF		25V	C345	1-107-826-11	CERAMIC CHIP	0.1μF	10%	16V
C299	1-162-919-11	CERAMIC CHIP	22pF	5%	50V	C346	1-162-970-11	CERAMIC CHIP	0.01μF	10%	25V
C300	1-164-156-11	CERAMIC CHIP	0.1μF		25V	C347	1-107-826-11	CERAMIC CHIP	0.1μF	10%	16V
C301	1-162-964-11	CERAMIC CHIP	0.001μF	10%	50V	C348	1-162-970-11	CERAMIC CHIP	0.01μF	10%	25V
C302	1-164-156-11	CERAMIC CHIP	0.1μF		25V	C349	1-162-970-11	CERAMIC CHIP	0.01μF	10%	25V
C303	1-162-964-11	CERAMIC CHIP	0.001μF	10%	50V	C350	1-162-964-11	CERAMIC CHIP	0.001μF	10%	50V
C304	1-164-156-11	CERAMIC CHIP	0.1μF		25V	C351	1-107-826-11	CERAMIC CHIP	0.1μF	10%	16V
C305	1-164-156-11	CERAMIC CHIP	0.1μF		25V	C352	1-162-970-11	CERAMIC CHIP	0.01μF	10%	25V
C306	1-164-156-11	CERAMIC CHIP	0.1μF		25V	C353	1-162-970-11	CERAMIC CHIP	0.01μF	10%	25V
C307	1-164-156-11	CERAMIC CHIP	0.1μF		25V	C354	1-107-826-11	CERAMIC CHIP	0.1μF	10%	16V
C308	1-162-919-11	CERAMIC CHIP	22pF	5%	50V	C355	1-162-927-11	CERAMIC CHIP	100pF	5%	50V
C309	1-164-156-11	CERAMIC CHIP	0.1μF		25V	C356	1-162-966-11	CERAMIC CHIP	0.0022μF	10%	50V
C310	1-162-964-11	CERAMIC CHIP	0.001μF	10%	50V	C357	1-126-933-11	ELECT	100μF	20%	16V
C311	1-164-156-11	CERAMIC CHIP	0.1μF		25V	C358	1-164-156-11	CERAMIC CHIP	0.1μF		25V
C312	1-164-156-11	CERAMIC CHIP	0.1μF		25V	C359	1-164-156-11	CERAMIC CHIP	0.1μF		25V
C313	1-162-919-11	CERAMIC CHIP	22pF	5%	50V	C360	1-164-156-11	CERAMIC CHIP	0.1μF		25V
C314	1-164-156-11	CERAMIC CHIP	0.1μF		25V	C361	1-164-156-11	CERAMIC CHIP	0.1μF		25V
C315	1-164-156-11	CERAMIC CHIP	0.1μF		25V	C362	1-164-156-11	CERAMIC CHIP	0.1μF		25V
C316	1-164-156-11	CERAMIC CHIP	0.1μF		25V	C363	1-162-916-11	CERAMIC CHIP	12pF	5%	50V
C317	1-164-156-11	CERAMIC CHIP	0.1μF		25V	C364	1-162-916-11	CERAMIC CHIP	12pF	5%	50V
C318	1-164-156-11	CERAMIC CHIP	0.1μF		25V	C365	1-162-970-11	CERAMIC CHIP	0.01μF	10%	25V
C319	1-164-156-11	CERAMIC CHIP	0.1μF		25V	C366	1-126-916-11	ELECT	1000μF	20%	6.3V
C320	1-164-156-11	CERAMIC CHIP	0.1μF		25V	C367	1-162-970-11	CERAMIC CHIP	0.01μF	10%	25V
C321	1-164-156-11	CERAMIC CHIP	0.1μF		25V	C368	1-126-916-11	ELECT	1000μF	20%	6.3V
C322	1-164-156-11	CERAMIC CHIP	0.1μF		25V	C369	1-162-920-11	CERAMIC CHIP	27pF	5%	50V
C323	1-164-156-11	CERAMIC CHIP	0.1μF		25V	C370	1-126-916-11	ELECT	1000μF	20%	6.3V
C324	1-164-156-11	CERAMIC CHIP	0.1μF		25V	C400	1-162-919-11	CERAMIC CHIP	22pF	5%	50V
C325	1-164-156-11	CERAMIC CHIP	0.1μF		25V	C401	1-162-919-11	CERAMIC CHIP	22pF	5%	50V
C326	1-164-156-11	CERAMIC CHIP	0.1μF		25V	C402	1-164-156-11	CERAMIC CHIP	0.1μF		25V
C327	1-162-964-11	CERAMIC CHIP	0.001μF	10%	50V	C403	1-104-665-11	ELECT	100μF	20%	10V
C328	1-164-156-11	CERAMIC CHIP	0.1μF		25V	C404	1-164-156-11	CERAMIC CHIP	0.1μF		25V
C329	1-162-964-11	CERAMIC CHIP	0.001μF	10%	50V	C405	1-162-964-11	CERAMIC CHIP	0.001μF	10%	50V
C330	1-164-156-11	CERAMIC CHIP	0.1μF		25V	C406	1-164-156-11	CERAMIC CHIP	0.1μF		25V
C331	1-164-156-11	CERAMIC CHIP	0.1μF		25V	C407	1-164-156-11	CERAMIC CHIP	0.1μF		25V
C332	1-164-156-11	CERAMIC CHIP	0.1μF		25V	C408	1-164-156-11	CERAMIC CHIP	0.1μF		25V





REF.NO.	PART NO.	DESCRIPTION	VALUES			REF.NO.	PART NO.	DESCRIPTION	VALUES		
C409	1-164-156-11	CERAMIC CHIP	0.1μF		25V	C481	1-164-378-11	CERAMIC CHIP	30pF	5%	50V
C410	1-162-964-11	CERAMIC CHIP	0.001μF	10%	50V	C483	1-164-155-11	CERAMIC CHIP	75pF	5%	50V
C411	1-164-156-11	CERAMIC CHIP	0.1μF		25V	C485	1-162-926-11	CERAMIC CHIP	82pF	5%	50V
C412	1-164-156-11	CERAMIC CHIP	0.1μF		25V	C486	1-164-156-11	CERAMIC CHIP	0.1μF		25V
C415	1-164-156-11	CERAMIC CHIP	0.1μF		25V	C487	1-164-156-11	CERAMIC CHIP	0.1μF		25V
C416	1-164-156-11	CERAMIC CHIP	0.1μF		25V	C488	1-162-926-11	CERAMIC CHIP	82pF	5%	50V
C417	1-164-156-11	CERAMIC CHIP	0.1μF		25V	C489	1-164-156-11	CERAMIC CHIP	0.1μF		25V
C420	1-164-156-11	CERAMIC CHIP	0.1μF		25V	C490	1-164-217-11	CERAMIC CHIP	150pF	5%	50V
C421	1-164-378-11	CERAMIC CHIP	30pF	5%	50V	C491	1-164-156-11	CERAMIC CHIP	0.1μF		25V
C423	1-164-155-11	CERAMIC CHIP	75pF	5%	50V	C492	1-164-156-11	CERAMIC CHIP	0.1μF		25V
C425	1-162-926-11	CERAMIC CHIP	82pF	5%	50V	C493	1-164-156-11	CERAMIC CHIP	0.1μF		25V
C427	1-162-926-11	CERAMIC CHIP	82pF	5%	50V	C494	1-164-156-11	CERAMIC CHIP	0.1μF		25V
C429	1-164-217-11	CERAMIC CHIP	150pF	5%	50V	C495	1-162-919-11	CERAMIC CHIP	22pF	5%	50V
C430	1-164-460-11	CERAMIC CHIP	62pF	5%	50V	C496	1-164-156-11	CERAMIC CHIP	0.1μF		25V
C431	1-164-460-11	CERAMIC CHIP	62pF	5%	50V	C498	1-164-156-11	CERAMIC CHIP	0.1μF		25V
C433	1-164-156-11	CERAMIC CHIP	0.1μF		25V	C499	1-162-964-11	CERAMIC CHIP	0.001μF	10%	50V
C434	1-162-919-11	CERAMIC CHIP	22pF	5%	50V	C500	1-126-960-11	ELECT	1μF	20%	50V
C437	1-164-156-11	CERAMIC CHIP	0.1μF		25V	C501	1-162-919-11	CERAMIC CHIP	22pF	5%	50V
C438	1-164-156-11	CERAMIC CHIP	0.1μF		25V	C502	1-126-960-11	ELECT	1μF	20%	50V
C440	1-164-156-11	CERAMIC CHIP	0.1μF		25V	C503	1-126-960-11	ELECT	1μF	20%	50V
C441	1-164-378-11	CERAMIC CHIP	30pF	5%	50V	C504	1-126-960-11	ELECT	1μF	20%	50V
C443	1-164-155-11	CERAMIC CHIP	75pF	5%	50V	C506	1-115-156-11	CERAMIC CHIP	1μF	10V	
C445	1-162-926-11	CERAMIC CHIP	82pF	5%	50V	C507	1-115-156-11	CERAMIC CHIP	1μF	10V	
C446	1-164-156-11	CERAMIC CHIP	0.1μF		25V	C508	1-115-156-11	CERAMIC CHIP	1μF	10V	
C448	1-162-926-11	CERAMIC CHIP	82pF	5%	50V	C511	1-162-919-11	CERAMIC CHIP	22pF	5%	50V
C451	1-164-460-11	CERAMIC CHIP	62pF	5%	50V	C525	1-162-919-11	CERAMIC CHIP	22pF	5%	50V
C452	1-164-156-11	CERAMIC CHIP	0.1μF		25V	C540	1-164-156-11	CERAMIC CHIP	0.1μF		25V
C453	1-164-156-11	CERAMIC CHIP	0.1μF		25V	C541	1-162-923-11	CERAMIC CHIP	47pF	5%	50V
C456	1-164-460-11	CERAMIC CHIP	62pF	5%	50V	C542	1-162-915-11	CERAMIC CHIP	10pF	0.50pF	50V
C458	1-164-217-11	CERAMIC CHIP	150pF	5%	50V	C543	1-162-927-11	CERAMIC CHIP	100pF	5%	50V
C459	1-164-156-11	CERAMIC CHIP	0.1μF		25V	C544	1-162-915-11	CERAMIC CHIP	10pF	0.50pF	50V
C460	1-218-664-11	METAL CHIP	68	0.50%	1/16W	C546	1-164-156-11	CERAMIC CHIP	0.1μF		25V
C461	1-218-644-11	METAL CHIP	10	0.50%	1/16W	C547	1-164-156-11	CERAMIC CHIP	0.1μF		25V
C462	1-164-156-11	CERAMIC CHIP	0.1μF		25V	C548	1-164-156-11	CERAMIC CHIP	0.1μF		25V
C463	1-162-919-11	CERAMIC CHIP	22pF	5%	50V	C549	1-162-919-11	CERAMIC CHIP	22pF	5%	50V
C466	1-164-156-11	CERAMIC CHIP	0.1μF		25V	C550	1-162-919-11	CERAMIC CHIP	22pF	5%	50V
C467	1-218-664-11	METAL CHIP	68	0.50%	1/16W	C551	1-162-919-11	CERAMIC CHIP	22pF	5%	50V
C468	1-218-644-11	METAL CHIP	10	0.50%	1/16W	C560	1-164-156-11	CERAMIC CHIP	0.1μF		25V
C470	1-162-919-11	CERAMIC CHIP	22pF	5%	50V	C561	1-162-923-11	CERAMIC CHIP	47pF	5%	50V
C471	1-218-664-11	METAL CHIP	68	0.50%	1/16W	C562	1-162-915-11	CERAMIC CHIP	10pF	0.50pF	50V
C472	1-218-644-11	METAL CHIP	10	0.50%	1/16W	C563	1-104-665-11	ELECT	100μF	20%	10V
C474	1-164-460-11	CERAMIC CHIP	62pF	5%	50V	C564	1-162-927-11	CERAMIC CHIP	100pF	5%	50V
C475	1-164-460-11	CERAMIC CHIP	62pF	5%	50V	C565	1-162-915-11	CERAMIC CHIP	10pF	0.50pF	50V
C477	1-126-964-11	ELECT	10μF	20%	50V	C566	1-104-665-11	ELECT	100μF	20%	10V
C478	1-164-156-11	CERAMIC CHIP	0.1μF		25V	C567	1-164-156-11	CERAMIC CHIP	0.1μF		25V
C479	1-164-156-11	CERAMIC CHIP	0.1μF		25V	C569	1-162-923-11	CERAMIC CHIP	47pF	5%	50V
C480	1-164-156-11	CERAMIC CHIP	0.1μF		25V	C570	1-162-919-11	CERAMIC CHIP	22pF	5%	50V







REF.NO.	PART NO.	DESCRIPTION	VALUES			REF.NO.	PART NO.	DESCRIPTION	VALUES		
C571	1-162-920-11	CERAMIC CHIP	27pF	5%	50V	C813	1-164-156-11	CERAMIC CHIP	0.1μF		25V
C572	1-162-916-11	CERAMIC CHIP	12pF	5%	50V	C814	1-164-156-11	CERAMIC CHIP	0.1μF		25V
C581	1-164-156-11	CERAMIC CHIP	0.1μF		25V	C815	1-164-156-11	CERAMIC CHIP	0.1μF		25V
C582	1-162-915-11	CERAMIC CHIP	10pF	0.50pF	50V	C816	1-164-156-11	CERAMIC CHIP	0.1μF		25V
C583	1-162-919-11	CERAMIC CHIP	22pF	5%	50V	C817	1-164-156-11	CERAMIC CHIP	0.1μF		25V
C584	1-162-919-11	CERAMIC CHIP	22pF	5%	50V	C819	1-164-156-11	CERAMIC CHIP	0.1μF		25V
C600	1-162-905-11	CERAMIC CHIP	1pF	0.25pF	50V	C820	1-164-156-11	CERAMIC CHIP	0.1μF		25V
C620	1-162-905-11	CERAMIC CHIP	1pF	0.25pF	50V	C821	1-162-964-11	CERAMIC CHIP	0.001μF	10%	50V
C623	1-164-156-11	CERAMIC CHIP	0.1μF		25V	C822	1-164-156-11	CERAMIC CHIP	0.1μF		25V
C624	1-164-156-11	CERAMIC CHIP	0.1μF		25V	C823	1-164-156-11	CERAMIC CHIP	0.1μF		25V
C641	1-164-156-11	CERAMIC CHIP	0.1μF		25V	C824	1-162-964-11	CERAMIC CHIP	0.001μF	10%	50V
C642	1-164-156-11	CERAMIC CHIP	0.1μF		25V	C825	1-164-156-11	CERAMIC CHIP	0.1μF		25V
C651	1-164-156-11	CERAMIC CHIP	0.1μF		25V	C826	1-164-156-11	CERAMIC CHIP	0.1μF		25V
C652	1-164-156-11	CERAMIC CHIP	0.1μF		25V	C827	1-162-964-11	CERAMIC CHIP	0.001μF	10%	50V
C653	1-126-964-11	ELECT	10μF	20%	50V	C828	1-164-156-11	CERAMIC CHIP	0.1μF		25V
C654	1-126-964-11	ELECT	10μF	20%	50V	C829	1-164-156-11	CERAMIC CHIP	0.1μF		25V
C749	1-164-156-11	CERAMIC CHIP	0.1μF		25V	C830	1-164-156-11	CERAMIC CHIP	0.1μF		25V
C750	1-164-156-11	CERAMIC CHIP	0.1μF		25V	C831	1-164-156-11	CERAMIC CHIP	0.1μF		25V
C751	1-126-964-11	ELECT	10μF	20%	50V	C832	1-164-156-11	CERAMIC CHIP	0.1μF		25V
C752	1-126-964-11	ELECT	10μF	20%	50V	C833	1-162-927-11	CERAMIC CHIP	100pF	5%	50V
C753	1-126-964-11	ELECT	10μF	20%	50V	C834	1-162-915-11	CERAMIC CHIP	10pF	0.50pF	50V
C755	1-162-964-11	CERAMIC CHIP	0.001μF	10%	50V	C835	1-164-156-11	CERAMIC CHIP	0.1μF		25V
C756	1-162-964-11	CERAMIC CHIP	0.001μF	10%	50V	C836	1-164-156-11	CERAMIC CHIP	0.1μF		25V
C757	1-164-156-11	CERAMIC CHIP	0.1μF		25V	C837	1-162-919-11	CERAMIC CHIP	22pF	5%	50V
C759	1-162-922-11	CERAMIC CHIP	39pF	5%	50V	C838	1-164-156-11	CERAMIC CHIP	0.1μF		25V
C760	1-162-922-11	CERAMIC CHIP	39pF	5%	50V	C839	1-164-346-11	CERAMIC CHIP	1μF	16V	
C761	1-164-156-11	CERAMIC CHIP	0.1μF		25V	C840	1-162-927-11	CERAMIC CHIP	100pF	5%	50V
C762	1-164-156-11	CERAMIC CHIP	0.1μF		25V	C841	1-162-927-11	CERAMIC CHIP	100pF	5%	50V
C763	1-164-156-11	CERAMIC CHIP	0.1μF		25V	C842	1-164-156-11	CERAMIC CHIP	0.1μF		25V
C764	1-164-156-11	CERAMIC CHIP	0.1μF		25V	C843	1-162-927-11	CERAMIC CHIP	100pF	5%	50V
C765	1-162-923-11	CERAMIC CHIP	47pF	5%	50V	C844	1-162-919-11	CERAMIC CHIP	22pF	5%	50V
C770	1-162-919-11	CERAMIC CHIP	22pF	5%	50V	C846	1-162-916-11	CERAMIC CHIP	12pF	5%	50V
C771	1-162-919-11	CERAMIC CHIP	22pF	5%	50V	C847	1-162-916-11	CERAMIC CHIP	12pF	5%	50V
C772	1-162-919-11	CERAMIC CHIP	22pF	5%	50V	C848	1-162-916-11	CERAMIC CHIP	12pF	5%	50V
C800	1-164-156-11	CERAMIC CHIP	0.1μF		25V	C870	1-162-919-11	CERAMIC CHIP	22pF	5%	50V
C801	1-164-156-11	CERAMIC CHIP	0.1μF		25V	C871	1-164-156-11	CERAMIC CHIP	0.1μF		25V
C802	1-164-156-11	CERAMIC CHIP	0.1μF		25V	C872	1-162-916-11	CERAMIC CHIP	12pF	5%	50V
C803	1-164-156-11	CERAMIC CHIP	0.1μF		25V	C873	1-162-916-11	CERAMIC CHIP	12pF	5%	50V
C804	1-162-964-11	CERAMIC CHIP	0.001μF	10%	50V	C874	1-162-916-11	CERAMIC CHIP	12pF	5%	50V
C805	1-164-156-11	CERAMIC CHIP	0.1μF		25V	C875	1-162-916-11	CERAMIC CHIP	12pF	5%	50V
C806	1-164-156-11	CERAMIC CHIP	0.1μF		25V	C900	1-164-156-11	CERAMIC CHIP	0.1μF		25V
C807	1-164-156-11	CERAMIC CHIP	0.1μF		25V	C901	1-164-156-11	CERAMIC CHIP	0.1μF		25V
C808	1-162-964-11	CERAMIC CHIP	0.001μF	10%	50V	C902	1-164-156-11	CERAMIC CHIP	0.1μF		25V
C809	1-164-156-11	CERAMIC CHIP	0.1μF		25V	C903	1-164-156-11	CERAMIC CHIP	0.1μF		25V
C810	1-104-665-11	ELECT	100μF	20%	10V	C904	1-164-156-11	CERAMIC CHIP	0.1μF		25V
C811	1-104-665-11	ELECT	100μF	20%	10V	C905	1-164-156-11	CERAMIC CHIP	0.1μF		25V
C812	1-164-156-11	CERAMIC CHIP	0.1μF		25V	C906	1-164-156-11	CERAMIC CHIP	0.1μF		25V


A

NOTE: The components identified by shading and  mark are critical for safety. Replace only with part number specified.






NOTE: Les composants identifiés par un trame et une marque  sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

REF.NO.	PART NO.	DESCRIPTION	VALUES			REF.NO.	PART NO.	DESCRIPTION	VALUES		
C907	1-162-964-11	CERAMIC CHIP	0.001μF	10%	50V	C970	1-126-960-11	ELECT	1μF	20%	50V
C908	1-164-156-11	CERAMIC CHIP	0.1μF		25V	C971	1-162-964-11	CERAMIC CHIP	0.001μF	10%	50V
C909	1-164-156-11	CERAMIC CHIP	0.1μF		25V	C972	1-164-156-11	CERAMIC CHIP	0.1μF		25V
C910	1-164-156-11	CERAMIC CHIP	0.1μF		25V	C973	1-164-156-11	CERAMIC CHIP	0.1μF		25V
C911	1-162-964-11	CERAMIC CHIP	0.001μF	10%	50V	C974	1-126-961-11	ELECT	2.2μF	20%	50V
C912	1-164-156-11	CERAMIC CHIP	0.1μF		25V	C975	1-164-156-11	CERAMIC CHIP	0.1μF		25V
C913	1-162-916-11	CERAMIC CHIP	12pF	5%	50V	C976	1-164-156-11	CERAMIC CHIP	0.1μF		25V
C914	1-162-919-11	CERAMIC CHIP	22pF	5%	50V	C977	1-162-919-11	CERAMIC CHIP	22pF	5%	50V
C925	1-164-156-11	CERAMIC CHIP	0.1μF		25V	C979	1-126-926-11	ELECT	1000μF	20%	10V
C926	1-162-964-11	CERAMIC CHIP	0.001μF	10%	50V	C980	1-164-156-11	CERAMIC CHIP	0.1μF		25V
C927	1-164-156-11	CERAMIC CHIP	0.1μF		25V	C981	1-164-156-11	CERAMIC CHIP	0.1μF		25V
C928	1-162-964-11	CERAMIC CHIP	0.001μF	10%	50V	C982	1-164-156-11	CERAMIC CHIP	0.1μF		25V
C929	1-164-156-11	CERAMIC CHIP	0.1μF		25V	C983	1-164-156-11	CERAMIC CHIP	0.1μF		25V
C930	1-162-964-11	CERAMIC CHIP	0.001μF	10%	50V	C984	1-164-156-11	CERAMIC CHIP	0.1μF		25V
C931	1-164-156-11	CERAMIC CHIP	0.1μF		25V	C985	1-164-156-11	CERAMIC CHIP	0.1μF		25V
C932	1-164-156-11	CERAMIC CHIP	0.1μF		25V	C986	1-104-665-11	ELECT	100μF	20%	10V
C933	1-164-156-11	CERAMIC CHIP	0.1μF		25V	C987	1-164-156-11	CERAMIC CHIP	0.1μF		25V
C934	1-164-156-11	CERAMIC CHIP	0.1μF		25V	C988	1-104-665-11	ELECT	100μF	20%	25V
C935	1-164-156-11	CERAMIC CHIP	0.1μF		25V	C990	1-162-964-11	CERAMIC CHIP	0.001μF	10%	50V
C936	1-164-156-11	CERAMIC CHIP	0.1μF		25V	C991	1-162-964-11	CERAMIC CHIP	0.001μF	10%	50V
C937	1-164-156-11	CERAMIC CHIP	0.1μF		25V	C992	1-162-964-11	CERAMIC CHIP	0.001μF	10%	50V
C938	1-126-933-11	ELECT	100μF	20%	16V	C994	1-104-665-11	ELECT	100μF	20%	10V
C939	1-164-156-11	CERAMIC CHIP	0.1μF		25V	C995	1-162-964-11	CERAMIC CHIP	0.001μF	10%	50V
C944	1-104-329-11	CERAMIC CHIP	0.1μF	10%	50V	C996	1-162-964-11	CERAMIC CHIP	0.001μF	10%	50V
C945	1-163-021-91	CERAMIC CHIP	0.01μF	10%	50V	C997	1-162-964-11	CERAMIC CHIP	0.001μF	10%	50V
C946	1-107-826-11	CERAMIC CHIP	0.1μF	10%	16V	C998	1-162-964-11	CERAMIC CHIP	0.001μF	10%	50V
C947	1-162-970-11	CERAMIC CHIP	0.01μF	10%	25V	 C1350	1-162-114-00	CERAMIC CHIP	.0047μF		2KV
C948	1-107-826-11	CERAMIC CHIP	0.1μF	10%	16V	 C1351	1-162-134-11	CERAMIC CHIP	470pF	10%	2KV
C949	1-162-970-11	CERAMIC CHIP	0.01μF	10%	25V	 C1352	1-162-134-11	CERAMIC CHIP	470pF	10%	2KV
C950	1-104-329-11	CERAMIC CHIP	0.1μF	10%	50V	CONNECTOR					
C951	1-163-021-91	CERAMIC CHIP	0.01μF	10%	50V	CN100	1-564-506-11	PLUG, CONNECTOR 3P			
C954	1-131-388-00	TANTALUM	68μF	10%	6.3V	* CN200	1-568-828-11	PIN, CONNECTOR (PC BOARD) 9P			
C955	1-131-388-00	TANTALUM	68μF	10%	6.3V	* CN201	1-568-828-11	PIN, CONNECTOR (PC BOARD) 9P			
C956	1-104-329-11	CERAMIC CHIP	0.1μF	10%	50V	CN202	1-564-506-11	PLUG, CONNECTOR 3P			
C957	1-163-021-91	CERAMIC CHIP	0.01μF	10%	50V	CN203	1-779-936-21	CONNECTOR, FFC/FPC 18P			
C958	1-162-919-11	CERAMIC CHIP	22pF	5%	50V	CN540	1-694-484-21	TERMINAL, S (2P.V)			
C959	1-104-665-11	ELECT	100μF	20%	10V	CN700	1-774-361-11	CONNECTOR, D SUB 15P			
C960	1-164-156-11	CERAMIC CHIP	0.1μF		25V	CN750	8-749-921-12	IC GP1F32T			
C961	1-164-156-11	CERAMIC CHIP	0.1μF		25V	CN803	1-774-279-11	CONNECTOR, D-SUB (FEMALE)			
C962	1-164-156-11	CERAMIC CHIP	0.1μF		25V	* CN904	1-793-546-11	SOCKET, CONNECTOR			
C963	1-164-156-11	CERAMIC CHIP	0.1μF		25V	* CN950	1-794-440-11	PIN, CONNECTOR 14P			
C964	1-164-156-11	CERAMIC CHIP	0.1μF		25V	DIODE					
C965	1-164-156-11	CERAMIC CHIP	0.1μF		25V	D100	8-719-031-68	DIODE HVU359TRF			
C966	1-164-156-11	CERAMIC CHIP	0.1μF		25V	D101	8-719-031-68	DIODE HVU359TRF			
C967	1-164-156-11	CERAMIC CHIP	0.1μF		25V	D104	8-719-073-01	DIODE MA111-TX			
C968	1-164-156-11	CERAMIC CHIP	0.1μF		25V	D105	8-719-073-01	DIODE MA111-TX			
C969	1-164-156-11	CERAMIC CHIP	0.1μF		25V	D106	8-719-073-01	DIODE MA111-TX			


NOTE: The components identified by shading and  mark are critical for safety. Replace only with part number specified.


NOTE: Les composants identifiés par un trame et une marque  sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.



A

REF.NO.	PART NO.	DESCRIPTION	VALUES	REF.NO.	PART NO.	DESCRIPTION	VALUES
D107	8-719-989-99	DIODE CL-150YG-CD-T		FERRITE BEAD			
D200	8-719-045-67	DIODE RB731U-T108		FB100	1-412-911-11	FERRITE	0μH
D201	8-719-073-01	DIODE MA111-TX		FB101	1-414-231-22	FERRITE	0μH
D202	8-719-073-01	DIODE MA111-TX		FB102	1-412-911-11	FERRITE	0μH
D203	8-719-056-17	DIODE RD6.2MW-T1B		FB200	1-412-911-11	FERRITE	0μH
D204	8-719-073-01	DIODE MA111-TX		FB205	1-414-231-22	FERRITE	0μH
D205	8-719-073-01	DIODE MA111-TX					
D206	8-719-045-67	DIODE RB731U-T108		FB206	1-414-231-22	FERRITE	0μH
D250	8-719-056-17	DIODE RD6.2MW-T1B		FB207	1-414-231-22	FERRITE	0μH
D251	8-719-045-67	DIODE RB731U-T108		FB208	1-414-231-22	FERRITE	0μH
D252	8-719-073-01	DIODE MA111-TX		FB209	1-414-231-22	FERRITE	0μH
D256	8-719-073-01	DIODE MA111-TX		FB210	1-414-231-22	FERRITE	0μH
D500	8-719-056-17	DIODE RD6.2MW-T1B					
D510	8-719-056-17	DIODE RD6.2MW-T1B		FB211	1-414-231-22	FERRITE	0μH
D520	8-719-056-17	DIODE RD6.2MW-T1B		FB212	1-414-231-22	FERRITE	0μH
D540	8-719-056-17	DIODE RD6.2MW-T1B		FB213	1-414-231-22	FERRITE	0μH
D541	8-719-056-17	DIODE RD6.2MW-T1B		FB214	1-414-231-22	FERRITE	0μH
				FB215	1-414-231-22	FERRITE	0μH
D542	8-719-056-17	DIODE RD6.2MW-T1B					
D560	8-719-056-17	DIODE RD6.2MW-T1B		FB300	1-412-911-11	FERRITE	0μH
D580	8-719-056-17	DIODE RD6.2MW-T1B		FB400	1-414-231-22	FERRITE	0μH
D581	8-719-056-17	DIODE RD6.2MW-T1B		FB401	1-414-231-22	FERRITE	0μH
D700	8-719-056-17	DIODE RD6.2MW-T1B		FB441	1-414-231-22	FERRITE	0μH
				FB560	1-414-231-22	FERRITE	0μH
D701	8-719-056-17	DIODE RD6.2MW-T1B					
D702	8-719-056-17	DIODE RD6.2MW-T1B		FB561	1-414-231-22	FERRITE	0μH
D703	8-719-056-17	DIODE RD6.2MW-T1B		FB640	1-414-231-22	FERRITE	0μH
D704	8-719-056-17	DIODE RD6.2MW-T1B		FB641	1-414-231-22	FERRITE	0μH
D750	8-719-056-17	DIODE RD6.2MW-T1B		FB750	1-414-231-22	FERRITE	0μH
				FB800	1-412-911-11	FERRITE	0μH
D751	8-719-056-17	DIODE RD6.2MW-T1B					
D752	8-719-056-17	DIODE RD6.2MW-T1B		FB801	1-414-231-22	FERRITE	0μH
D753	8-719-056-17	DIODE RD6.2MW-T1B		FB806	1-414-231-22	FERRITE	0μH
D800	8-719-045-67	DIODE RB731U-T108		FB870	1-414-231-22	FERRITE	0μH
D805	8-719-989-99	DIODE CL-150YG-CD-T		FB900	1-412-911-11	FERRITE	0μH
				FB903	1-414-231-22	FERRITE	0μH
D806	8-719-914-43	DIODE DAN202K-T-146					
D807	8-719-914-43	DIODE DAN202K-T-146		FB950	1-412-911-11	FERRITE	0μH
D808	8-719-073-01	DIODE MA111-TX		FB951	1-412-911-11	FERRITE	0μH
D809	8-719-073-01	DIODE MA111-TX		FB952	1-412-911-11	FERRITE	0μH
D810	8-719-073-01	DIODE MA111-TX		FB953	1-412-911-11	FERRITE	0μH
				FB954	1-412-911-11	FERRITE	0μH
D811	8-719-031-68	DIODE HVU359TRF					
D812	8-719-031-68	DIODE HVU359TRF		FB955	1-412-911-11	FERRITE	0μH
D815	8-719-978-33	DIODE UDZS-TE17-6.8B		FB956	1-412-911-11	FERRITE	0μH
D900	8-719-045-67	DIODE RB731U-T108		FB957	1-412-911-11	FERRITE	0μH
D901	8-719-989-99	DIODE CL-150YG-CD-T		FB958	1-412-911-11	FERRITE	0μH
 D1351	1-251-628-11	ABSORBER, SURGE		FB959	1-412-911-11	FERRITE	0μH
				FB1350	1-412-911-11	FERRITE	0μH
				FB1351	1-412-911-11	FERRITE	0μH
FUSE				FUSE HOLDER			
 F946	1-532-743-11	FUSE, GLASS TUBE 2A/125V					
 F995	1-532-739-11	FUSE, GLASS TUBE		FH1	1-533-223-11	HOLDER, FUSE	
 F1350	1-576-393-11	FUSE		FH2	1-533-223-11	HOLDER, FUSE	
 F1351	1-576-393-11	FUSE					

A

NOTE: The components identified by shading and  mark are critical for safety. Replace only with part number specified.

NOTE: Les composants identifiés par un trame et une marque  sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

REF.NO.	PART NO.	DESCRIPTION	VALUES	REF.NO.	PART NO.	DESCRIPTION	VALUES
FH5	1-533-223-11	HOLDER, FUSE		IC801	8-759-679-88	IC GM71VS65163CLT-5	
FH6	1-533-223-11	HOLDER, FUSE		IC802	8-759-679-88	IC GM71VS65163CLT-5	
	<u>FILTER</u>			IC803	8-759-695-79	IC MBM29LV160BE-90pFTN-LOW	
FL409	1-469-955-21	FERRITE	0μH	IC804	8-759-695-77	IC MBM29LV160BE-90pFTN-HIGH	
FL410	1-469-955-21	FERRITE	0μH	IC806	8-759-073-52	IC TC74AC04F-EL	
FL750	1-469-955-21	FERRITE	0μH				
FL751	1-469-955-21	FERRITE	0μH	IC870	8-759-073-52	IC TC74AC04F-EL	
FL752	1-469-955-21	FERRITE	0μH	IC900	8-759-660-73	IC EpF6016AQC208-3	
FL753	1-469-955-21	FERRITE	0μH	IC901	8-759-669-14	IC CY7C1021V33-15ZC	
	<u>IC</u>			IC902	6-800-105-01	IC EPC1441LC20-SV10269	
IC100	8-759-825-59	IC TMS320AV7100APGW		IC903	8-759-646-98	IC SN74CBT16233DGG	
IC101	8-759-573-19	IC MT48LC1M16A1TG-7S		IC907	8-759-594-47	IC SN74LVCHR16245ADL	
IC102	8-759-073-52	IC TC74AC04F-EL		IC908	8-759-594-47	IC SN74LVCHR16245ADL	
IC103	8-759-658-30	IC AT24C256N-10SC-2.7		IC909	8-759-594-47	IC SN74LVCHR16245ADL	
IC104	8-759-679-88	IC GM71VS65163CLT-5		IC950	8-759-450-47	IC BA05T	
				IC970	8-759-510-72	IC LM393DR	
IC105	6-800-119-01	IC MBM29LV160BE-90pFTN-105		 IC1350	8-749-017-37	IC CPC1035NTR	
IC106	8-759-695-78	IC MBM29LV160BE-90pFTN					
IC107	8-759-471-57	IC AT82002159-0T1T		<u>JACK</u>			
IC109	8-759-469-41	IC 73K222BL-IH		J250	1-568-267-21	JACK	
IC111	8-759-663-27	IC LP3470M5X-4.38		J400	1-793-594-11	JACK, PIN (BLOCK) 9P	
				J580	1-563-447-21	JACK, PIN 1P	
IC203	8-759-394-36	IC BA09T		J581	1-563-447-21	JACK, PIN 1P	
IC250	8-759-553-77	IC MN150414SA1		 J1350	1-770-671-11	JACK, MODULAR	
IC300	6-700-087-01	IC ST17000AQA					
IC301	8-759-697-68	IC UPD4564323G5-A80-9JH		<u>COIL</u>			
IC302	8-759-697-68	IC UPD4564323G5-A80-9JH		L100	1-414-185-41	INDUCTOR	22μH
				L101	1-408-608-31	INDUCTOR	27μH
IC303	8-759-698-88	IC ST14600BCV-2.0		L102	1-408-608-31	INDUCTOR	27μH
IC304	8-759-592-44	IC TC7SZ04FU(TE85R)		L103	1-414-108-11	INDUCTOR	0.68μH
IC305	8-759-651-59	IC SN74CBTLV3245APWR		L300	1-410-466-41	INDUCTOR	4.7μH
IC306	8-759-651-59	IC SN74CBTLV3245APWR					
IC307	8-759-651-59	IC SN74CBTLV3245APWR		L301	1-410-470-11	INDUCTOR	10μH
				L302	1-410-470-11	INDUCTOR	10μH
IC308	8-759-651-59	IC SN74CBTLV3245APWR		L420	1-412-935-61	INDUCTOR	0.47μH
IC400	8-759-641-76	IC BT869KRF		L421	1-412-936-11	INDUCTOR	0.56μH
IC401	6-800-120-01	IC EPM7064AELC44-4-SV10269		L422	1-412-936-11	INDUCTOR	0.56μH
IC406	8-759-667-70	IC AD8072JR-REEL					
IC407	8-759-646-73	IC AD8073JR-REEL		L423	1-412-936-11	INDUCTOR	0.56μH
				L424	1-216-295-11	SHORT	
IC409	8-759-646-73	IC AD8073JR-REEL		L425	1-216-295-11	SHORT	
IC410	8-759-032-11	IC TC74HC04AF(EL)		L426	1-216-295-11	SHORT	
IC416	8-759-640-14	IC TK15420MTL		L427	1-216-295-11	SHORT	
IC417	8-759-640-14	IC TK15420MTL					
IC420	8-759-646-73	IC AD8073JR-REEL		L428	1-412-936-11	INDUCTOR	0.56μH
				L429	1-412-936-11	INDUCTOR	0.56μH
IC421	8-759-646-73	IC AD8073JR-REEL		L440	1-412-935-61	INDUCTOR	0.47μH
IC452	8-759-667-70	IC AD8072JR-REEL		L441	1-412-936-11	INDUCTOR	0.56μH
IC460	6-700-055-01	IC 74HCT4053D-T		L442	1-412-936-11	INDUCTOR	0.56μH
IC750	8-759-594-77	IC CS4338KS					
IC751	8-759-099-06	IC M5218AFP-TE1		L443	1-412-936-11	INDUCTOR	0.56μH
IC752	8-759-099-06	IC M5218AFP-TE1		L444	1-216-295-11	SHORT	
IC800	6-700-086-01	IC ST20TP4CX50S		L445	1-216-295-11	SHORT	
				L446	1-216-295-11	SHORT	

— 37 —



REF.NO.	PART NO.	DESCRIPTION	VALUES			REF.NO.	PART NO.	DESCRIPTION	VALUES		
R144	1-216-821-11	RES-CHIP	1K	5%	1/16W	R257	1-216-833-11	RES-CHIP	10K	5%	1/16W
R145	1-216-833-11	RES-CHIP	10K	5%	1/16W	R258	1-216-825-11	RES-CHIP	2.2K	5%	1/16W
R146	1-216-821-11	RES-CHIP	1K	5%	1/16W	R259	1-216-813-11	RES-CHIP	220	5%	1/16W
R147	1-216-833-11	RES-CHIP	10K	5%	1/16W	R302	1-216-864-91	SHORT			
R148	1-216-833-11	RES-CHIP	10K	5%	1/16W	R303	1-216-804-11	RES-CHIP	39	5%	1/16W
R149	1-216-805-11	RES-CHIP	47	5%	1/16W	R304	1-216-804-11	RES-CHIP	39	5%	1/16W
R150	1-216-833-11	RES-CHIP	10K	5%	1/16W	R305	1-216-833-11	RES-CHIP	10K	5%	1/16W
R151	1-216-825-11	RES-CHIP	2.2K	5%	1/16W	R306	1-216-833-11	RES-CHIP	10K	5%	1/16W
R152	1-216-825-11	RES-CHIP	2.2K	5%	1/16W	R307	1-216-833-11	RES-CHIP	10K	5%	1/16W
R153	1-216-864-91	SHORT				R308	1-216-833-11	RES-CHIP	10K	5%	1/16W
R154	1-216-864-91	SHORT				R309	1-216-833-11	RES-CHIP	10K	5%	1/16W
R155	1-216-864-91	SHORT				R310	1-218-285-11	RES-CHIP	75	5%	1/16W
R156	1-216-833-11	RES-CHIP	10K	5%	1/16W	R313	1-216-833-11	RES-CHIP	10K	5%	1/16W
R157	1-216-864-91	SHORT				R314	1-218-285-11	RES-CHIP	75	5%	1/16W
R158	1-208-817-11	METAL CHIP	30K	0.50%	1/10W	R315	1-216-864-91	SHORT			
R159	1-218-285-11	RES-CHIP	75	5%	1/16W	R316	1-216-833-11	RES-CHIP	10K	5%	1/16W
R161	1-216-864-91	SHORT				R317	1-216-830-11	RES-CHIP	5.6K	5%	1/16W
R163	1-216-864-91	SHORT				R318	1-216-809-11	RES-CHIP	100	5%	1/16W
R200	1-218-285-11	RES-CHIP	75	5%	1/16W	R319	1-216-833-11	RES-CHIP	10K	5%	1/16W
R201	1-216-864-91	SHORT				R320	1-216-809-11	RES-CHIP	100	5%	1/16W
R203	1-216-821-11	RES-CHIP	1K	5%	1/16W	R322	1-216-821-11	RES-CHIP	1K	5%	1/16W
R204	1-216-821-11	RES-CHIP	1K	5%	1/16W	R324	1-216-864-91	SHORT			
R205	1-216-821-11	RES-CHIP	1K	5%	1/16W	R325	1-216-833-11	RES-CHIP	10K	5%	1/16W
R206	1-216-833-11	RES-CHIP	10K	5%	1/16W	R326	1-216-805-11	RES-CHIP	47	5%	1/16W
R210	1-216-829-11	RES-CHIP	4.7K	5%	1/16W	R327	1-216-805-11	RES-CHIP	47	5%	1/16W
R211	1-216-833-11	RES-CHIP	10K	5%	1/16W	R329	1-216-805-11	RES-CHIP	47	5%	1/16W
R213	1-216-833-11	RES-CHIP	10K	5%	1/16W	R330	1-216-805-11	RES-CHIP	47	5%	1/16W
R214	1-216-833-11	RES-CHIP	10K	5%	1/16W	R331	1-220-151-11	RES-CHIP	51	5%	1/16W
R215	1-216-833-11	RES-CHIP	10K	5%	1/16W	R332	1-216-805-11	RES-CHIP	47	5%	1/16W
R216	1-216-833-11	RES-CHIP	10K	5%	1/16W	R333	1-216-805-11	RES-CHIP	47	5%	1/16W
R217	1-216-833-11	RES-CHIP	10K	5%	1/16W	R334	1-216-805-11	RES-CHIP	47	5%	1/16W
R218	1-216-833-11	RES-CHIP	10K	5%	1/16W	R335	1-218-285-11	RES-CHIP	75	5%	1/16W
R220	1-216-797-11	RES-CHIP	10	5%	1/16W	R336	1-216-805-11	RES-CHIP	47	5%	1/16W
R221	1-219-570-11	RES-CHIP	10M	5%	1/16W	R374	1-218-684-11	METAL CHIP	470	0.50%	1/16W
R223	1-216-857-11	RES-CHIP	1M	5%	1/16W	R376	1-216-826-11	RES-CHIP	2.7K	5%	1/16W
R225	1-216-857-11	RES-CHIP	1M	5%	1/16W	R378	1-216-805-11	RES-CHIP	47	5%	1/16W
R226	1-216-814-11	RES-CHIP	270	5%	1/16W	R382	1-208-757-11	METAL CHIP	91	0.50%	1/10W
R227	1-216-815-11	RES-CHIP	330	5%	1/16W	R383	1-216-821-11	RES-CHIP	1K	5%	1/16W
R228	1-216-833-11	RES-CHIP	10K	5%	1/16W	R384	1-218-688-11	METAL CHIP	680	0.50%	1/16W
R230	1-216-864-91	SHORT				R385	1-216-821-11	RES-CHIP	1K	5%	1/16W
R232	1-215-388-00	METAL CHIP	43	1%	1/4W	R386	1-218-688-11	METAL CHIP	680	0.50%	1/16W
R250	1-249-398-11	CARBON	27	5%	1/4W	R387	1-218-288-11	RES-CHIP	300	5%	1/16W
R251	1-216-821-11	RES-CHIP	1K	5%	1/16W	R388	1-218-704-11	METAL CHIP	3.3K	0.50%	1/16W
R252	1-216-825-11	RES-CHIP	2.2K	5%	1/16W	R390	1-216-819-11	RES-CHIP	680	5%	1/16W
R254	1-216-837-11	RES-CHIP	22K	5%	1/16W	R391	1-216-817-11	RES-CHIP	470	5%	1/16W
R255	1-216-833-11	RES-CHIP	10K	5%	1/16W	R395	1-218-704-11	METAL CHIP	3.3K	0.50%	1/16W
R256	1-216-833-11	RES-CHIP	10K	5%	1/16W	R399	1-218-715-11	METAL CHIP	9.1K	0.50%	1/16W



REF.NO.	PART NO.	DESCRIPTION	VALUES			REF.NO.	PART NO.	DESCRIPTION	VALUES		
R400	1-216-810-11	RES-CHIP	120	5%	1/16W	R453	1-216-864-91	SHORT			
R401	1-218-285-11	RES-CHIP	75	5%	1/16W	R454	1-218-699-11	METAL CHIP	2K	0.50%	1/16W
R402	1-216-800-11	RES-CHIP	18	5%	1/16W	R455	1-208-789-11	METAL CHIP	2K	0.50%	1/10W
R403	1-216-810-11	RES-CHIP	120	5%	1/16W	R456	1-216-833-11	RES-CHIP	10K	5%	1/16W
R404	1-216-821-11	RES-CHIP	1K	5%	1/16W	R457	1-218-482-11	RES-CHIP	430	5%	1/16W
R406	1-216-829-11	RES-CHIP	4.7K	5%	1/16W	R458	1-208-789-11	METAL CHIP	2K	0.50%	1/10W
R407	1-216-810-11	RES-CHIP	120	5%	1/16W	R460	1-218-686-11	METAL CHIP	560	0.50%	1/16W
R408	1-208-758-11	METAL CHIP	100	0.50%	1/10W	R462	1-218-715-11	METAL CHIP	9.1K	0.50%	1/16W
R409	1-216-800-11	RES-CHIP	18	5%	1/16W	R463	1-208-789-11	METAL CHIP	2K	0.50%	1/10W
R410	1-218-285-11	RES-CHIP	75	5%	1/16W	R464	1-218-688-11	METAL CHIP	680	0.50%	1/16W
R411	1-216-810-11	RES-CHIP	120	5%	1/16W	R465	1-216-864-91	SHORT			
R413	1-216-833-11	RES-CHIP	10K	5%	1/16W	R466	1-218-288-11	RES-CHIP	300	5%	1/16W
R417	1-216-864-91	SHORT				R467	1-216-811-11	RES-CHIP	150	5%	1/16W
R419	1-216-817-11	RES-CHIP	470	5%	1/16W	R468	1-216-826-11	RES-CHIP	2.7K	5%	1/16W
R420	1-218-285-11	RES-CHIP	75	5%	1/16W	R469	1-216-815-11	RES-CHIP	330	5%	1/16W
R421	1-216-801-11	RES-CHIP	22	5%	1/16W	R470	1-216-821-11	RES-CHIP	1K	5%	1/16W
R422	1-218-482-11	RES-CHIP	430	5%	1/16W	R472	1-216-821-11	RES-CHIP	1K	5%	1/16W
R423	1-208-757-11	METAL CHIP	91	0.50%	1/10W	R473	1-216-864-91	SHORT			
R424	1-216-864-91	SHORT				R474	1-216-864-91	SHORT			
R425	1-218-285-11	RES-CHIP	75	5%	1/16W	R475	1-216-833-11	RES-CHIP	10K	5%	1/16W
R426	1-208-757-11	METAL CHIP	91	0.50%	1/10W	R476	1-216-864-91	SHORT			
R427	1-208-789-11	METAL CHIP	2K	0.50%	1/10W	R477	1-216-801-11	RES-CHIP	22	5%	1/16W
R428	1-218-699-11	METAL CHIP	2K	0.50%	1/16W	R478	1-216-805-11	RES-CHIP	47	5%	1/16W
R429	1-208-789-11	METAL CHIP	2K	0.50%	1/10W	R479	1-216-817-11	RES-CHIP	470	5%	1/16W
R430	1-216-814-11	RES-CHIP	270	5%	1/16W	R480	1-218-285-11	RES-CHIP	75	5%	1/16W
R431	1-218-482-11	RES-CHIP	430	5%	1/16W	R481	1-216-801-11	RES-CHIP	22	5%	1/16W
R432	1-208-789-11	METAL CHIP	2K	0.50%	1/10W	R482	1-218-482-11	RES-CHIP	430	5%	1/16W
R433	1-216-864-91	SHORT				R483	1-208-757-11	METAL CHIP	91	0.50%	1/10W
R434	1-216-864-91	SHORT				R484	1-216-864-91	SHORT			
R435	1-218-684-11	METAL CHIP	470	0.50%	1/16W	R485	1-216-801-11	RES-CHIP	22	5%	1/16W
R436	1-216-826-11	RES-CHIP	2.7K	5%	1/16W	R486	1-218-482-11	RES-CHIP	430	5%	1/16W
R437	1-216-819-11	RES-CHIP	680	5%	1/16W	R487	1-218-285-11	RES-CHIP	75	5%	1/16W
R438	1-216-864-91	SHORT				R488	1-216-864-91	SHORT			
R439	1-218-688-11	METAL CHIP	680	0.50%	1/16W	R489	1-218-285-11	RES-CHIP	75	5%	1/16W
R440	1-218-285-11	RES-CHIP	75	5%	1/16W	R490	1-216-814-11	RES-CHIP	270	5%	1/16W
R441	1-216-801-11	RES-CHIP	22	5%	1/16W	R491	1-218-482-11	RES-CHIP	430	5%	1/16W
R442	1-218-482-11	RES-CHIP	430	5%	1/16W	R492	1-216-864-91	SHORT			
R443	1-208-757-11	METAL CHIP	91	0.50%	1/10W	R493	1-216-801-11	RES-CHIP	22	5%	1/16W
R444	1-216-864-91	SHORT				R494	1-208-789-11	METAL CHIP	2K	0.50%	1/10W
R445	1-216-801-11	RES-CHIP	22	5%	1/16W	R495	1-216-817-11	RES-CHIP	470	5%	1/16W
R446	1-218-482-11	RES-CHIP	430	5%	1/16W	R496	1-216-833-11	RES-CHIP	10K	5%	1/16W
R447	1-218-285-11	RES-CHIP	75	5%	1/16W	R497	1-208-789-11	METAL CHIP	2K	0.50%	1/10W
R448	1-216-864-91	SHORT				R498	1-216-864-91	SHORT			
R449	1-216-801-11	RES-CHIP	22	5%	1/16W	R499	1-218-699-11	METAL CHIP	2K	0.50%	1/16W
R450	1-216-864-91	SHORT				R501	1-216-817-11	RES-CHIP	470	5%	1/16W
R451	1-208-757-11	METAL CHIP	91	0.50%	1/10W	R502	1-216-819-11	RES-CHIP	680	5%	1/16W
R452	1-208-789-11	METAL CHIP	2K	0.50%	1/10W	R503	1-218-665-11	METAL CHIP	75	0.50%	1/16W





REF.NO.	PART NO.	DESCRIPTION	VALUES			REF.NO.	PART NO.	DESCRIPTION	VALUES		
R504	1-218-688-11	METAL CHIP	680	0.50%	1/16W	R611	1-202-924-11	RES-CHIP	240	5%	1/16W
R508	1-218-712-11	METAL CHIP	6.8K	0.50%	1/16W	R612	1-218-269-11	RES-CHIP	360	5%	1/16W
R509	1-218-712-11	METAL CHIP	6.8K	0.50%	1/16W	R614	1-216-826-11	RES-CHIP	2.7K	5%	1/16W
R510	1-218-712-11	METAL CHIP	6.8K	0.50%	1/16W	R615	1-218-688-11	METAL CHIP	680	0.50%	1/16W
R513	1-218-665-11	METAL CHIP	75	0.50%	1/16W	R616	1-218-688-11	METAL CHIP	680	0.50%	1/16W
R523	1-218-665-11	METAL CHIP	75	0.50%	1/16W	R620	1-211-957-11	METAL CHIP	16	0.50%	1/10W
R540	1-216-813-11	RES-CHIP	220	5%	1/16W	R621	1-208-782-11	METAL CHIP	1K	0.50%	1/10W
R542	1-216-815-11	RES-CHIP	330	5%	1/16W	R623	1-208-788-11	METAL CHIP	1.8K	0.50%	1/10W
R543	1-216-833-11	RES-CHIP	10K	5%	1/16W	R624	1-208-785-11	METAL CHIP	1.3K	0.50%	1/10W
R544	1-216-823-11	RES-CHIP	1.5K	5%	1/16W	R625	1-208-778-11	METAL CHIP	680	0.50%	1/10W
R545	1-216-823-11	RES-CHIP	1.5K	5%	1/16W	R626	1-216-655-11	METAL CHIP	1.5K	0.50%	1/10W
R546	1-216-821-11	RES-CHIP	1K	5%	1/16W	R627	1-208-775-11	METAL CHIP	510	0.50%	1/10W
R547	1-216-821-11	RES-CHIP	1K	5%	1/16W	R628	1-216-864-91	SHORT			
R548	1-218-665-11	METAL CHIP	75	0.50%	1/16W	R629	1-216-864-91	SHORT			
R549	1-218-665-11	METAL CHIP	75	0.50%	1/16W	R630	1-211-964-11	METAL CHIP	33	0.50%	1/10W
R550	1-218-665-11	METAL CHIP	75	0.50%	1/16W	R631	1-216-864-91	SHORT			
R551	1-216-827-11	RES-CHIP	3.3K	5%	1/16W	R632	1-216-826-11	RES-CHIP	2.7K	5%	1/16W
R552	1-216-827-11	RES-CHIP	3.3K	5%	1/16W	R633	1-218-688-11	METAL CHIP	680	0.50%	1/16W
R558	1-216-864-91	SHORT				R634	1-218-688-11	METAL CHIP	680	0.50%	1/16W
R559	1-216-864-91	SHORT				R635	1-216-864-91	SHORT			
R560	1-216-813-11	RES-CHIP	220	5%	1/16W	R636	1-216-864-91	SHORT			
R562	1-216-815-11	RES-CHIP	330	5%	1/16W	R637	1-216-864-91	SHORT			
R563	1-216-817-11	RES-CHIP	470	5%	1/16W	R638	1-218-482-11	RES-CHIP	430	5%	1/16W
R564	1-216-817-11	RES-CHIP	470	5%	1/16W	R639	1-218-269-11	RES-CHIP	360	5%	1/16W
R566	1-216-817-11	RES-CHIP	470	5%	1/16W	R642	1-208-782-11	METAL CHIP	1K	0.50%	1/10W
R567	1-216-864-91	SHORT				R643	1-216-648-11	METAL CHIP	750	0.50%	1/10W
R568	1-218-710-11	METAL CHIP	5.6K	0.50%	1/16W	R644	1-208-775-11	METAL CHIP	510	0.50%	1/10W
R569	1-218-695-11	METAL CHIP	1.3K	0.50%	1/16W	R645	1-208-775-11	METAL CHIP	510	0.50%	1/10W
R570	1-216-805-11	RES-CHIP	47	5%	1/16W	R647	1-216-821-11	RES-CHIP	1K	5%	1/16W
R571	1-218-665-11	METAL CHIP	75	0.50%	1/16W	R650	1-216-826-11	RES-CHIP	2.7K	5%	1/16W
R573	1-216-833-11	RES-CHIP	10K	5%	1/16W	R651	1-218-688-11	METAL CHIP	680	0.50%	1/16W
R574	1-216-833-11	RES-CHIP	10K	5%	1/16W	R652	1-218-688-11	METAL CHIP	680	0.50%	1/16W
R580	1-216-817-11	RES-CHIP	470	5%	1/16W	R700	1-216-809-11	RES-CHIP	100	5%	1/16W
R581	1-216-817-11	RES-CHIP	470	5%	1/16W	R701	1-218-665-11	METAL CHIP	75	0.50%	1/16W
R582	1-216-817-11	RES-CHIP	470	5%	1/16W	R702	1-218-665-11	METAL CHIP	75	0.50%	1/16W
R583	1-218-665-11	METAL CHIP	75	0.50%	1/16W	R703	1-218-665-11	METAL CHIP	75	0.50%	1/16W
R584	1-218-665-11	METAL CHIP	75	0.50%	1/16W	R742	1-216-864-91	SHORT			
R600	1-211-963-11	METAL CHIP	30	0.50%	1/10W	R743	1-216-864-91	SHORT			
R601	1-208-778-11	METAL CHIP	680	0.50%	1/10W	R744	1-216-801-11	RES-CHIP	22	5%	1/16W
R603	1-208-782-11	METAL CHIP	1K	0.50%	1/10W	R745	1-216-864-91	SHORT			
R604	1-208-782-11	METAL CHIP	1K	0.50%	1/10W	R746	1-216-864-91	SHORT			
R605	1-208-778-11	METAL CHIP	680	0.50%	1/10W	R747	1-216-864-91	SHORT			
R606	1-208-789-11	METAL CHIP	2K	0.50%	1/10W	R748	1-216-864-91	SHORT			
R607	1-208-775-11	METAL CHIP	510	0.50%	1/10W	R749	1-216-833-11	RES-CHIP	10K	5%	1/16W
R608	1-208-784-11	METAL CHIP	1.2K	0.50%	1/10W	R750	1-216-842-11	RES-CHIP	56K	5%	1/16W
R609	1-216-648-11	METAL CHIP	750	0.50%	1/10W	R751	1-216-842-11	RES-CHIP	56K	5%	1/16W
R610	1-208-809-11	METAL CHIP	13K	0.50%	1/10W	R752	1-216-826-11	RES-CHIP	2.7K	5%	1/16W




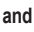
REF.NO.	PART NO.	DESCRIPTION	VALUES			REF.NO.	PART NO.	DESCRIPTION	VALUES		
R753	1-216-826-11	RES-CHIP	2.7K	5%	1/16W	R835	1-216-806-11	RES-CHIP	56	5%	1/16W
R754	1-218-725-11	RES-CHIP	24K	5%	1/16W	R836	1-216-833-11	RES-CHIP	10K	5%	1/16W
R755	1-218-725-11	RES-CHIP	24K	5%	1/16W	R837	1-216-833-11	RES-CHIP	10K	5%	1/16W
R756	1-216-835-11	RES-CHIP	15K	5%	1/16W	R838	1-216-864-91	SHORT			
R757	1-216-835-11	RES-CHIP	15K	5%	1/16W	R839	1-216-825-11	RES-CHIP	2.2K	5%	1/16W
R759	1-216-845-11	RES-CHIP	100K	5%	1/16W	R841	1-216-845-11	RES-CHIP	100K	5%	1/16W
R760	1-216-845-11	RES-CHIP	100K	5%	1/16W	R842	1-216-845-11	RES-CHIP	100K	5%	1/16W
R761	1-216-825-11	RES-CHIP	2.2K	5%	1/16W	R843	1-216-845-11	RES-CHIP	100K	5%	1/16W
R762	1-216-813-11	RES-CHIP	220	5%	1/16W	R844	1-216-833-11	RES-CHIP	10K	5%	1/16W
R763	1-218-670-11	METAL CHIP	120	0.50%	1/16W	R845	1-216-809-11	RES-CHIP	100	5%	1/16W
R764	1-218-670-11	METAL CHIP	120	0.50%	1/16W	R846	1-216-857-11	RES-CHIP	1M	5%	1/16W
R765	1-218-670-11	METAL CHIP	120	0.50%	1/16W	R848	1-216-833-11	RES-CHIP	10K	5%	1/16W
R766	1-218-670-11	METAL CHIP	120	0.50%	1/16W	R849	1-216-809-11	RES-CHIP	100	5%	1/16W
R770	1-216-842-11	RES-CHIP	56K	5%	1/16W	R850	1-216-833-11	RES-CHIP	10K	5%	1/16W
R771	1-216-842-11	RES-CHIP	56K	5%	1/16W	R853	1-218-285-11	RES-CHIP	75	5%	1/16W
R772	1-218-285-11	RES-CHIP	75	5%	1/16W	R854	1-216-864-91	SHORT			
R773	1-218-285-11	RES-CHIP	75	5%	1/16W	R859	1-216-864-91	SHORT			
R774	1-218-285-11	RES-CHIP	75	5%	1/16W	R861	1-216-864-91	SHORT			
R800	1-216-826-11	RES-CHIP	2.7K	5%	1/16W	R862	1-216-864-91	SHORT			
R801	1-216-826-11	RES-CHIP	2.7K	5%	1/16W	R864	1-216-864-91	SHORT			
R802	1-216-809-11	RES-CHIP	100	5%	1/16W	R868	1-216-864-91	SHORT			
R803	1-216-829-11	RES-CHIP	4.7K	5%	1/16W	R869	1-216-809-11	RES-CHIP	100	5%	1/16W
R804	1-216-833-11	RES-CHIP	10K	5%	1/16W	R870	1-218-285-11	RES-CHIP	75	5%	1/16W
R805	1-216-809-11	RES-CHIP	100	5%	1/16W	R871	1-216-864-91	SHORT			
R806	1-216-833-11	RES-CHIP	10K	5%	1/16W	R872	1-216-864-91	SHORT			
R807	1-216-805-11	RES-CHIP	47	5%	1/16W	R873	1-216-864-91	SHORT			
R808	1-216-864-91	SHORT				R874	1-216-864-91	SHORT			
R809	1-216-809-11	RES-CHIP	100	5%	1/16W	R904	1-216-821-11	RES-CHIP	1K	5%	1/16W
R810	1-216-864-91	SHORT				R905	1-216-864-91	SHORT			
R811	1-216-833-11	RES-CHIP	10K	5%	1/16W	R906	1-216-821-11	RES-CHIP	1K	5%	1/16W
R812	1-216-833-11	RES-CHIP	10K	5%	1/16W	R907	1-216-864-91	SHORT			
R813	1-216-809-11	RES-CHIP	100	5%	1/16W	R908	1-216-864-91	SHORT			
R815	1-216-821-11	RES-CHIP	1K	5%	1/16W	R909	1-216-864-91	SHORT			
R816	1-216-833-11	RES-CHIP	10K	5%	1/16W	R910	1-216-829-11	RES-CHIP	4.7K	5%	1/16W
R817	1-216-821-11	RES-CHIP	1K	5%	1/16W	R911	1-216-833-11	RES-CHIP	10K	5%	1/16W
R818	1-216-833-11	RES-CHIP	10K	5%	1/16W	R912	1-216-864-91	SHORT			
R819	1-216-821-11	RES-CHIP	1K	5%	1/16W	R913	1-218-285-11	RES-CHIP	75	5%	1/16W
R820	1-216-821-11	RES-CHIP	1K	5%	1/16W	R920	1-216-864-91	SHORT			
R821	1-216-864-91	SHORT				R921	1-216-864-91	SHORT			
R822	1-216-809-11	RES-CHIP	100	5%	1/16W	R922	1-216-864-91	SHORT			
R824	1-216-833-11	RES-CHIP	10K	5%	1/16W	R923	1-216-864-91	SHORT			
R825	1-216-833-11	RES-CHIP	10K	5%	1/16W	R924	1-216-864-91	SHORT			
R826	1-216-833-11	RES-CHIP	10K	5%	1/16W	R925	1-216-864-91	SHORT			
R827	1-216-806-11	RES-CHIP	56	5%	1/16W	R926	1-216-864-91	SHORT			
R828	1-216-833-11	RES-CHIP	10K	5%	1/16W	R927	1-216-833-11	RES-CHIP	10K	5%	1/16W
R831	1-216-806-11	RES-CHIP	56	5%	1/16W	R928	1-216-864-91	SHORT			
R832	1-216-851-11	RES-CHIP	330K	5%	1/16W	R929	1-216-864-91	SHORT			




NOTE: The components identified by shading and  mark are critical for safety. Replace only with part number specified.







NOTE: Les composants identifiés par un trame et une marque  sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

REF.NO.	PART NO.	DESCRIPTION	VALUES			REF.NO.	PART NO.	DESCRIPTION	VALUES	
R930	1-216-864-91	SHORT				RB110	1-239-409-11	RES, NETWORK	47	-3216
R931	1-216-864-91	SHORT				RB112	1-239-409-11	RES, NETWORK	47	-3216
R932	1-216-864-91	SHORT				RB113	1-239-409-11	RES, NETWORK	47	-3216
R933	1-216-864-91	SHORT				RB114	1-239-409-11	RES, NETWORK	47	-3216
R935	1-216-805-11	RES-CHIP	47	5%	1/16W	RB115	1-239-409-11	RES, NETWORK	47	-3216
R936	1-216-805-11	RES-CHIP	47	5%	1/16W	RB116	1-239-409-11	RES, NETWORK	47	-3216
R937	1-216-805-11	RES-CHIP	47	5%	1/16W	RB117	1-239-409-11	RES, NETWORK	47	-3216
R938	1-216-805-11	RES-CHIP	47	5%	1/16W	RB118	1-239-409-11	RES, NETWORK	47	-3216
R939	1-216-829-11	RES-CHIP	4.7K	5%	1/16W	RB119	1-239-409-11	RES, NETWORK	47	-3216
R940	1-216-809-11	RES-CHIP	100	5%	1/16W	RB120	1-239-409-11	RES, NETWORK	47	-3216
R942	1-216-833-11	RES-CHIP	10K	5%	1/16W	RB121	1-239-409-11	RES, NETWORK	47	-3216
R943	1-216-833-11	RES-CHIP	10K	5%	1/16W	RB122	1-239-409-11	RES, NETWORK	47	-3216
R944	1-216-833-11	RES-CHIP	10K	5%	1/16W	RB123	1-239-409-11	RES, NETWORK	47	-3216
R945	1-216-833-11	RES-CHIP	10K	5%	1/16W	RB124	1-239-409-11	RES, NETWORK	47	-3216
R946	1-218-285-11	RES-CHIP	75	5%	1/16W	RB125	1-239-409-11	RES, NETWORK	47	-3216
R947	1-218-285-11	RES-CHIP	75	5%	1/16W	RB200	1-236-908-11	RES, NETWORK	10K	-3216
R948	1-216-833-11	RES-CHIP	10K	5%	1/16W	RB201	1-239-409-11	RES, NETWORK	47	-3216
R949	1-216-825-11	RES-CHIP	2.2K	5%	1/16W	RB202	1-239-409-11	RES, NETWORK	47	-3216
R970	1-216-833-11	RES-CHIP	10K	5%	1/16W	RB203	1-239-409-11	RES, NETWORK	47	-3216
R971	1-249-389-11	CARBON	4.7	5%	1/4W	RB204	1-239-409-11	RES, NETWORK	47	-3216
R972	1-216-821-11	RES-CHIP	1K	5%	1/16W	RB300	1-239-409-11	RES, NETWORK	47	-3216
R973	1-216-821-11	RES-CHIP	1K	5%	1/16W	RB301	1-239-409-11	RES, NETWORK	47	-3216
R974	1-216-825-11	RES-CHIP	2.2K	5%	1/16W	RB302	1-239-409-11	RES, NETWORK	47	-3216
R975	1-216-821-11	RES-CHIP	1K	5%	1/16W	RB303	1-239-409-11	RES, NETWORK	47	-3216
R976	1-216-821-11	RES-CHIP	1K	5%	1/16W	RB304	1-239-409-11	RES, NETWORK	47	-3216
R977	1-216-821-11	RES-CHIP	1K	5%	1/16W	RB305	1-239-409-11	RES, NETWORK	47	-3216
R978	1-216-827-11	RES-CHIP	3.3K	5%	1/16W	RB306	1-239-409-11	RES, NETWORK	47	-3216
R979	1-216-821-11	RES-CHIP	1K	5%	1/16W	RB307	1-239-409-11	RES, NETWORK	47	-3216
R980	1-249-389-11	CARBON	4.7	5%	1/4W	RB308	1-239-409-11	RES, NETWORK	47	-3216
R981	1-216-825-11	RES-CHIP	2.2K	5%	1/16W	RB309	1-239-409-11	RES, NETWORK	47	-3216
R982	1-216-829-11	RES-CHIP	4.7K	5%	1/16W	RB310	1-239-409-11	RES, NETWORK	47	-3216
R983	1-216-829-11	RES-CHIP	4.7K	5%	1/16W	RB311	1-239-409-11	RES, NETWORK	47	-3216
R984	1-216-833-11	RES-CHIP	10K	5%	1/16W	RB312	1-239-409-11	RES, NETWORK	47	-3216
R985	1-216-833-11	RES-CHIP	10K	5%	1/16W	RB313	1-239-409-11	RES, NETWORK	47	-3216
R986	1-216-833-11	RES-CHIP	10K	5%	1/16W	RB314	1-239-409-11	RES, NETWORK	47	-3216
R987	1-216-837-11	RES-CHIP	22K	5%	1/16W	RB315	1-239-409-11	RES, NETWORK	47	-3216
 R1350	1-249-414-11	CARBON	560	5%	1/4W	RB316	1-239-409-11	RES, NETWORK	47	-3216
R1353	1-216-033-00	RES-CHIP	220	5%	1/10W	RB317	1-239-409-11	RES, NETWORK	47	-3216
RESISTOR BRIDGE						RB318	1-239-409-11	RES, NETWORK	47	-3216
RB100	1-239-409-11	RES, NETWORK	47	-3216		RB319	1-239-409-11	RES, NETWORK	47	-3216
RB101	1-239-409-11	RES, NETWORK	47	-3216		RB320	1-239-409-11	RES, NETWORK	47	-3216
RB102	1-239-409-11	RES, NETWORK	47	-3216		RB321	1-239-409-11	RES, NETWORK	47	-3216
RB103	1-239-409-11	RES, NETWORK	47	-3216		RB322	1-239-409-11	RES, NETWORK	47	-3216
RB104	1-236-908-11	RES, NETWORK	10K	-3216		RB323	1-239-409-11	RES, NETWORK	47	-3216
RB106	1-239-409-11	RES, NETWORK	47	-3216		RB324	1-239-409-11	RES, NETWORK	47	-3216
RB107	1-239-409-11	RES, NETWORK	47	-3216		RB325	1-239-409-11	RES, NETWORK	47	-3216
RB108	1-239-409-11	RES, NETWORK	47	-3216		RB326	1-239-409-11	RES, NETWORK	47	-3216
RB109	1-239-409-11	RES, NETWORK	47	-3216						

NOTE: The components identified by shading and  mark are critical for safety. Replace only with part number specified.


NOTE: Les composants identifiés par un trame et une marque  sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.


A **G**

REF.NO.	PART NO.	DESCRIPTION	VALUES	REF.NO.	PART NO.	DESCRIPTION	VALUES
RB800	1-239-409-11	RES, NETWORK	47 -3216	 C1304	1-136-345-21	MYLAR	0.1μF 20% 125V
RB801	1-239-409-11	RES, NETWORK	47 -3216	 C1306	1-161-742-00	CERAMIC CHIP	0.0022μF 20% 125V
RB802	1-239-409-11	RES, NETWORK	47 -3216	C1307	1-102-050-00	CERAMIC CHIP	0.01μF 20% 500V
RB803	1-239-409-11	RES, NETWORK	47 -3216	C1308	1-102-050-00	CERAMIC CHIP	0.01μF 20% 500V
RB804	1-239-409-11	RES, NETWORK	47 -3216	C1309	1-164-156-11	CERAMIC CHIP	0.1μF 25V
RB806	1-239-409-11	RES, NETWORK	47 -3216	C1310	1-137-732-11	ELECT(BLOCK)	470μF 20% 250V
RB807	1-239-409-11	RES, NETWORK	47 -3216	C1311	1-165-319-11	CERAMIC CHIP	0.1μF 50V
RB808	1-239-409-11	RES, NETWORK	47 -3216	C1312	1-102-244-00	CERAMIC CHIP	220pF 10% 500V
RB809	1-239-409-11	RES, NETWORK	47 -3216	C1314	1-162-318-11	CERAMIC CHIP	0.001μF 10% 500V
RB810	1-239-409-11	RES, NETWORK	47 -3216	C1315	1-165-319-11	CERAMIC CHIP	0.1μF 50V
RB811	1-239-409-11	RES, NETWORK	47 -3216	C1316	1-165-319-11	CERAMIC CHIP	0.1μF 50V
RB812	1-239-409-11	RES, NETWORK	47 -3216	C1317	1-164-156-11	CERAMIC CHIP	0.1μF 25V
RB813	1-239-409-11	RES, NETWORK	47 -3216	C1318	1-165-319-11	CERAMIC CHIP	0.1μF 50V
RB814	1-239-409-11	RES, NETWORK	47 -3216	C1319	1-128-952-31	ELECT	220μF 20% 25V
RB815	1-239-409-11	RES, NETWORK	47 -3216	C1320	1-107-934-11	ELECT	220μF 20% 100V
RB816	1-239-409-11	RES, NETWORK	47 -3216	C1321	1-128-952-31	ELECT	220μF 20% 25V
RB817	1-239-409-11	RES, NETWORK	47 -3216	C1322	1-128-952-31	ELECT	220μF 20% 25V
RB820	1-236-908-11	RES, NETWORK	10K -3216	C1323	1-104-665-11	ELECT	100μF 20% 10V
RB821	1-239-409-11	RES, NETWORK	47 -3216	C1324	1-107-933-11	ELECT	100μF 20% 100V
RB822	1-239-409-11	RES, NETWORK	47 -3216	C1325	1-164-156-11	CERAMIC CHIP	0.1μF 25V
RB823	1-236-908-11	RES, NETWORK	10K -3216	C1326	1-137-733-51	ELECT	4700pF 20% 25V
RB900	1-239-409-11	RES, NETWORK	47 -3216	C1328	1-126-961-11	ELECT	2.2μF 20% 50V
RB901	1-239-409-11	RES, NETWORK	47 -3216	C1329	1-126-935-11	ELECT	470μF 20% 10V
RB902	1-239-409-11	RES, NETWORK	47 -3216	C1330	1-104-665-11	ELECT	100μF 20% 10V
RB903	1-239-409-11	RES, NETWORK	47 -3216	C1333	1-126-960-11	ELECT	1μF 20% 50V
RB904	1-239-409-11	RES, NETWORK	47 -3216	C1334	1-128-954-11	ELECT	1000μF 20% 25V
RB905	1-239-409-11	RES, NETWORK	47 -3216	C1335	1-162-318-11	CERAMIC CHIP	0.001μF 10% 500V
RB906	1-239-409-11	RES, NETWORK	47 -3216	C1337	1-164-156-11	CERAMIC CHIP	0.1μF 25V
RB907	1-239-409-11	RES, NETWORK	47 -3216	C1338	1-162-117-00	CERAMIC CHIP	100pF 10% 500V
RB908	1-239-409-11	RES, NETWORK	47 -3216	C1339	1-165-319-11	CERAMIC CHIP	0.1μF 50V
RB909	1-239-409-11	RES, NETWORK	47 -3216	C1340	1-165-319-11	CERAMIC CHIP	0.1μF 50V
				C1341	1-165-319-11	CERAMIC CHIP	0.1μF 50V
TRANSFORMER				CONNECTOR			
 T200	1-427-947-11	TRANSFORMER,	MODEM	 CN1300	1-251-135-11	INLET, AC.	
				* CN1301	1-794-440-11	PIN, CONNECTOR 14P	
CRYSTAL				DIODE			
X100	1-767-911-21	CRYSTAL	VIBRATOR	D1300	8-719-510-43	DIODE S1WB60B	
X200	1-760-624-11	VIBRATOR,	CRYSTAL	D1301	8-719-052-90	DIODE D1NL40-TR2	
X250	1-577-358-21	VIBRATOR,	CERAMIC CHIP	D1302	8-719-078-29	DIODE 1.5KE200A	
X800	1-567-098-51	VIBRATOR,	CRYSTAL	D1303	8-719-063-73	DIODE D1NL20U-TR	
X801	1-767-262-11	VIBRATOR,	CRYSTAL	D1304	8-719-063-73	DIODE D1NL20U-TR	
				D1305	8-719-067-26	DIODE STPS10L40CF	
				D1306	8-719-067-26	DIODE STPS10L40CF	
				D1307	8-719-063-73	DIODE D1NL20U-TR	
				D1308	8-719-028-45	DIODE D2L20U	
CAPACITOR							
C1300	1-126-947-11	ELECT	47μF 20% 35V				
 C1301	1-136-345-21	MYLAR	0.1μF 20% 125V				
 C1303	1-161-742-00	CERAMIC CHIP	0.0022μF 20% 125V				

*** A-1316-523-A G BOARD, COMPLETE**



NOTE: The components identified by shading and  mark are critical for safety. Replace only with part number specified.

NOTE: Les composants identifiés par un trame et une marque  sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

REF.NO.	PART NO.	DESCRIPTION	VALUES			
D1310	8-719-063-73	DIODE D1NL20U-TR				
D1319	8-719-028-45	DIODE D2L20U				
FUSE						
F1300	1-532-745-11	FUSE, GLASS TUBE 3.15A/125V				
F1301	1-532-747-11	FUSE, GLASS TUBE 5A/125V				
FERRITE BEAD						
FB1300	1-412-911-11	FERRITE	0μH			
FB1301	1-412-911-11	FERRITE	0μH			
FUSE HOLDER						
FH1	1-533-223-11	HOLDER, FUSE				
FH2	1-533-223-11	HOLDER, FUSE				
FH3	1-533-223-11	HOLDER, FUSE				
FH4	1-533-223-11	HOLDER, FUSE				
IC						
IC1300	8-759-548-33	IC TOP226Y-BB				
IC1301	8-719-936-96	PHOTO COUPLER PC817-B				
IC1302	8-759-198-31	IC TL431CLP-Z				
IC1303	8-759-663-02	IC L7905CV				
COIL						
L1300	1-412-537-31	INDUCTOR	100μH			
L1301	1-406-971-21	INDUCTOR	10μH			
RESISTOR						
R1300	1-216-313-00	RES-CHIP	8.2	5%	1/10W	
R1301	1-202-723-00	SOLID	2.2M	20%	1/2W	
R1303	1-216-113-00	RES-CHIP	470K	5%	1/10W	
R1304	1-217-253-11	WIREWOUND	2.2	10%	3W	
R1305	1-216-113-00	RES-CHIP	470K	5%	1/10W	
R1309	1-249-387-11	CARBON	3.3	5%	1/4W	
R1310	1-208-806-11	METAL CHIP	10K	0.50%	1/10W	
R1311	1-208-780-11	METAL CHIP	820	0.50%	1/10W	
R1312	1-216-807-11	RES-CHIP	68	5%	1/16W	
R1313	1-208-794-11	METAL CHIP	3.3K	0.50%	1/10W	
R1314	1-216-097-11	RES-CHIP	100K	5%	1/10W	
R1320	1-216-815-11	RES-CHIP	330	5%	1/16W	
R1321	1-216-814-11	RES-CHIP	270	5%	1/16W	
R1323	1-216-815-11	RES-CHIP	330	5%	1/16W	
TRANSFORMER						
T1300	1-435-708-11	TRANSFORMER, LINE FILTER				
T1301	1-435-527-11	TRANSFORMER, SWITCHING REGULATOR				

REF.NO.	PART NO.	DESCRIPTION	VALUES			
VARISTOR						
VD1300	1-801-074-41	VARISTOR ERZV10D271				
<div>HA</div> * A-1372-840-A HA BOARD, MOUNTED						
CAPACITOR						
C001	1-162-970-11	CERAMIC CHIP	0.01μF	10%	25V	
C002	1-162-970-11	CERAMIC CHIP	0.01μF	10%	25V	
C003	1-162-970-11	CERAMIC CHIP	0.01μF	10%	25V	
C004	1-162-970-11	CERAMIC CHIP	0.01μF	10%	25V	
C005	1-162-970-11	CERAMIC CHIP	0.01μF	10%	25V	
C006	1-162-970-11	CERAMIC CHIP	0.01μF	10%	25V	
C007	1-162-970-11	CERAMIC CHIP	0.01μF	10%	25V	
CONNECTOR						
CN001	1-568-852-11	PIN, CONNECTOR (PC BOARD) 9P				
FERRITE BEAD						
FB001	1-414-231-22	FERRITE	0μH			
SWITCH						
S001	1-572-198-11	SWITCH KEYBOARD				
S002	1-572-198-11	SWITCH KEYBOARD				
S003	1-572-198-11	SWITCH KEYBOARD				
S004	1-572-198-11	SWITCH KEYBOARD				
S005	1-572-198-11	SWITCH KEYBOARD				
S006	1-572-198-11	SWITCH KEYBOARD				
S007	1-572-198-11	SWITCH KEYBOARD				
<div>HD</div> * A-1375-206-A HD BOARD, COMPLETE						
CAPACITOR						
C1400	1-124-261-00	ELECT	10μF	20%	10V	
C1401	1-164-156-11	CERAMIC CHIP	0.1μF		25V	
C1402	1-164-156-11	CERAMIC CHIP	0.1μF		25V	
C1404	1-124-261-00	ELECT	10μF	20%	10V	
C1405	1-164-156-11	CERAMIC CHIP	0.1μF		25V	
C1406	1-126-966-11	ELECT	33μF	20%	50V	
C1407	1-126-933-11	ELECT	100μF	20%	16V	
C1460	1-124-589-11	ELECT	47μF	20%	16V	
C1461	1-162-968-11	CERAMIC CHIP	.0047μF	10%	50V	



REF.NO.	PART NO.	DESCRIPTION	VALUES			REF.NO.	PART NO.	DESCRIPTION	VALUES		
C1462	1-119-772-91	ELECT	47μF	20%	35V	DISPLAY					
C1463	1-164-156-11	CERAMIC CHIP	0.1μF		25V	ND1400	1-517-969-11	INDICATOR TUBE, FLUORESCENT			
C1480	1-165-319-11	CERAMIC CHIP	0.1μF		50V						
C1481	1-165-319-11	CERAMIC CHIP	0.1μF		50V						
C1482	1-165-319-11	CERAMIC CHIP	0.1μF		50V						
C1483	1-164-156-11	CERAMIC CHIP	0.1μF		25V	R1401	1-216-817-11	RES-CHIP	470	5%	1/16W
C1490	1-124-584-00	ELECT	100μF	20%	6.3V	R1402	1-216-817-11	RES-CHIP	470	5%	1/16W
						R1405	1-216-845-11	RES-CHIP	100K	5%	1/16W
						R1406	1-216-845-11	RES-CHIP	100K	5%	1/16W
						R1407	1-216-864-91	SHORT			
CONNECTOR						R1408	1-216-864-91	SHORT			
CN1400	1-770-701-11	CONNECTOR, FFC/FPC		18P		R1460	1-249-377-11	CARBON	0.47	5%	1/4W
						R1461	1-216-822-11	RES-CHIP	1.2K	5%	1/16W
						R1462	1-216-837-11	RES-CHIP	22K	5%	1/16W
D1460	8-719-063-73	DIODE D1NL20U-TR				R1463	1-216-826-11	RES-CHIP	2.7K	5%	1/16W
D1462	8-719-118-15	DIODE RD36M-T1B									
D1463	8-719-118-15	DIODE RD36M-T1B				R1465	1-216-864-91	SHORT			
D1481	8-719-017-76	DIODE MA8030-TX				R1480	1-216-831-11	RES-CHIP	6.8K	5%	1/16W
						R1490	1-216-805-11	RES-CHIP	47	5%	1/16W
						R1491	1-216-864-91	SHORT			
						R1493	1-216-826-11	RES-CHIP	2.7K	5%	1/16W
FERRITE BEAD						RESISTOR BRIDGE					
FB1401	1-414-227-11	FERRITE	0μH			RB1401	1-233-810-21	RES, NETWORK	100K	-3216	
FB1402	1-414-227-11	FERRITE	0μH			RB1402	1-233-810-21	RES, NETWORK	100K	-3216	
FB1403	1-414-231-22	FERRITE	0μH			RB1403	1-233-810-21	RES, NETWORK	100K	-3216	
FB1404	1-414-227-11	FERRITE	0μH			RB1404	1-233-810-21	RES, NETWORK	100K	-3216	
FB1405	1-414-227-11	FERRITE	0μH			RB1405	1-233-810-21	RES, NETWORK	100K	-3216	
FB1406	1-414-227-11	FERRITE	0μH			RB1406	1-233-810-21	RES, NETWORK	100K	-3216	
FB1407	1-414-227-11	FERRITE	0μH								
FB1408	1-414-227-11	FERRITE	0μH			RB1407	1-233-810-21	RES, NETWORK	100K	-3216	
FB1409	1-414-227-11	FERRITE	0μH			RB1408	1-233-810-21	RES, NETWORK	100K	-3216	
FB1410	1-414-227-11	FERRITE	0μH			RB1409	1-233-810-21	RES, NETWORK	100K	-3216	
FB1411	1-414-227-11	FERRITE	0μH			RB1410	1-233-810-21	RES, NETWORK	100K	-3216	
FB1412	1-414-227-11	FERRITE	0μH			RB1411	1-233-810-21	RES, NETWORK	100K	-3216	
FB1413	1-414-227-11	FERRITE	0μH			RB1412	1-233-810-21	RES, NETWORK	100K	-3216	
FB1414	1-414-227-11	FERRITE	0μH								
FB1415	1-414-231-22	FERRITE	0μH								
FB1416	1-414-227-11	FERRITE	0μH								
IC						CRYSTAL					
IC1400	8-752-907-52	IC CXP82832-016Q				X1401	1-579-175-11	VIBRATOR, CERAMIC CHIP			
IC1401	8-759-926-66	IC SN74HC373ANSR				<div>HP</div> <div>* A-1372-842-A HP BOARD, MOUNTED</div>					
IC1460	8-759-038-43	IC MC34063AP1									
IC1490	8-749-011-05	IC GP1U28X									
COIL						CAPACITOR					
L1402	1-414-177-11	INDUCTOR	1μH			C050	1-162-964-11	CERAMIC CHIP	0.001μF	10%	50V
L1403	1-414-177-11	INDUCTOR	1μH			C051	1-162-964-11	CERAMIC CHIP	0.001μF	10%	50V
L1461	1-406-667-41	INDUCTOR	220μH			CONNECTOR					
						* CN050	1-564-518-11	PLUG, CONNECTOR3P			



REF.NO.	PART NO.	DESCRIPTION	VALUES		
<u>FERRITE BEAD</u>					
FB050	1-216-815-11	RES-CHIP	330	5%	1/16W

SWITCH

S050	1-572-198-11	SWITCH KEYBOARD
S051	1-572-198-11	SWITCH KEYBOARD



* A-1391-050-A SC BOARD, MOUNTED

CAPACITOR

C951	1-163-038-11	CERAMIC CHIP	0.1μF		25V
C952	1-163-038-11	CERAMIC CHIP	0.1μF		25V
C953	1-163-038-11	CERAMIC CHIP	0.1μF		25V
C954	1-163-038-11	CERAMIC CHIP	0.1μF		25V
C955	1-117-370-11	CERAMIC CHIP	10μF	10V	
C956	1-163-249-11	CERAMIC CHIP	82pF	5%	50V
C957	1-124-261-00	ELECT	10μF	20%	10V
C958	1-163-038-11	CERAMIC CHIP	0.1μF		25V
C960	1-163-038-11	CERAMIC CHIP	0.1μF		25V
C961	1-163-038-11	CERAMIC CHIP	0.1μF		25V
C963	1-163-038-11	CERAMIC CHIP	0.1μF		25V

CONNECTOR

CN950	1-785-558-11	CONNECTOR, SMART CARD
CN951	1-568-852-11	PIN, CONNECTOR (PC BOARD) 9P

DIODE

D950	8-719-060-48	DIODE RB751V-40TE-17
------	--------------	----------------------

IC

IC950	8-759-533-74	IC TDA8004T
IC952	8-759-198-31	IC TL431CLP-Z

TRANSISTOR

Q950	1-801-806-11	TRANSISTOR DTC144EKA-T146
Q951	8-729-422-27	TRANSISTOR 2SD601A-QRS-TX
Q952	1-801-806-11	TRANSISTOR DTC144EKA-T146

RESISTOR

R950	1-216-073-00	RES-CHIP	10K	5%	1/10W
R951	1-216-073-00	RES-CHIP	10K	5%	1/10W
R953	1-216-073-00	RES-CHIP	10K	5%	1/10W
R957	1-216-073-00	RES-CHIP	10K	5%	1/10W
R959	1-208-790-11	METAL CHIP	2.2K	0.50%	1/10W
R960	1-208-802-11	METAL CHIP	6.8K	0.50%	1/10W
R961	1-216-043-91	RES-CHIP	560	5%	1/10W

REF.NO.	PART NO.	DESCRIPTION	VALUES		
R962	1-216-073-00	RES-CHIP	10K	5%	1/10W
R963	1-216-011-00	RES-CHIP	27	5%	1/10W



* A-1395-001-A TU BOARD, COMPLETE

3-741-396-01	INSULATOR
4-382-854-01	SCREW (M3X8), P, SW (+)

CAPACITOR

C1000	1-164-156-11	CERAMIC CHIP	0.1μF		25V
C1002	1-164-156-11	CERAMIC CHIP	0.1μF		25V
C1003	1-104-665-11	ELECT	100μF	20%	10V
C1004	1-164-156-11	CERAMIC CHIP	0.1μF		25V
C1005	1-104-665-11	ELECT	100μF	20%	25V
C1006	1-164-156-11	CERAMIC CHIP	0.1μF		25V
C1007	1-104-665-11	ELECT	100μF	20%	10V
C1008	1-164-156-11	CERAMIC CHIP	0.1μF		25V
C1009	1-126-964-11	ELECT	10μF	20%	50V
C1010	1-126-964-11	ELECT	10μF	20%	50V
C1011	1-126-964-11	ELECT	10μF	20%	50V
C1012	1-162-915-11	CERAMIC CHIP	10pF	0.50pF	50V
C1013	1-162-915-11	CERAMIC CHIP	10pF	0.50pF	50V
C1014	1-165-176-11	CERAMIC CHIP	0.047μF	10%	16V
C1015	1-164-156-11	CERAMIC CHIP	0.1μF		25V
C1016	1-162-964-11	CERAMIC CHIP	0.001μF	10%	50V
C1017	1-125-891-11	CERAMIC CHIP	0.47μF	10%	10V
C1018	1-125-891-11	CERAMIC CHIP	0.47μF	10%	10V
C1019	1-126-960-11	ELECT	1μF	20%	50V
C1020	1-165-176-11	CERAMIC CHIP	0.047μF	10%	16V
C1021	1-165-176-11	CERAMIC CHIP	0.047μF	10%	16V
C1022	1-164-156-11	CERAMIC CHIP	0.1μF		25V
C1023	1-126-964-11	ELECT	10μF	20%	50V
C1024	1-162-927-11	CERAMIC CHIP	100pF	5%	50V
C1025	1-162-920-11	CERAMIC CHIP	27pF	5%	50V
C1026	1-162-920-11	CERAMIC CHIP	27pF	5%	50V
C1028	1-162-964-11	CERAMIC CHIP	0.001μF	10%	50V
C1029	1-162-966-11	CERAMIC CHIP	0.0022μF	10%	50V
C1030	1-126-964-11	ELECT	10μF	20%	50V
C1031	1-126-960-11	ELECT	1μF	20%	50V
C1032	1-162-964-11	CERAMIC CHIP	0.001μF	10%	50V
C1033	1-164-156-11	CERAMIC CHIP	0.1μF		25V
C1034	1-104-665-11	ELECT	100μF	20%	10V
C1035	1-126-968-11	ELECT	100μF	20%	50V
C1036	1-165-319-11	CERAMIC CHIP	0.1μF		50V
C1037	1-109-889-11	ELECT	1μF	20%	50V
C1038	1-165-319-11	CERAMIC CHIP	0.1μF		50V



REF.NO.	PART NO.	DESCRIPTION	VALUES			REF.NO.	PART NO.	DESCRIPTION	VALUES		
C1039	1-164-156-11	CERAMIC CHIP	0.1μF		25V	C1086	1-165-319-11	CERAMIC CHIP	0.1μF		50V
C1040	1-164-156-11	CERAMIC CHIP	0.1μF		25V	C1087	1-164-156-11	CERAMIC CHIP	0.1μF		25V
C1041	1-164-156-11	CERAMIC CHIP	0.1μF		25V	C1088	1-164-156-11	CERAMIC CHIP	0.1μF		25V
C1042	1-164-156-11	CERAMIC CHIP	0.1μF		25V	C1089	1-164-156-11	CERAMIC CHIP	0.1μF		25V
C1043	1-164-156-11	CERAMIC CHIP	0.1μF		25V	C1090	1-104-665-11	ELECT	100μF	20%	25V
C1044	1-164-156-11	CERAMIC CHIP	0.1μF		25V	C1091	1-126-967-11	ELECT	47μF	20%	50V
C1045	1-164-156-11	CERAMIC CHIP	0.1μF		25V	C1092	1-126-968-11	ELECT	100μF	20%	50V
C1046	1-164-156-11	CERAMIC CHIP	0.1μF		25V	C1093	1-104-665-11	ELECT	100μF	20%	25V
C1047	1-164-156-11	CERAMIC CHIP	0.1μF		25V	C1094	1-104-665-11	ELECT	100μF	20%	10V
C1048	1-164-156-11	CERAMIC CHIP	0.1μF		25V	C1095	1-164-156-11	CERAMIC CHIP	0.1μF		25V
C1049	1-126-964-11	ELECT	10μF	20%	50V	C1096	1-164-156-11	CERAMIC CHIP	0.1μF		25V
C1050	1-126-965-11	ELECT	22μF	20%	50V	C1097	1-164-005-11	CERAMIC CHIP	0.47μF		25V
C1051	1-126-968-11	ELECT	100μF	20%	50V	C1098	1-164-156-11	CERAMIC CHIP	0.1μF		25V
C1052	1-126-965-11	ELECT	22μF	20%	50V	C1099	1-165-319-11	CERAMIC CHIP	0.1μF		50V
C1053	1-164-156-11	CERAMIC CHIP	0.1μF		25V	C1100	1-162-964-11	CERAMIC CHIP	0.001μF	10%	50V
C1054	1-162-968-11	CERAMIC CHIP	.0047μF	10%	50V	C1101	1-164-156-11	CERAMIC CHIP	0.1μF		25V
C1055	1-126-964-11	ELECT	10μF	20%	50V	C1102	1-164-156-11	CERAMIC CHIP	0.1μF		25V
C1056	1-126-933-11	ELECT	100μF	20%	16V	C1103	1-164-156-11	CERAMIC CHIP	0.1μF		25V
C1057	1-126-964-11	ELECT	10μF	20%	50V	C1104	1-162-920-11	CERAMIC CHIP	27pF	5%	50V
C1058	1-162-927-11	CERAMIC CHIP	100pF	5%	50V	C1105	1-162-920-11	CERAMIC CHIP	27pF	5%	50V
C1059	1-164-005-11	CERAMIC CHIP	0.47μF		25V	C1106	1-162-964-11	CERAMIC CHIP	0.001μF	10%	50V
C1060	1-164-156-11	CERAMIC CHIP	0.1μF		25V	C1107	1-164-156-11	CERAMIC CHIP	0.1μF		25V
C1061	1-164-156-11	CERAMIC CHIP	0.1μF		25V	C1108	1-164-156-11	CERAMIC CHIP	0.1μF		25V
C1062	1-165-319-11	CERAMIC CHIP	0.1μF		50V	C1109	1-164-156-11	CERAMIC CHIP	0.1μF		25V
C1063	1-164-156-11	CERAMIC CHIP	0.1μF		25V	C1110	1-164-156-11	CERAMIC CHIP	0.1μF		25V
C1064	1-164-156-11	CERAMIC CHIP	0.1μF		25V	C1111	1-162-964-11	CERAMIC CHIP	0.001μF	10%	50V
C1065	1-164-156-11	CERAMIC CHIP	0.1μF		25V	C1112	1-162-919-11	CERAMIC CHIP	22pF	5%	50V
C1066	1-164-156-11	CERAMIC CHIP	0.1μF		25V	C1113	1-162-919-11	CERAMIC CHIP	22pF	5%	50V
C1067	1-164-156-11	CERAMIC CHIP	0.1μF		25V	C1114	1-164-156-11	CERAMIC CHIP	0.1μF		25V
C1068	1-164-156-11	CERAMIC CHIP	0.1μF		25V	C1115	1-164-156-11	CERAMIC CHIP	0.1μF		25V
C1069	1-164-156-11	CERAMIC CHIP	0.1μF		25V	C1116	1-164-156-11	CERAMIC CHIP	0.1μF		25V
C1070	1-165-319-11	CERAMIC CHIP	0.1μF		50V	C1117	1-164-156-11	CERAMIC CHIP	0.1μF		25V
C1071	1-164-156-11	CERAMIC CHIP	0.1μF		25V	C1118	1-164-156-11	CERAMIC CHIP	0.1μF		25V
C1072	1-104-665-11	ELECT	100μF	20%	10V	C1119	1-164-156-11	CERAMIC CHIP	0.1μF		25V
C1073	1-164-005-11	CERAMIC CHIP	0.47μF		25V	C1120	1-126-964-11	ELECT	10μF	20%	50V
C1074	1-164-156-11	CERAMIC CHIP	0.1μF		25V	C1121	1-126-964-11	ELECT	10μF	20%	50V
C1075	1-126-916-11	ELECT	1000μF	20%	6.3V	C1122	1-162-964-11	CERAMIC CHIP	0.001μF	10%	50V
C1076	1-164-005-11	CERAMIC CHIP	0.47μF		25V	C1123	1-164-156-11	CERAMIC CHIP	0.1μF		25V
C1077	1-165-319-11	CERAMIC CHIP	0.1μF		50V	C1124	1-164-156-11	CERAMIC CHIP	0.1μF		25V
C1078	1-126-965-11	ELECT	22μF	20%	50V	C1125	1-164-156-11	CERAMIC CHIP	0.1μF		25V
C1079	1-164-156-11	CERAMIC CHIP	0.1μF		25V	C1126	1-162-964-11	CERAMIC CHIP	0.001μF	10%	50V
C1080	1-164-156-11	CERAMIC CHIP	0.1μF		25V	C1127	1-164-156-11	CERAMIC CHIP	0.1μF		25V
C1081	1-165-319-11	CERAMIC CHIP	0.1μF		50V	C1128	1-162-964-11	CERAMIC CHIP	0.001μF	10%	50V
C1082	1-164-156-11	CERAMIC CHIP	0.1μF		25V	C1129	1-164-156-11	CERAMIC CHIP	0.1μF		25V
C1083	1-164-156-11	CERAMIC CHIP	0.1μF		25V	C1130	1-164-156-11	CERAMIC CHIP	0.1μF		25V
C1084	1-164-156-11	CERAMIC CHIP	0.1μF		25V	C1131	1-164-156-11	CERAMIC CHIP	0.1μF		25V
C1085	1-165-319-11	CERAMIC CHIP	0.1μF		50V	C1132	1-164-156-11	CERAMIC CHIP	0.1μF		25V

— 48 —



REF.NO.	PART NO.	DESCRIPTION	VALUES	REF.NO.	PART NO.	DESCRIPTION	VALUES	
<u>CONNECTOR</u>				FB1031	1-414-231-22	FERRITE	0μH	
*	CN1000	1-794-326-11	CONNECTOR, BORAD TO BOARD	100P.	FB1032	1-414-231-22	FERRITE	0μH
					FB1033	1-414-231-22	FERRITE	0μH
					FB1034	1-414-231-22	FERRITE	0μH
					<u>COMPOSITION CIRCUIT BLOCK</u>			
CP1050	1-473-983-11	FILTER BLOCK, COMB	FB1035	1-414-231-22	FERRITE	0μH		
<u>DIODE</u>				FB1036	1-414-231-22	FERRITE	0μH	
D1070	8-719-063-73	DIODE D1NL20U-TR		FB1037	1-414-231-22	FERRITE	0μH	
D1100	8-719-045-67	DIODE RB731U-T108		FB1038	1-414-231-22	FERRITE	0μH	
D1211	8-719-063-73	DIODE D1NL20U-TR		FB1039	1-414-231-22	FERRITE	0μH	
D1212	8-719-063-73	DIODE D1NL20U-TR		FB1040	1-414-231-22	FERRITE	0μH	
D1213	8-719-073-01	DIODE MA1111-TX		FB1043	1-414-231-22	FERRITE	0μH	
				FB1044	1-414-231-22	FERRITE	0μH	
D1214	8-719-073-01	DIODE MA1111-TX		FB1045	1-414-231-22	FERRITE	0μH	
D1215	8-719-063-73	DIODE D1NL20U-TR		FB1046	1-412-911-11	FERRITE	0μH	
D1221	8-719-063-73	DIODE D1NL20U-TR		FB1047	1-412-911-11	FERRITE	0μH	
D1241	8-719-063-73	DIODE D1NL20U-TR		FB1048	1-414-231-22	FERRITE	0μH	
<u>FERRITE BEAD</u>				FB1049	1-414-231-22	FERRITE	0μH	
FB1000	1-414-231-22	FERRITE	0μH	FB1050	1-412-911-11	FERRITE	0μH	
FB1001	1-414-231-22	FERRITE	0μH	FB1051	1-414-231-22	FERRITE	0μH	
FB1002	1-414-231-22	FERRITE	0μH	FB1052	1-414-231-22	FERRITE	0μH	
FB1003	1-414-231-22	FERRITE	0μH	FB1053	1-414-231-22	FERRITE	0μH	
FB1005	1-414-231-22	FERRITE	0μH	FB1054	1-414-231-22	FERRITE	0μH	
				FB1055	1-414-231-22	FERRITE	0μH	
FB1006	1-414-231-22	FERRITE	0μH	FB1056	1-414-231-22	FERRITE	0μH	
FB1007	1-412-911-11	FERRITE	0μH	FB1057	1-414-231-22	FERRITE	0μH	
FB1008	1-414-231-22	FERRITE	0μH	FB1058	1-412-911-11	FERRITE	0μH	
FB1009	1-414-231-22	FERRITE	0μH	FB1059	1-412-911-11	FERRITE	0μH	
FB1010	1-414-231-22	FERRITE	0μH	FB1060	1-414-231-22	FERRITE	0μH	
				FB1061	1-414-231-22	FERRITE	0μH	
FB1011	1-414-231-22	FERRITE	0μH	FB1062	1-414-231-22	FERRITE	0μH	
FB1012	1-414-231-22	FERRITE	0μH	FB1063	1-414-231-22	FERRITE	0μH	
FB1013	1-414-231-22	FERRITE	0μH	FB1064	1-414-231-22	FERRITE	0μH	
FB1014	1-414-231-22	FERRITE	0μH	FB1065	1-414-231-22	FERRITE	0μH	
FB1016	1-414-231-22	FERRITE	0μH	FB1066	1-414-231-22	FERRITE	0μH	
FB1017	1-414-231-22	FERRITE	0μH	FB1067	1-414-231-22	FERRITE	0μH	
FB1018	1-414-231-22	FERRITE	0μH	FB1068	1-414-231-22	FERRITE	0μH	
FB1019	1-414-231-22	FERRITE	0μH	FB1069	1-414-231-22	FERRITE	0μH	
				FB1070	1-412-911-11	FERRITE	0μH	
FB1020	1-414-231-22	FERRITE	0μH	FB1071	1-412-911-11	FERRITE	0μH	
FB1021	1-414-231-22	FERRITE	0μH	FB1072	1-414-231-22	FERRITE	0μH	
FB1022	1-414-231-22	FERRITE	0μH	FB1073	1-414-231-22	FERRITE	0μH	
FB1023	1-414-231-22	FERRITE	0μH					
FB1024	1-414-231-22	FERRITE	0μH	FB1074	1-414-231-22	FERRITE	0μH	
				FB1075	1-414-231-22	FERRITE	0μH	
FB1025	1-414-231-22	FERRITE	0μH	FB1076	1-412-911-11	FERRITE	0μH	
FB1026	1-414-231-22	FERRITE	0μH	FB1077	1-412-911-11	FERRITE	0μH	
FB1027	1-414-231-22	FERRITE	0μH	FB1078	1-412-911-11	FERRITE	0μH	
FB1028	1-414-231-22	FERRITE	0μH					
FB1029	1-414-231-22	FERRITE	0μH	FB1079	1-414-231-22	FERRITE	0μH	
FB1030	1-414-231-22	FERRITE	0μH					



REF.NO.	PART NO.	DESCRIPTION	VALUES	REF.NO.	PART NO.	DESCRIPTION	VALUES
FB1080	1-414-231-22	FERRITE	0μH	FB1546	1-414-231-22	FERRITE	0μH
FB1081	1-414-231-22	FERRITE	0μH	FB1547	1-414-231-22	FERRITE	0μH
FB1082	1-414-231-22	FERRITE	0μH	FB1549	1-414-231-22	FERRITE	0μH
FB1083	1-414-231-22	FERRITE	0μH	FB1550	1-414-231-22	FERRITE	0μH
FB1084	1-414-231-22	FERRITE	0μH	FB1551	1-414-231-22	FERRITE	0μH
FB1085	1-414-231-22	FERRITE	0μH	FB1552	1-414-231-22	FERRITE	0μH
FB1086	1-414-231-22	FERRITE	0μH	FB1553	1-414-231-22	FERRITE	0μH
FB1087	1-414-231-22	FERRITE	0μH	FB1554	1-414-231-22	FERRITE	0μH
FB1088	1-414-231-22	FERRITE	0μH	FB1590	1-414-231-22	FERRITE	0μH
FB1089	1-414-231-22	FERRITE	0μH	FB1591	1-414-231-22	FERRITE	0μH
FB1090	1-414-231-22	FERRITE	0μH	IC			
FB1091	1-414-231-22	FERRITE	0μH	IC1000	8-759-099-06	IC M5218AFP-TE1	
FB1092	1-414-231-22	FERRITE	0μH	IC1001	8-759-646-65	IC CS5331A	
FB1093	1-414-231-22	FERRITE	0μH	IC1002	8-759-514-57	IC BA7046F-E2	
FB1094	1-414-231-22	FERRITE	0μH	IC1003	8-759-694-44	IC M37267M6-152SP	
FB1095	1-412-911-11	FERRITE	0μH	IC1004	8-759-394-36	IC BA09T	
FB1096	1-414-231-22	FERRITE	0μH	IC1005	8-759-450-47	IC BA05T	
FB1097	1-414-231-22	FERRITE	0μH	IC1050	8-759-450-47	IC BA05T	
FB1098	1-412-911-11	FERRITE	0μH	IC1070	8-759-450-47	IC BA05T	
FB1099	1-414-231-22	FERRITE	0μH	IC1071	8-759-450-47	IC BA05T	
FB1100	1-414-231-22	FERRITE	0μH	IC1100	8-759-641-87	IC BT835KRF	
FB1101	1-414-231-22	FERRITE	0μH	IC1101	8-759-640-14	IC TK15420MTL	
FB1102	1-414-231-22	FERRITE	0μH	IC1102	8-759-594-47	IC SN74LVCHR16245ADL	
FB1103	1-414-231-22	FERRITE	0μH	IC1103	8-759-235-06	IC TC74HC02AF-TP2	
FB1104	1-414-231-22	FERRITE	0μH	IC1211	8-759-510-72	IC LM393DR	
FB1105	1-414-231-22	FERRITE	0μH	IC1212	8-759-100-96	IC NJM4558M-TE2	
FB1106	1-414-231-22	FERRITE	0μH	IC1220	8-759-680-94	IC LM317HVT	
FB1107	1-414-231-22	FERRITE	0μH	IC1280	8-759-198-31	IC TL431CLP-Z	
FB1109	1-414-231-22	FERRITE	0μH	JACK			
FB1112	1-414-231-22	FERRITE	0μH	J1000	1-563-447-21	JACK, PIN 1P	
FB1113	1-414-231-22	FERRITE	0μH	J1001	1-563-447-21	JACK, PIN 1P	
FB1200	1-414-231-22	FERRITE	0μH	COIL			
FB1201	1-414-231-22	FERRITE	0μH	L1030	1-408-608-31	INDUCTOR	27μH
FB1250	1-412-911-11	FERRITE	0μH	L1050	1-408-607-31	INDUCTOR	22μH
FB1251	1-412-911-11	FERRITE	0μH	L1053	1-408-608-31	INDUCTOR	27μH
FB1252	1-414-231-22	FERRITE	0μH	L1070	1-412-529-11	INDUCTOR	22μH
FB1253	1-412-911-11	FERRITE	0μH	L1075	1-406-977-21	INDUCTOR	100μH
FB1280	1-414-231-22	FERRITE	0μH	L1090	1-408-607-31	INDUCTOR	22μH
FB1281	1-414-231-22	FERRITE	0μH	L1091	1-408-607-31	INDUCTOR	22μH
FB1282	1-414-231-22	FERRITE	0μH	L1093	1-408-607-31	INDUCTOR	22μH
FB1538	1-414-231-22	FERRITE	0μH	L1151	1-410-471-11	INDUCTOR	12μH
FB1540	1-414-231-22	FERRITE	0μH	L1152	1-408-613-31	INDUCTOR	68μH
FB1541	1-414-231-22	FERRITE	0μH	L1153	1-408-608-31	INDUCTOR	27μH
FB1542	1-414-231-22	FERRITE	0μH	L1211	1-406-981-21	INDUCTOR	470μH
FB1543	1-414-231-22	FERRITE	0μH				
FB1544	1-414-231-22	FERRITE	0μH				
FB1545	1-414-231-22	FERRITE	0μH				



REF.NO.	PART NO.	DESCRIPTION	VALUES				REF.NO.	PART NO.	DESCRIPTION	VALUES			
<u>IC LINK</u>							R1033	1-216-819-11	RES-CHIP	680	5%	1/16W	
PS1000	1-532-984-11	LINK, IC 2A/90V					R1034	1-216-833-11	RES-CHIP	10K	5%	1/16W	
							R1035	1-216-829-11	RES-CHIP	4.7K	5%	1/16W	
							R1036	1-216-813-11	RES-CHIP	220	5%	1/16W	
							R1037	1-216-813-11	RES-CHIP	220	5%	1/16W	
<u>TRANSISTOR</u>													
Q1001	1-801-806-11	TRANSISTOR DTC144EKA-T146					R1050	1-216-809-11	RES-CHIP	100	5%	1/16W	
Q1002	8-729-216-22	TRANSISTOR 2SB709A-QRS-TX					R1051	1-216-809-11	RES-CHIP	100	5%	1/16W	
Q1051	8-729-422-27	TRANSISTOR 2SD601A-QRS-TX					R1053	1-216-830-11	RES-CHIP	5.6K	5%	1/16W	
Q1100	8-729-048-50	TRANSISTOR 2SK3018-T106					R1056	1-216-813-11	RES-CHIP	220	5%	1/16W	
Q1101	8-729-048-50	TRANSISTOR 2SK3018-T106					R1057	1-216-827-11	RES-CHIP	3.3K	5%	1/16W	
Q1110	8-729-216-22	TRANSISTOR 2SB709A-QRS-TX					R1058	1-216-833-11	RES-CHIP	10K	5%	1/16W	
Q1111	8-729-422-27	TRANSISTOR 2SD601A-QRS-TX					R1061	1-216-821-11	RES-CHIP	1K	5%	1/16W	
Q1151	8-729-216-22	TRANSISTOR 2SB709A-QRS-TX					R1062	1-216-821-11	RES-CHIP	1K	5%	1/16W	
Q1152	8-729-422-27	TRANSISTOR 2SD601A-QRS-TX					R1091	1-216-833-11	RES-CHIP	10K	5%	1/16W	
Q1153	8-729-422-27	TRANSISTOR 2SD601A-QRS-TX					R1092	1-216-833-11	RES-CHIP	10K	5%	1/16W	
Q1154	8-729-422-27	TRANSISTOR 2SD601A-QRS-TX					R1093	1-216-864-91	SHORT				
Q1200	8-729-422-27	TRANSISTOR 2SD601A-QRS-TX					R1094	1-216-864-91	SHORT				
Q1201	8-729-216-22	TRANSISTOR 2SB709A-QRS-TX					R1095	1-260-289-51	CARBON	0.56	5%	1/2W	
Q1204	8-729-216-22	TRANSISTOR 2SB709A-QRS-TX					R1098	1-216-864-91	SHORT				
Q1210	1-801-806-11	TRANSISTOR DTC144EKA-T146					R1100	1-216-817-11	RES-CHIP	470	5%	1/16W	
Q1211	1-801-806-11	TRANSISTOR DTC144EKA-T146					R1101	1-216-817-11	RES-CHIP	470	5%	1/16W	
Q1212	1-801-806-11	TRANSISTOR DTC144EKA-T146					R1102	1-216-845-11	RES-CHIP	100K	5%	1/16W	
							R1103	1-216-815-11	RES-CHIP	330	5%	1/16W	
<u>RESISTOR</u>							R1105	1-216-833-11	RES-CHIP	10K	5%	1/16W	
R1001	1-216-833-11	RES-CHIP	10K	5%	1/16W		R1106	1-216-829-11	RES-CHIP	4.7K	5%	1/16W	
R1005	1-216-807-11	RES-CHIP	68	5%	1/16W								
R1006	1-216-807-11	RES-CHIP	68	5%	1/16W		R1107	1-208-781-11	METAL CHIP	910	0.50%	1/10W	
R1007	1-216-807-11	RES-CHIP	68	5%	1/16W		R1108	1-216-655-11	METAL CHIP	1.5K	0.50%	1/10W	
R1008	1-216-845-11	RES-CHIP	100K	5%	1/16W		R1109	1-216-809-11	RES-CHIP	100	5%	1/16W	
							R1110	1-216-807-11	RES-CHIP	68	5%	1/16W	
R1009	1-216-845-11	RES-CHIP	100K	5%	1/16W		R1111	1-216-833-11	RES-CHIP	10K	5%	1/16W	
R1012	1-216-825-11	RES-CHIP	2.2K	5%	1/16W								
R1013	1-216-825-11	RES-CHIP	2.2K	5%	1/16W		R1112	1-216-826-11	RES-CHIP	2.7K	5%	1/16W	
R1014	1-216-821-11	RES-CHIP	1K	5%	1/16W		R1113	1-216-815-11	RES-CHIP	330	5%	1/16W	
R1015	1-216-824-11	RES-CHIP	1.8K	5%	1/16W		R1114	1-208-784-11	METAL CHIP	1.2K	0.50%	1/10W	
							R1118	1-216-827-11	RES-CHIP	3.3K	5%	1/16W	
R1016	1-216-824-11	RES-CHIP	1.8K	5%	1/16W		R1130	1-216-809-11	RES-CHIP	100	5%	1/16W	
R1017	1-216-832-11	RES-CHIP	8.2K	5%	1/16W								
R1018	1-216-811-11	RES-CHIP	150	5%	1/16W		R1131	1-216-833-11	RES-CHIP	10K	5%	1/16W	
R1019	1-216-811-11	RES-CHIP	150	5%	1/16W		R1132	1-216-833-11	RES-CHIP	10K	5%	1/16W	
R1020	1-216-857-11	RES-CHIP	1M	5%	1/16W		R1133	1-216-833-11	RES-CHIP	10K	5%	1/16W	
							R1134	1-216-809-11	RES-CHIP	100	5%	1/16W	
R1021	1-216-845-11	RES-CHIP	100K	5%	1/16W		R1136	1-216-864-91	SHORT				
R1022	1-216-833-11	RES-CHIP	10K	5%	1/16W								
R1023	1-216-829-11	RES-CHIP	4.7K	5%	1/16W		R1140	1-216-864-91	SHORT				
R1024	1-216-833-11	RES-CHIP	10K	5%	1/16W		R1143	1-216-864-91	SHORT				
R1025	1-216-846-11	RES-CHIP	120K	5%	1/16W		R1144	1-216-864-91	SHORT				
							R1150	1-218-285-11	RES-CHIP	75	5%	1/16W	
R1028	1-216-853-11	RES-CHIP	470K	5%	1/16W		R1151	1-216-809-11	RES-CHIP	100	5%	1/16W	
R1029	1-216-821-11	RES-CHIP	1K	5%	1/16W								
R1031	1-216-853-11	RES-CHIP	470K	5%	1/16W		R1152	1-216-825-11	RES-CHIP	2.2K	5%	1/16W	
R1032	1-216-829-11	RES-CHIP	4.7K	5%	1/16W		R1153	1-216-815-11	RES-CHIP	330	5%	1/16W	

TU

FD

REF.NO.	PART NO.	DESCRIPTION	VALUES			REF.NO.	PART NO.	DESCRIPTION	VALUES		
R1156	1-216-809-11	RES-CHIP	100	5%	1/16W	TUNER					
R1157	1-216-829-11	RES-CHIP	4.7K	5%	1/16W	TU1050	8-598-473-50	TUNER, FSS BTF-MA431			
R1158	1-216-831-11	RES-CHIP	6.8K	5%	1/16W	TU1070	8-598-524-10	MODULE, INTERFACE DQS-DA101F			
R1159	1-216-809-11	RES-CHIP	100	5%	1/16W	TU1090	8-598-512-00	TUNER UNIT, DIGITAL BTD-DA401			
R1160	1-216-833-11	RES-CHIP	10K	5%	1/16W	CRYSTAL					
R1161	1-216-043-91	RES-CHIP	560	5%	1/10W	X1000	1-567-890-11	VIBRATOR,	CRYSTAL		
R1162	1-216-043-91	RES-CHIP	560	5%	1/10W	X1100	1-795-241-11	VIBRATOR,	CRYSTAL		
R1163	1-216-822-11	RES-CHIP	1.2K	5%	1/16W	<div>FD</div> * A-1241-486-A FD BOARD, MOUNTED					
R1164	1-216-809-11	RES-CHIP	100	5%	1/16W						
R1165	1-216-041-00	RES-CHIP	470	5%	1/10W						
R1166	1-216-043-91	RES-CHIP	560	5%	1/10W	CAPACITOR					
R1167	1-216-821-11	RES-CHIP	1K	5%	1/16W	C1901	1-164-156-11	CERAMIC CHIP	0.1μF	25V	
R1168	1-216-864-91	SHORT				C1902	1-124-261-00	ELECT	10μF	20%	10V
R1169	1-216-864-91	SHORT				C1951	1-104-665-11	ELECT	100μF	20%	25V
R1170	1-216-809-11	RES-CHIP	100	5%	1/16W	C1952	1-164-156-11	CERAMIC CHIP	0.1μF		25V
R1172	1-216-805-11	RES-CHIP	47	5%	1/16W	C1953	1-164-156-11	CERAMIC CHIP	0.1μF		25V
R1181	1-216-815-11	RES-CHIP	330	5%	1/16W	C1954	1-104-665-11	ELECT	100μF	20%	25V
R1182	1-216-864-91	SHORT				C1955	1-104-665-11	ELECT	100μF	20%	25V
R1183	1-216-821-11	RES-CHIP	1K	5%	1/16W	CONNECTOR					
R1184	1-216-821-11	RES-CHIP	1K	5%	1/16W	* CN1901	1-766-809-11	PIN,CONNECTOR	(PC BOARD)3P		
						* CN1951	1-508-784-00	PIN,CONNECTOR	(5MM PITCH) 1P		
R1206	1-216-825-11	RES-CHIP	2.2K	5%	1/16W	DIODE					
R1207	1-216-833-11	RES-CHIP	10K	5%	1/16W	D1901	8-719-073-01	DIODE MA111-TX			
R1209	1-216-833-11	RES-CHIP	10K	5%	1/16W	D1902	8-719-073-01	DIODE MA111-TX			
R1212	1-216-833-11	RES-CHIP	10K	5%	1/16W	D1951	8-719-073-01	DIODE MA111-TX			
R1218	1-216-827-11	RES-CHIP	3.3K	5%	1/16W	IC					
R1220	1-208-795-11	METAL CHIP	3.6K	0.50%	1/10W	IC1951	8-759-513-71	IC PQ05RF21			
R1221	1-208-754-11	METAL CHIP	68	0.50%	1/10W	TRANSISTOR					
R1224	1-208-770-11	METAL CHIP	330	0.50%	1/10W	Q1901	1-801-806-11	TRANSISTOR DTC144EKA-T146			
R1225	1-216-833-11	RES-CHIP	10K	5%	1/16W	Q1902	1-801-806-11	TRANSISTOR DTC144EKA-T14			
R1226	1-216-655-11	METAL CHIP	1.5K	0.50%	1/10W	Q1903	1-801-806-11	TRANSISTOR DTC144EKA-T146			
R1229	1-216-821-11	RES-CHIP	1K	5%	1/16W	RESISTOR					
R1240	1-216-049-11	RES-CHIP	1K	5%	1/10W	R1901	1-216-833-11	RES-CHIP	10K	5%	1/16W
R1241	1-216-827-11	RES-CHIP	3.3K	5%	1/16W	R1902	1-216-833-11	RES-CHIP	10K	5%	1/16W
R1243	1-216-835-11	RES-CHIP	15K	5%	1/16W	R1951	1-216-845-11	RES-CHIP	100K	5%	1/16W
R1244	1-216-837-11	RES-CHIP	22K	5%	1/16W	VARIABLE RESISTOR					
R1280	1-216-825-11	RES-CHIP	2.2K	5%	1/16W	RV1100	1-241-761-11	RES. ADJ. CARBON	1K		
R1282	1-216-828-11	RES-CHIP	3.9K	5%	1/16W						
R1283	1-216-837-11	RES-CHIP	22K	5%	1/16W						
R1284	1-215-869-11	METAL CHIP OXIDE	1K	5%	1W						
R1292	1-260-293-11	CARBON	1.2	5%	1/2W						
R1293	1-260-305-71	CARBON	12	5%	1/2W						

REF.NO.	PART NO.	DESCRIPTION	VALUES	REF.NO.	PART NO.	DESCRIPTION	VALUES
<u>ACCESSORIES AND PACKING MATERIALS</u>							
	1-754-022-11	ANTENNA, RF REMOTE					
	3-704-046-31	BAG, PREVENTION, ESD					
	1-769-758-11	CABLE, MODULAR (WITH PLUG)					
*	4-074-881-01	CARTON, INDIVIDUAL					
	1-790-131-11	CORD SET, POWER SUPPLY					
	1-575-335-91	CORD, CONNECTION					
	1-757-043-11	CORD, CONNECTION (AV)					
	1-558-226-11	CORD, CONNECTION (COAXIAL)					
	1-782-576-11	CORD, CONNECTION (S-VIDEO)					
*	4-074-882-01	CUSHION, UNIVERSAL					
	1-790-953-11	IR BLASTER					
	4-075-309-21	MANUAL, INSTRUCTION					
<u>REMOTE COMMANDER</u>							
	1-476-463-11	REMOTE COMMANDER (RM-Y808)					
	4-081-888-01	BATTERY COVER FOR RM-Y808					

